Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

X88 HK1RBOX D8-32G

X88 HK1 RBOX D8 Android TV Stick User Manual

Model: HK1RBOX D8-32G

1. Introduction

Welcome to the user manual for your new X88 HK1 RBOX D8 Android TV Stick. This guide provides detailed instructions on how to set up, operate, and maintain your device to ensure optimal performance. The X88 HK1 RBOX D8 is a powerful smart TV dongle featuring Android 13.0, RK3528 Quad-Core 64bit processor, 4GB RAM, 32GB ROM, WiFi6, BT5.0, and support for 8K HDR10+ Ultra HD content.

2. Package Contents

Please verify that all items listed below are included in your package:

- 1 x Android TV Stick (X88 HK1 RBOX D8)
- 1 x HDMI Cable
- 1 x Remote Control
- 1 x Power Cable (DC 5V/2A)
- 1 x User Manual (this document)



Image: Contents of the X88 HK1 RBOX D8 package, including the TV stick, remote control, HDMI cable, power cable, and user manual.

3. Product Overview

3.1 Key Features

- **Android 13.0 OS:** Equipped with the latest Android 13.0 operating system for faster, more efficient, and stable performance.
- **Powerful RK3528 Chip:** Features a Quad Core Cortex-A53 processor for robust performance and an enhanced user experience.
- **Ample Memory & Storage:** Comes with 4GB DDR4 RAM and 32GB eMMC ROM, allowing smooth software operation, large media storage, and gaming. Expandable storage via external hard drive, USB, or microSD card.
- **Advanced Connectivity:** Supports 2.4GHz/5.8GHz Dual-band WiFi 6 for stable and reliable network performance, and Bluetooth 5.0 for easy connection to multimedia devices.
- **High-Resolution Output:** Supports 4K/8K H.265 ultra-high-definition content and 3D video formats, providing

a stunning visual experience. Includes USB 3.0 for high-speed data transfer.



Image: The HK1 RBOX D8 Android TV Stick with icons indicating its key features: Rockchip RK3528, Android 13.0, WiFi 6, 8K Video Decoding, HDR 10+, and BT5.0.



Image: Diagram illustrating the Rockchip RK3528 processor with details on its Quad Core Cortex-A53 CPU, Mali-450 GPU, and memory configurations (2G+16G, 4G+32G).



Image: The TV stick connected to a TV displaying an 8K video, demonstrating its 8K video decoding capabilities for higher definition and more realistic images.

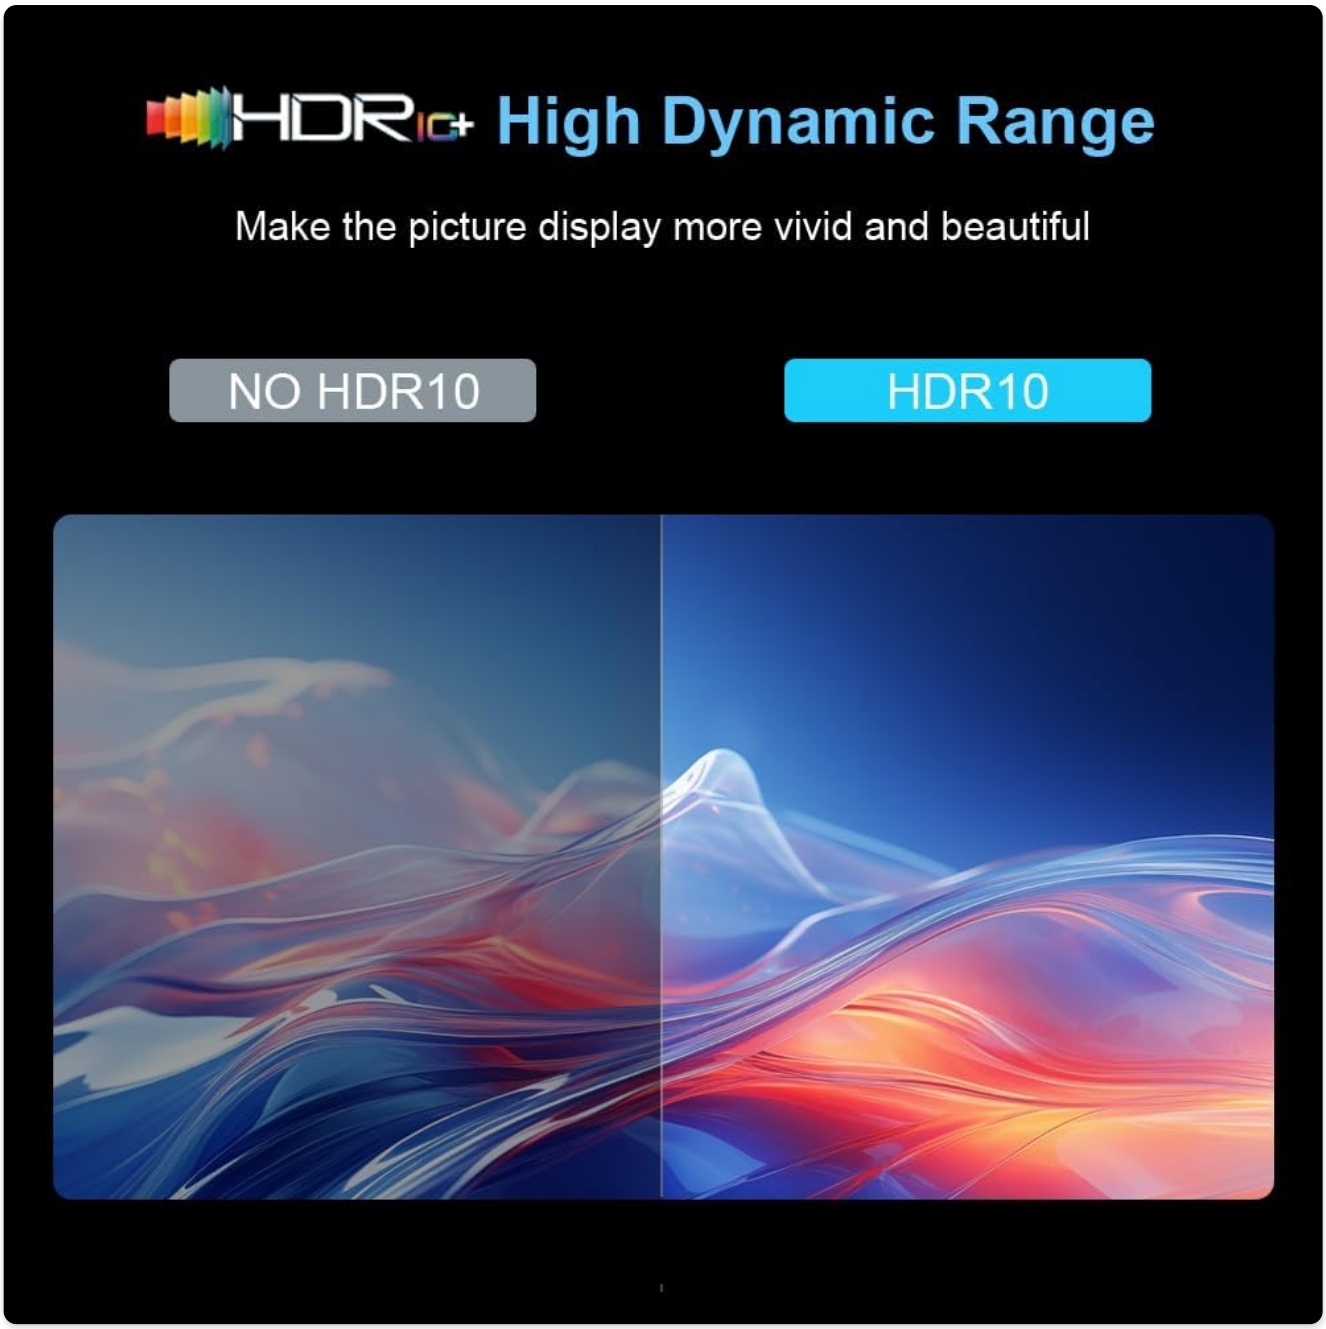


Image: A visual comparison showing the difference between a non-HDR10 image and an HDR10 image, illustrating how HDR10+ enhances picture vividness and beauty.



Image: The TV stick with icons representing WiFi 6 and Bluetooth 5.0, highlighting its next-generation wireless technology for faster speed, lower latency, and more secure networking.

3.2 Technical Specifications

Feature	Specification
CPU	RK3528 Quad-Core 64bit Cortex-A53
GPU	Penta-Core Mali-450 Up to 750Mhz+
FLASH Storage	EMMC 32GB
SDRAM	4GB DDR3
Operating System	Android 13.0
Video Decoder	8K VP9, H.265/H.264, VC-1, MPEG-1/2/4, VP6/8

Feature	Specification
Video Formats	Avi/Ts/Vob/Mkv/Mov/ISO/wmv/asf/flv/dat/mpg/mpeg
Audio Formats	MP3/WMA/AAC/WAV/OGG/DDP/HD/FLAC/APE
HDR Support	HDR10 and HLG modes
USB Ports	1 x High speed USB 3.0, 3 x USB 2.0
Card Reader	TF cards (FAT16/FAT32/NTFS)
Subtitle Support	SRT/SMI/SUB/SSA/IDX+USB
Wi-Fi	WIFI 6 Dual Band 2.4G/5.8G
Bluetooth	BT 5.0
HDMI	HDMI 2.0a for 8K@60Hz
AV Output	Support
Network Functions	Google Play, KODI 18.0, Netflix, YouTube, Facebook, Online movies, etc.
Dimensions	10.19 x 4.29 x 1.3 cm
Weight	136.08 g

4. Setup Guide

Follow these steps to set up your X88 HK1 RBOX D8 Android TV Stick:

1. **Connect to TV:** Insert the HDMI connector of the TV Stick directly into an available HDMI port on your television. If the port is difficult to access, you may use an HDMI extension cable (not included) for convenience.
2. **Connect Power:** Connect the provided power cable to the DC 5V/2A port on the TV Stick and plug the other end into a power outlet.
3. **Power On:** The device should automatically power on once connected to power. If not, use the power button on the remote control or the device itself (if available).
4. **Select HDMI Input:** On your TV, use the remote control to select the correct HDMI input source that corresponds to the port where the TV Stick is connected.
5. **Initial Setup:** Follow the on-screen instructions to complete the initial setup, which typically includes language selection, Wi-Fi network connection, and Google account login.



Image: The X88 HK1 RBOX D8 Android TV Stick connected to a television, with its remote control shown alongside, illustrating a typical setup.

5. Operating Instructions

5.1 Basic Navigation

Use the provided remote control to navigate the Android TV interface. The directional pad (D-pad) allows you to move between menu items, and the 'OK' button confirms selections. The 'Back' button returns to the previous screen, and the 'Home' button takes you to the main home screen.

5.2 Connecting to Wi-Fi

1. From the home screen, navigate to 'Settings'.
2. Select 'Network & Internet'.
3. Choose your Wi-Fi network from the list.
4. Enter the Wi-Fi password using the on-screen keyboard and select 'Connect'.

5.3 Installing Applications

The X88 HK1 RBOX D8 supports applications from the Google Play Store:

1. From the home screen, open the 'Google Play Store' app.
2. Search for your desired application using the search function or browse categories.
3. Select the app and click 'Install'.
4. Once installed, the app will appear on your home screen or in the 'Apps' section.

5.4 Using the Remote Control

The remote control is designed for intuitive navigation and control of your TV Stick. It features dedicated buttons for common functions like power, volume, navigation, and quick access to popular streaming services.



Image: A hand holding the Bluetooth remote control, pointing towards a TV screen displaying the YouTube interface, demonstrating voice control functionality.

6. Multi-screen Interaction

The X88 HK1 RBOX D8 supports various multi-screen interaction protocols, allowing you to cast content from your mobile devices to your TV:

- **Airplay:** For Apple devices, allowing you to stream audio and video.
- **DLNA:** For sharing media content across compatible devices on a local network.
- **Miracast:** For mirroring your Android device's screen directly to the TV.

To use these features, ensure your mobile device and the TV Stick are connected to the same Wi-Fi network. Then, activate the casting/mirroring function on your mobile device and select the TV Stick as the target device.

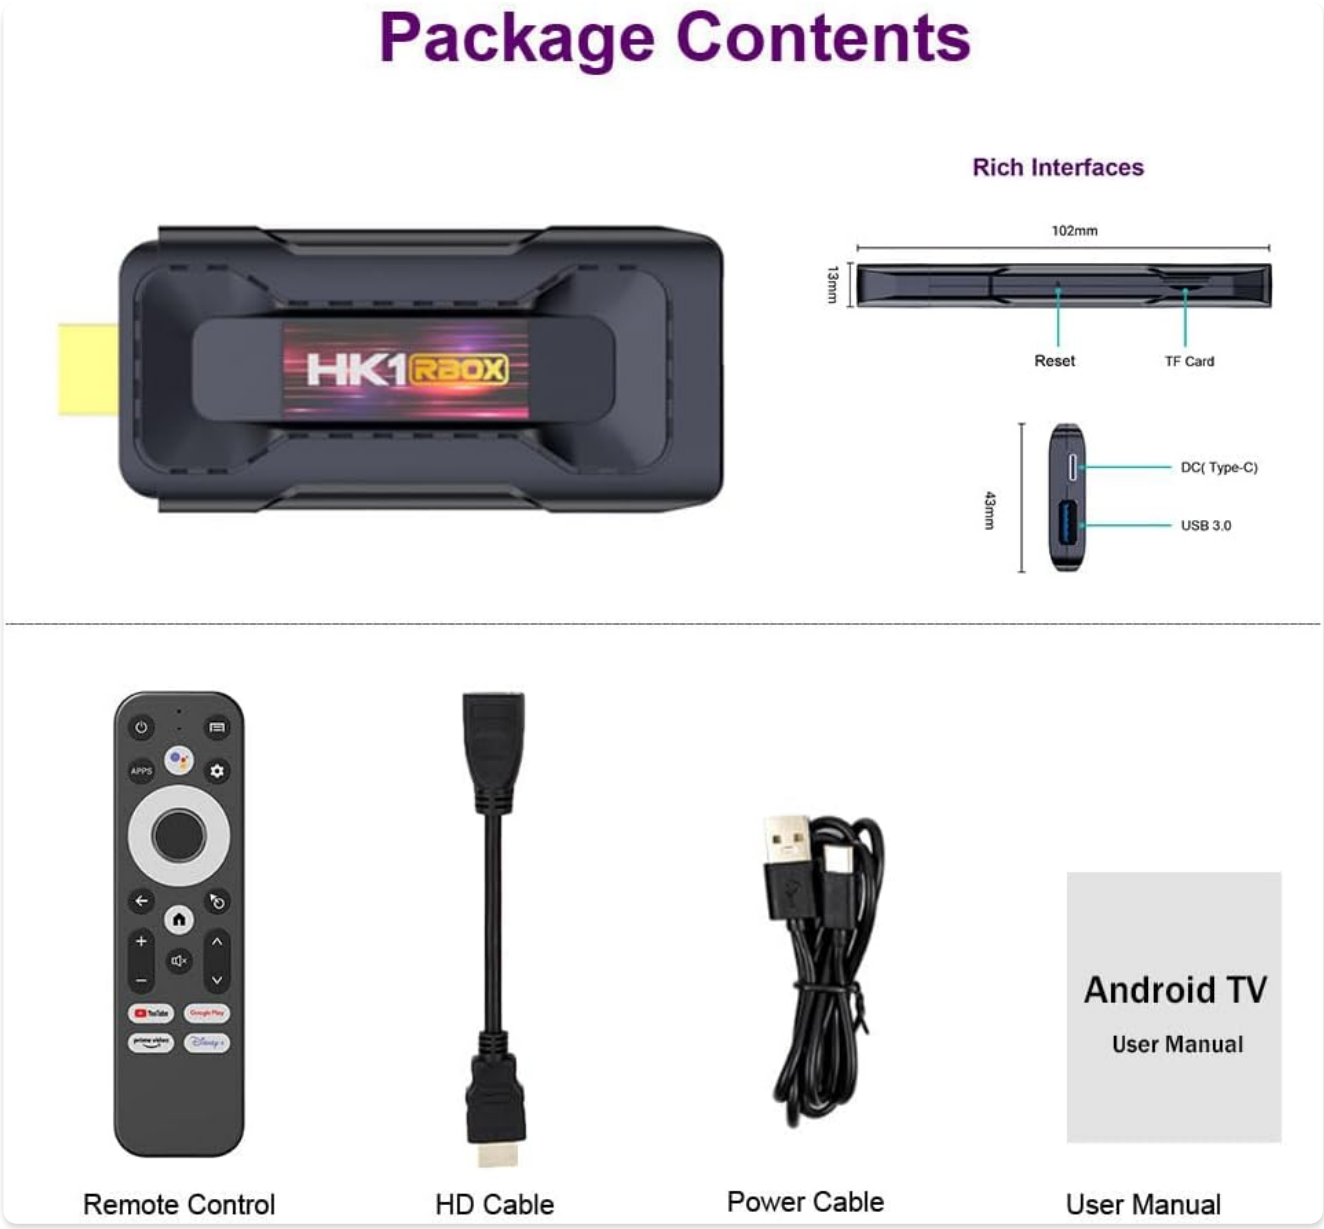


Image: A smartphone displaying a landscape image, with the TV stick and a TV screen showing the same image, illustrating Airplay, DLNA, and Miracast capabilities for sharing content.

7. Maintenance

To ensure the longevity and optimal performance of your X88 HK1 RBOX D8 Android TV Stick, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not cover ventilation openings.
- **Software Updates:** Periodically check for system updates in the 'Settings' menu to ensure you have the latest features and security patches.
- **Power Off:** When not in use for extended periods, it is recommended to unplug the device from the power outlet.

8. Troubleshooting

If you encounter issues with your X88 HK1 RBOX D8, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No Power / Device Not Turning On	• Ensure the power cable is securely connected to the device and the power outlet. • Verify the power adapter is functioning correctly. • Try a different power outlet.
No Signal on TV Screen	• Check if the HDMI cable is properly connected to both the TV Stick and the TV. • Ensure your TV is set to the correct HDMI input source. • Try a different HDMI port on your TV. • Restart the TV Stick by unplugging and re-plugging the power cable.
Wi-Fi Connection Issues	• Ensure your Wi-Fi router is on and functioning. • Check if the Wi-Fi password entered is correct. • Move the TV Stick closer to the Wi-Fi router to improve signal strength. • Restart your Wi-Fi router and the TV Stick.
Apps Crashing or Freezing	• Close and reopen the app. • Clear the app's cache and data in 'Settings' > 'Apps'. • Ensure the app is updated to its latest version. • Restart the TV Stick. • If the issue persists, consider uninstalling and reinstalling the app.
Remote Control Not Responding	• Check and replace the batteries in the remote control. • Ensure there are no obstructions between the remote and the TV Stick. • Re-pair the Bluetooth remote control if it's a Bluetooth remote (refer to device settings for pairing instructions).
Device Continuously Locks Up / Stalls	• Unplug the device from power and plug it back in to restart. • Ensure the device has sufficient ventilation and is not overheating. • Check for and install any available system updates. • If the issue persists, a factory reset might be necessary (Note: This will erase all data and settings).

9. Warranty and Support

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product packaging or contact the seller/manufacturer directly. Keep your purchase receipt as proof of purchase for warranty claims.

© 2024 X88. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D2Z1MRP8

More documents and user manuals: **https://manuals.plus/**