AILKIN EBS-609

AILKIN EBS-609 Portable Bluetooth Speaker User Manual

Model: EBS-609

1. Introduction

Thank you for choosing the AILKIN EBS-609 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully to ensure optimal performance and longevity of your device.

2. Package Contents

Verify that all items are present in your package:

- 1 x AILKIN EBS-609 Wireless Portable Speaker (Black)
- 1 x USB-C Charging Cable (Black)
- 1 x User Manual

3. Product Overview

Familiarize yourself with the speaker's components and controls.



Image 3.1: Top view of the AILKIN EBS-609 speaker, highlighting the control buttons for power, play/pause, volume, and light modes.

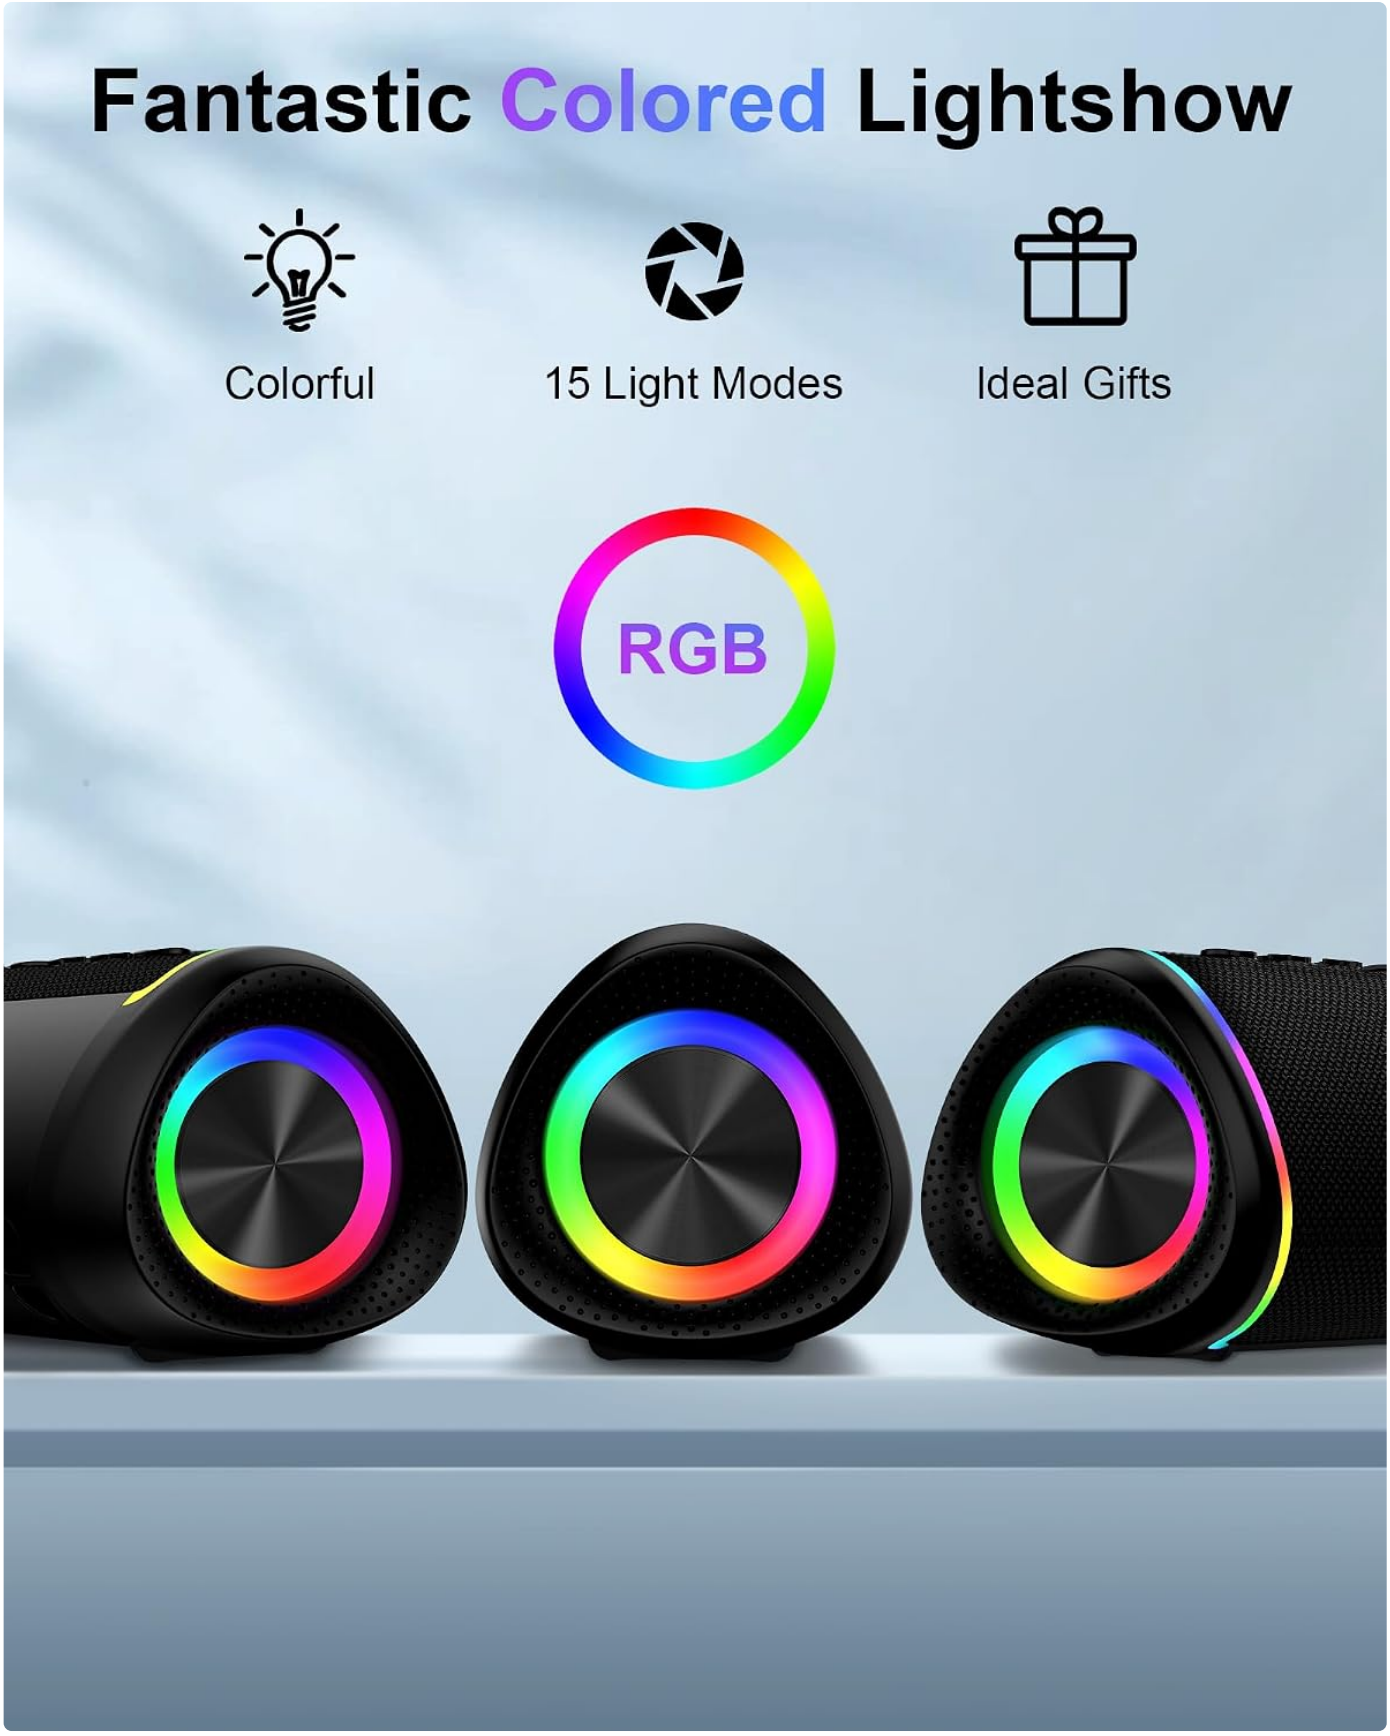


Image 3.2: Side view of the AILKIN EBS-609 speaker, showing the protective cover for the charging port, AUX-in port, and TF card slot.

Controls and Indicators:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Play/Pause Button:** Press to play or pause music. Double-tap to redial the last number (use with caution).
- **Volume Up (+):** Press to increase volume. Press and hold to skip to the next track.
- **Volume Down (-):** Press to decrease volume. Press and hold to go to the previous track.

- **Light Mode Button:** Press to cycle through 15 different RGB light modes.
- **Microphone:** Built-in for hands-free calls.
- **LED Indicator:** Shows power status, charging status, and Bluetooth pairing status.

Ports:

- **USB-C Charging Port:** For charging the speaker.
- **AUX-in Port:** For wired audio connection using a 3.5mm audio cable (not included).
- **TF Card Slot:** For playing music directly from a MicroSD/TF card.

4. Setup

4.1 Charging the Speaker

1. Connect the provided USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a USB power adapter (5V/1A recommended) or a computer's USB port.
3. The LED indicator will show charging status. A full charge takes approximately 3 hours.
4. Disconnect the cable once fully charged.

4.2 Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Press and hold the Power Button to turn on the speaker. The LED indicator will flash, indicating it is in pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "AILKIN EBS-609" from the list of devices.
5. Once paired, the LED indicator will stop flashing and remain solid. You will hear an audible confirmation.

The speaker features Bluetooth 5.3 for a stable connection up to 100 feet (30 meters).



Image 4.1: The AILKIN EBS-609 speaker demonstrating multi-connectivity with various devices.

4.3 True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two AILKIN EBS-609 speakers together:

1. Ensure both speakers are turned off and fully charged.
2. Turn on both speakers. They will enter Bluetooth pairing mode.
3. On one of the speakers (this will be the primary speaker), press and hold the Play/Pause button for 2-3 seconds

until you hear a confirmation tone. The speakers will attempt to connect to each other.

4. Once successfully paired, the LED indicator on the primary speaker will flash slowly, and the secondary speaker's LED will remain solid.
5. Now, connect your device to the primary speaker via Bluetooth as described in Section 4.2.



Image 4.2: Two AILKIN EBS-609 speakers paired for True Wireless Stereo (TWS) sound.

5. Operating Instructions

5.1 Music Playback

- **Play/Pause:** Press the Play/Pause button.
- **Volume Control:** Press the '+' button to increase volume, '-' button to decrease volume.
- **Next Track:** Press and hold the '+' button.
- **Previous Track:** Press and hold the '-' button.

5.2 Hands-Free Calling

When connected via Bluetooth, the speaker's built-in microphone allows for hands-free calls.

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button.
- **Redial Last Number:** Double-tap the Play/Pause button (note: this feature may vary by device and can be sensitive).



Image 5.1: The AILKIN EBS-609 speaker facilitating a hands-free call.

5.3 LED Light Modes

The speaker features an RGB lighting system with 15 different light modes.

- Press the Light Mode button to cycle through the available light patterns and colors.
- Press and hold the Light Mode button to turn the lights off. Press again to turn them back on to the last selected mode.

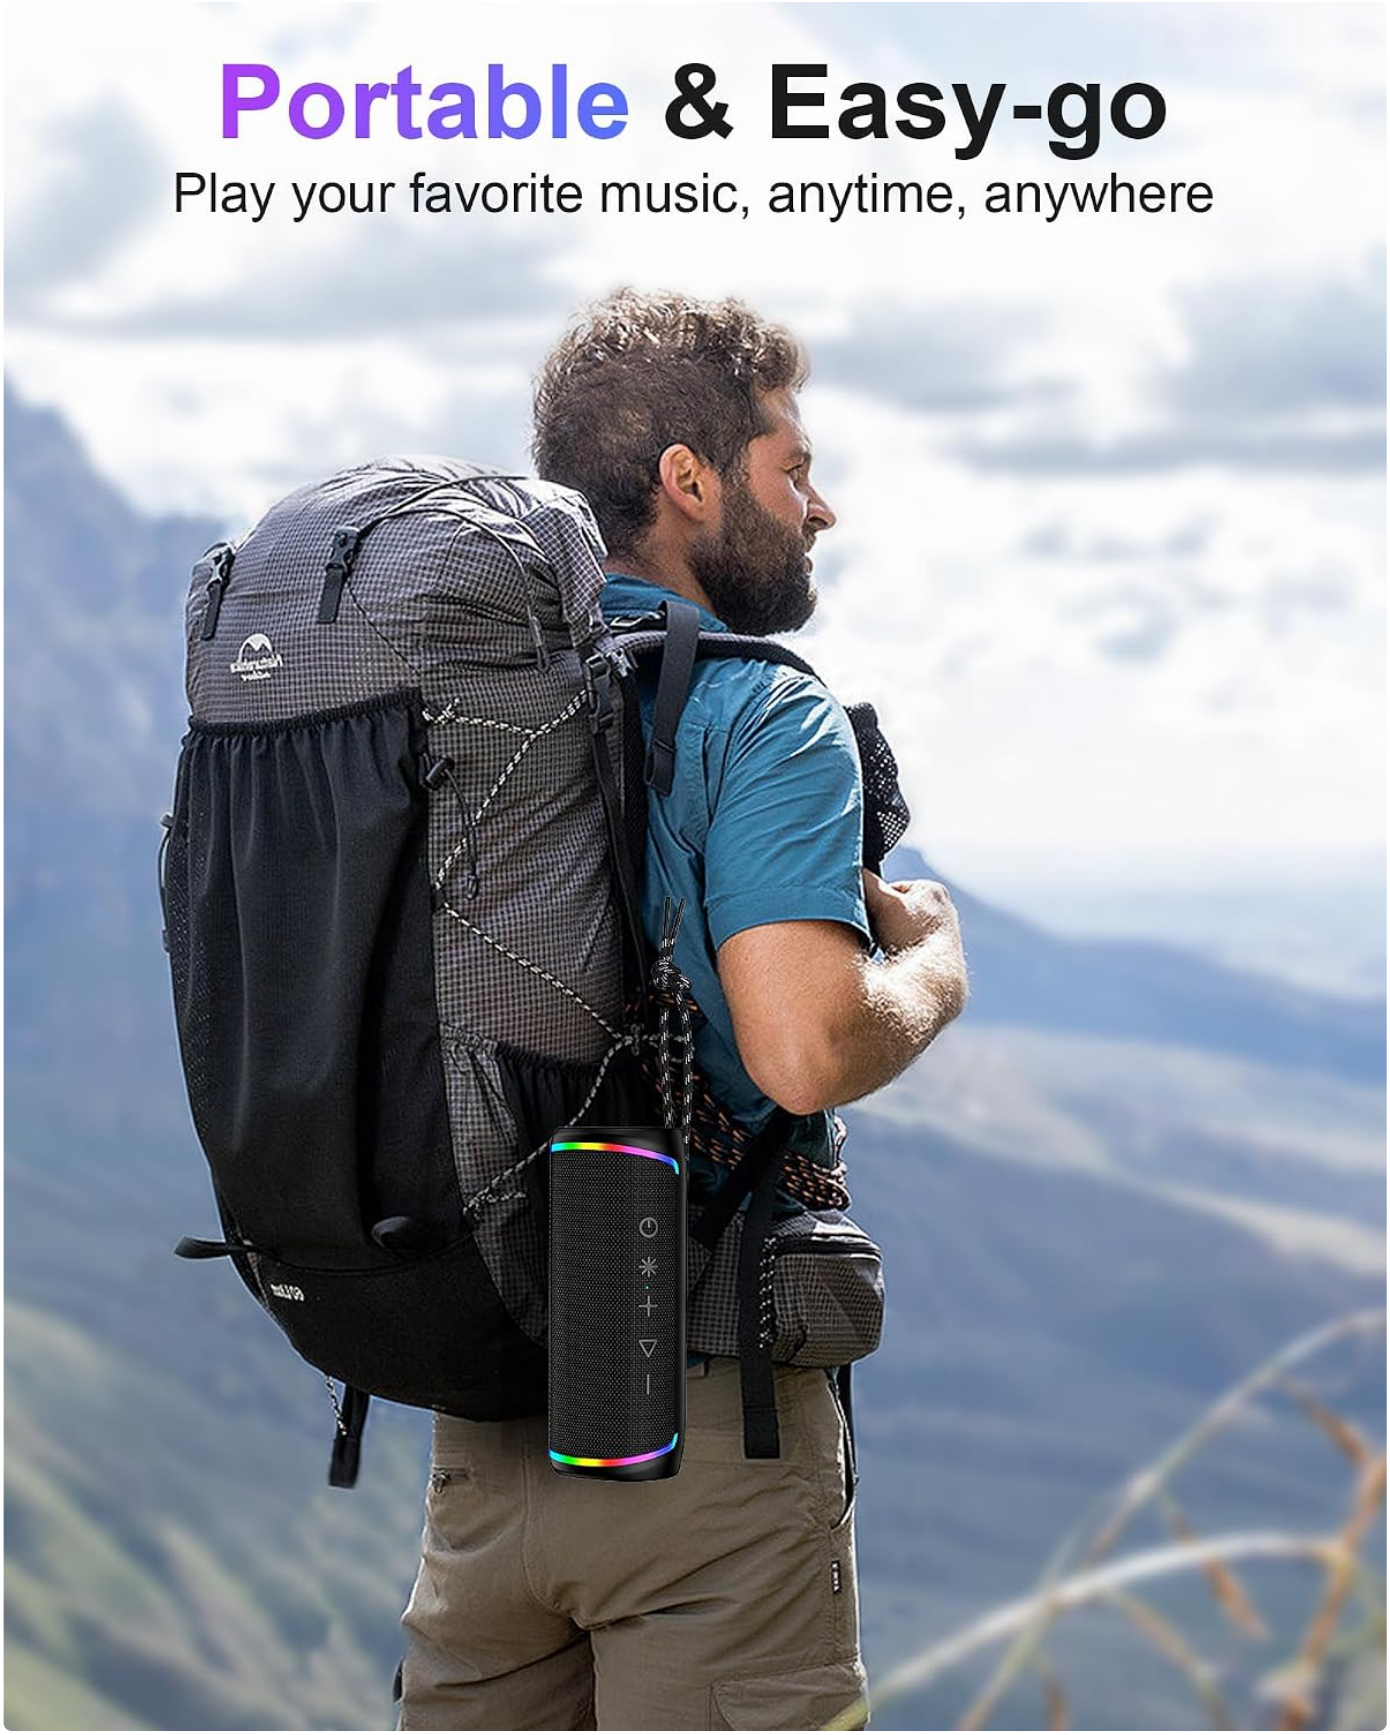


Image 5.2: The AILKIN EBS-609 speaker showcasing its dynamic LED light display.

5.4 AUX-in Mode

To use the speaker with a non-Bluetooth device:

1. Connect a 3.5mm audio cable (not included) from your device's audio output to the speaker's AUX-in port.
2. The speaker will automatically switch to AUX-in mode.
3. Control playback and volume from your connected device.

5.5 TF Card Mode

To play music directly from a TF (MicroSD) card:

1. Insert a TF card with MP3 audio files into the TF card slot.
2. The speaker will automatically detect the card and begin playing music.
3. Use the speaker's controls for playback and volume.

6. Maintenance

6.1 Cleaning

- Turn off the speaker and disconnect all cables before cleaning.
- Use a soft, dry cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

6.2 Water Resistance (IPX5)

The AILKIN EBS-609 speaker has an IPX5 waterproof rating, meaning it is protected against low-pressure water jets from any direction. This makes it suitable for use in environments where it might encounter splashes or light rain.



Image 6.1: The AILKIN EBS-609 speaker enduring water splashes, highlighting its IPX5 water resistance.

Important:

- IPX5 rating does not mean the speaker can be submerged in water. Avoid full submersion.
- Ensure the port cover is securely closed to maintain water resistance.
- If the speaker gets wet, wipe it dry before charging or opening the port cover.

6.3 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% every few months to prolong its lifespan.

7. Troubleshooting

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery	Charge the speaker fully.
Cannot pair via Bluetooth	Speaker not in pairing mode; Bluetooth disabled on device; too far from device	Ensure speaker is on and flashing LED. Enable Bluetooth on your device. Move speaker closer to device (within 100 ft). Forget previous pairings and try again.
No sound	Volume too low; incorrect input mode; device not playing	Increase speaker and device volume. Check if AUX or TF card mode is active. Ensure music is playing on your connected device.
Poor sound quality / No bass	Low battery; poor connection; audio source quality	Charge the speaker. Ensure device is close to speaker. Try a different audio source or file.
Microphone not working well	Distance from speaker; environmental noise	Speak closer to the speaker. Reduce background noise.
Short battery life	High volume; continuous LED use; aging battery	Reduce volume. Turn off LED lights when not needed. Battery performance naturally degrades over time.

If the problem persists, please contact customer support.

8. Specifications

Feature	Specification
Model Name	EBS-609
Brand	AILKIN
Connectivity Technology	Bluetooth 5.3, AUX, TF Card
Speaker Maximum Output Power	16 Watts
Battery Capacity	1800 mAh Lithium Ion
Playback Time	Up to 10 hours (varies with volume and content)
Charging Time	3 Hours
Waterproof Rating	IPX5
Product Dimensions (L x W x H)	7.48" x 3.15" x 3.15" (190mm x 80mm x 80mm)

Feature	Specification
Item Weight	1.32 pounds (0.6 kg)
Bluetooth Range	Up to 100 feet (30 meters)
Signal-to-Noise Ratio	85 dB
Subwoofer Diameter	52 Millimeters
Control Method	Touch Buttons
Special Features	Built-in Microphone, LED Light, Portable, Stereo Pairing (TWS)

9. Warranty and Support

9.1 Limited Warranty

This AILKIN EBS-609 Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package or contact AILKIN customer service for details regarding warranty coverage and terms.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact AILKIN customer service. We offer 24-hour customer service to assist you.

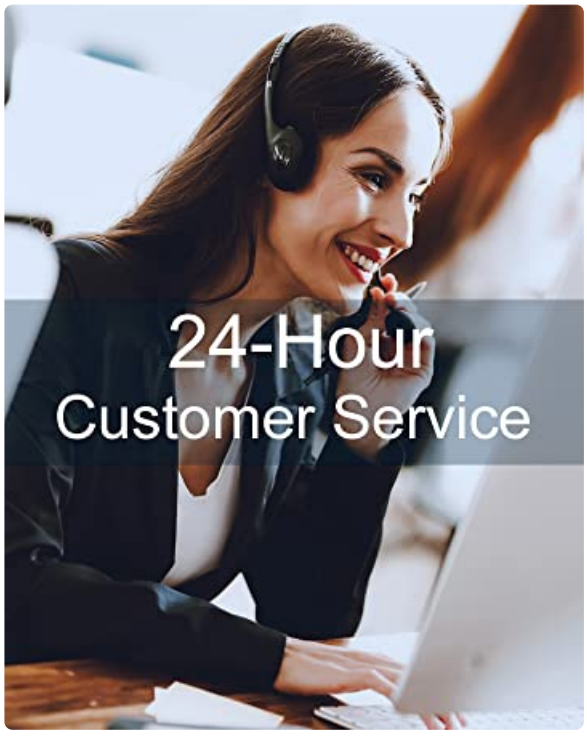


Image 9.1: AILKIN provides 24-hour customer service for support.

You can find contact information on the official AILKIN website or through your purchase platform.

© 2025 AILKIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question