Zilan 1087

Zilan Quiet Tower Fan with Cooling

Model: 1087 | Brand: Zilan

1. Important Safety Instructions

Please read all instructions carefully before using the appliance and retain them for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Do not block air openings. Ensure proper ventilation.
- Use the appliance only for its intended household use as described in this manual.

2. Product Overview

The Zilan Tower Fan is designed to provide efficient and quiet cooling for your home or office. It features multiple speed settings, operating modes, an oscillation function, and a convenient timer, all controllable via a touch panel or remote control.





Image: The Zilan Tower Fan, highlighting its sleek design and the included remote control. The visual suggests effective air cooling.

3. Setup

3.1 Unpacking

1. Carefully remove the tower fan and all accessories from the packaging.
2. Check for any damage during transit. If damaged, do not use and contact customer support.
3. Ensure all components are present: main fan unit, remote control, and user manual.

3.2 Placement

Place the tower fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow, at least 30 cm (12 inches) from walls or furniture. Avoid placing it near curtains or other objects that could obstruct the air intake or outlet.

3.3 Power Connection

Insert the power plug into a standard electrical outlet. Ensure the power cord is not pinched or placed under heavy objects.

4. Operating Instructions

4.1 Control Panel and Remote Control

The Zilan Tower Fan can be operated using the touch-sensitive control panel on the unit or the included remote control. The LED display provides real-time information on settings and room temperature.



Image: Detailed view of the fan's LED display and touch controls, illustrating features like 12 speed levels, 3 modes, 15-hour timer, oscillation, and remote control functionality.



Image: The Zilan Tower Fan with its remote control, emphasizing the dual control options: touch panel on the unit and the convenient remote.

4.2 Power On/Off

- Press the **Power button** (*symbol: circle with vertical line*) on the control panel or remote control to turn the fan on or off.

4.3 Adjusting Fan Speed

The fan offers 12 adjustable speed levels for customized airflow intensity.



Image: The Zilan Tower Fan positioned in a living space, highlighting its 12 speed levels and 3 operating modes for versatile cooling.

- Press the **Speed button** (*often indicated by fan blades or +/-*) to cycle through the 12 speed settings.

4.4 Selecting Operating Modes

Choose from three distinct operating modes:

- **Normal Mode:** Provides a constant airflow at the selected speed.
- **Nature Mode:** Simulates a natural breeze by varying the fan speed.
- **Sleep Mode:** Operates at a lower, quieter speed with reduced display brightness for undisturbed sleep.
- Press the **Mode button** (*often indicated by a 'M' or mode icon*) to switch between modes.

4.5 Oscillation Function

The oscillation function distributes airflow across a wider area.

- Press the **Oscillation button** (*symbol: two arrows forming an arc*) to activate or deactivate the oscillating movement. The fan will oscillate up to 45 degrees.

4.6 Timer Function

Set the fan to automatically turn off after a specified period, up to 15 hours.



Image: The Zilan Tower Fan in a living room setting, highlighting its 15-hour timer capability and efficient 50W DC motor.

- Press the **Timer button** (*symbol: clock*) repeatedly to set the desired operating duration in 1-hour increments. The display will show the set time.

4.7 Display Information

The LED display shows the current room temperature, selected speed level, active mode, and remaining timer duration. The display automatically turns off after 180 seconds of inactivity to save energy and reduce light disturbance, especially in Sleep Mode.

5. Maintenance

5.1 Cleaning

Regular cleaning helps maintain the fan's performance and extends its lifespan.

1. Always unplug the fan from the power outlet before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and outlet grilles.
4. Ensure no water or liquids enter the internal components of the fan.
5. Allow the fan to dry completely before plugging it back in.

5.2 Storage

When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

6. Troubleshooting

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Check if the power plug is securely inserted into a working outlet. Press the Power button on the unit or remote.
Weak airflow.	Air intake/outlet blocked. Fan speed too low.	Ensure grilles are clear of obstructions. Clean dust from grilles. Increase the fan speed setting.
Fan is noisy.	Fan not on a level surface. Dust accumulation.	Place the fan on a stable, flat surface. Clean the fan grilles and interior if accessible.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries (ensure correct polarity). Remove any objects blocking the signal path.

7. Technical Specifications

Detailed specifications for the Zilan Tower Fan.

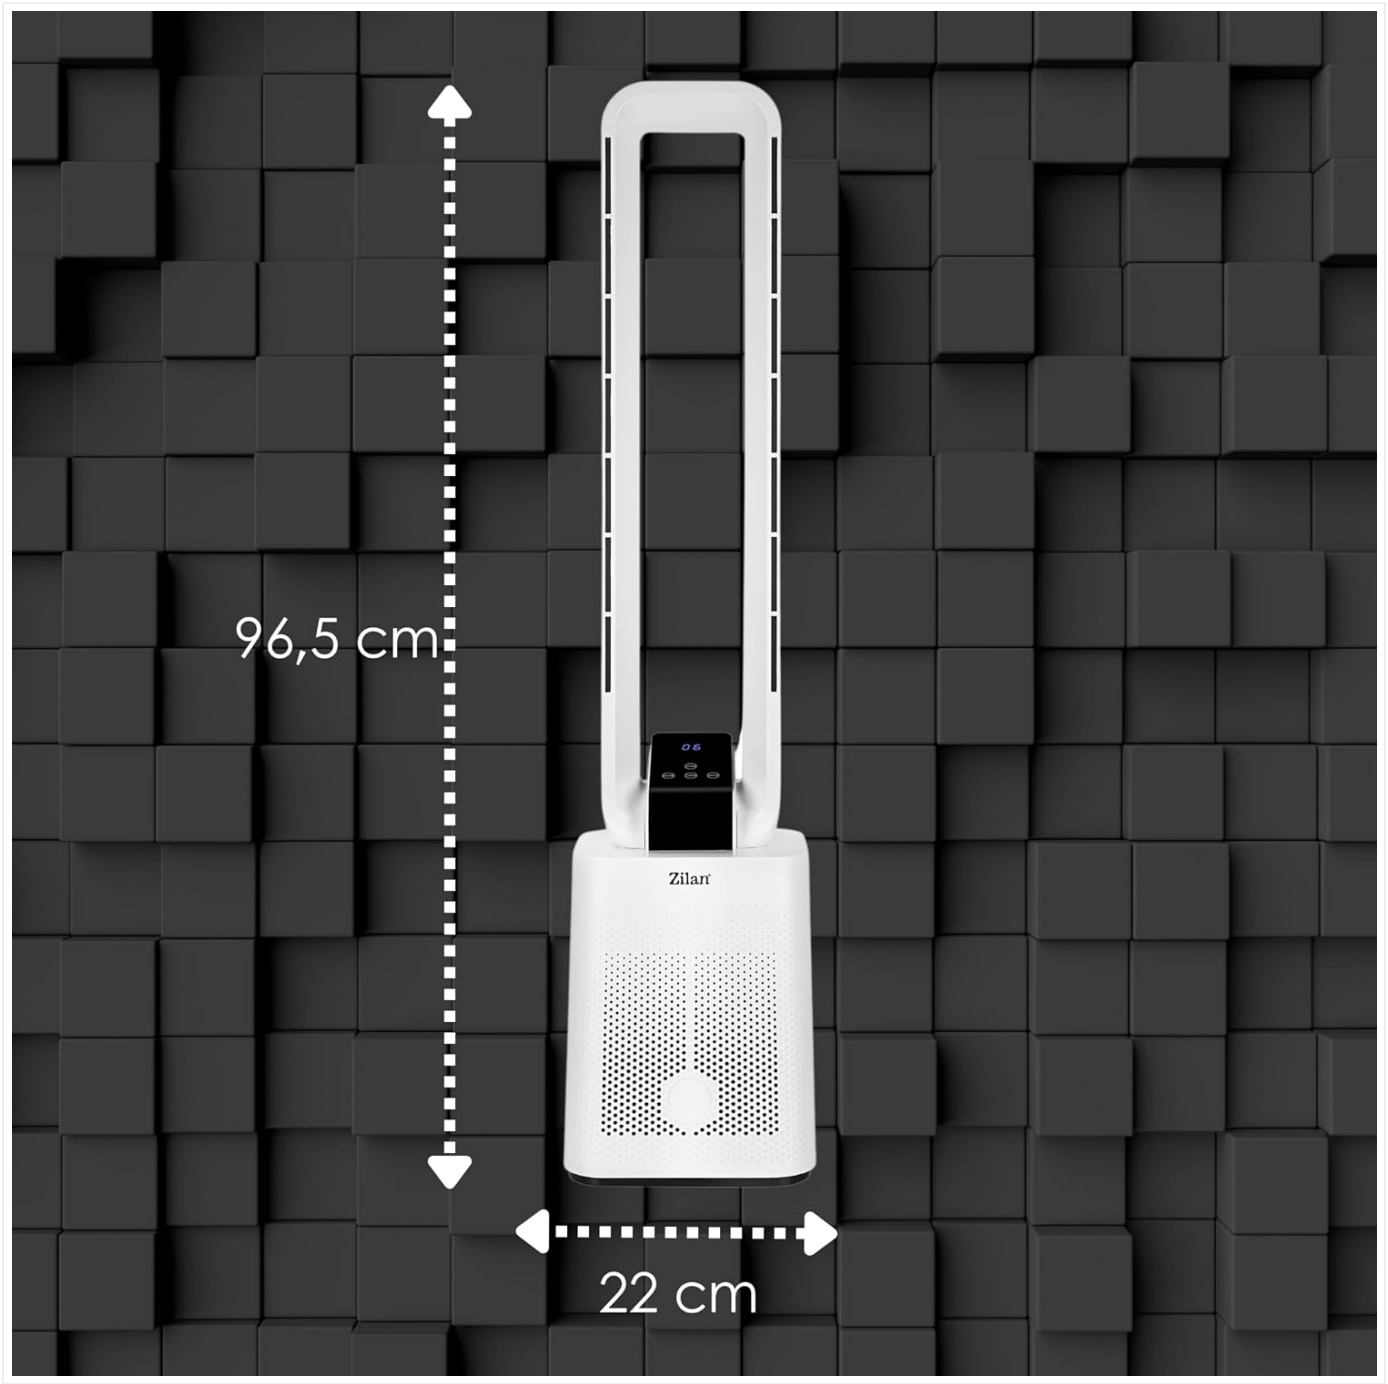


Image: Visual representation of the Zilan Tower Fan's dimensions, showing a height of approximately 96.5 cm and a width of 22 cm.

Feature	Detail
Brand	Zilan
Model Number	1087
Power Consumption	50 W DC (equivalent to 80 W AC)
Voltage	230 Volts
Number of Speeds	12
Operating Modes	Normal, Nature, Sleep
Timer Function	Up to 15 hours

Feature	Detail
Oscillation Angle	45 degrees
Control Type	Touch Screen, Remote Control
Display	LED (with 180s auto display shut-off)
Material	Plastic
Item Weight	3 kg
Dimensions (H x W x D)	Approx. 96.5 cm x 22.5 cm x 18.5 cm
Power Cord Length	Approx. 150 cm

8. Warranty and Support

For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Zilan website. Contact details for customer service are typically provided on the manufacturer's website or in your purchase documentation.

© 2024 Zilan. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question