Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GODOX LC1000R

Godox LC1000R RGB LED Light Wand User Manual

Model: LC1000R

Introduction

The Godox LC1000R RGB LED Light Wand is a versatile and powerful lighting tool designed for content creators, filmmakers, and photographers. This 22-inch handheld light stick offers full RGB color control, an extended color temperature range, and various special effects, making it suitable for a wide array of creative lighting scenarios. Its intuitive controls and app compatibility provide flexible operation for both studio and on-location use.



Image: The Godox LC1000R RGB LED Light Wand, a 22-inch white light stick.

What's in the Box



Image: All components included in the Godox LC1000R package, including the light wand, barndoors, power adapter, and carry bag.

Please check the package contents upon unboxing to ensure all items are present and in good condition:

- Godox LC1000R RGB LED Light Stick (22")
- Barndoors (detachable 2-leaf)
- Power Adapter
- Carry Bag

Setup

1. Charging the Battery

The LC1000R features an integrated rechargeable battery. Before first use, it is recommended to fully charge the device.

1. Connect the included power adapter to the charging port on the light wand.
2. Plug the power adapter into a suitable electrical outlet.
3. The charging indicator on the device will show the charging status. A full charge typically takes a few hours.
4. Alternatively, the light can be powered or charged via its USB-C port.

2. Attaching the Barndoors

The detachable 2-leaf barndoors can be attached to control the light beam angle and prevent light spill.



Image: The Godox LC1000R light wand with its detachable barndoors fully extended.

1. Align the barndoors with the mounting points on the light wand.
2. Securely attach the barndoors, ensuring they are firmly in place.
3. Adjust the leaves of the barndoors to direct the light as needed.

Operating Instructions



Image: Close-up view of the Godox LC1000R's control panel and display screen, showing various settings.

1. Power On/Off

Press and hold the power button located on the handle to turn the light wand on or off.

2. Mode Selection

The LC1000R offers various operating modes:

- **CCT Mode:** Adjust color temperature from 2500K to 8500K. Use the control dial to change the temperature and brightness. Green-to-magenta shift is also adjustable by +/- 50.
- **RGB Mode:** Access full RGB colors with 360° hue, saturation, and intensity adjustments. This allows for precise color tuning.
- **FX Mode:** Select from 15 built-in special effects to simulate various lighting scenarios.

Navigate between modes using the dedicated mode button or the intuitive controls on the device's screen.

3. Brightness Adjustment

Brightness can be continuously adjusted from 0% to 100% in all modes using the control dial.

4. Special Effects (FX Mode)

The LC1000R includes 15 distinct lighting effects:

- RGB Cycle
- Party
- Flash
- Lightning
- Cloudy
- Broken Bulb
- Television
- Candle
- Fire
- Fireworks
- Explosion
- Welding
- Police Car
- SOS

Select the desired effect from the FX menu on the device.

5. Music Mode

The built-in microphone allows the LC1000R to synchronize its light output with ambient music. Activate Music Mode to have the light's brightness and color change in rhythm with the audio.

6. App Control (Godox Light App)

For enhanced control, download the Godox Light app from your smartphone's app store. The app connects via Bluetooth and provides full control over HSI, CCT, and FX functions from up to 98 feet away.

1. Ensure Bluetooth is enabled on your smartphone.
2. Open the Godox Light app and search for available devices.
3. Select the LC1000R from the list to establish a connection.
4. Control all light parameters directly from the app interface.



Image: The Godox LC1000R light wand being used to illuminate a subject for portrait photography, demonstrating its practical application.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your Godox LC1000R.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the light wand. For stubborn marks, a slightly damp cloth with mild detergent can be used, followed by a dry wipe. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the light wand in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** If storing for extended periods, charge the battery to approximately 50% every three months to maintain battery health.
- **Ventilation:** Ensure the ventilation holes are clear of dust and debris to allow for proper heat dissipation. The efficient fans are designed to minimize noise while maintaining performance.

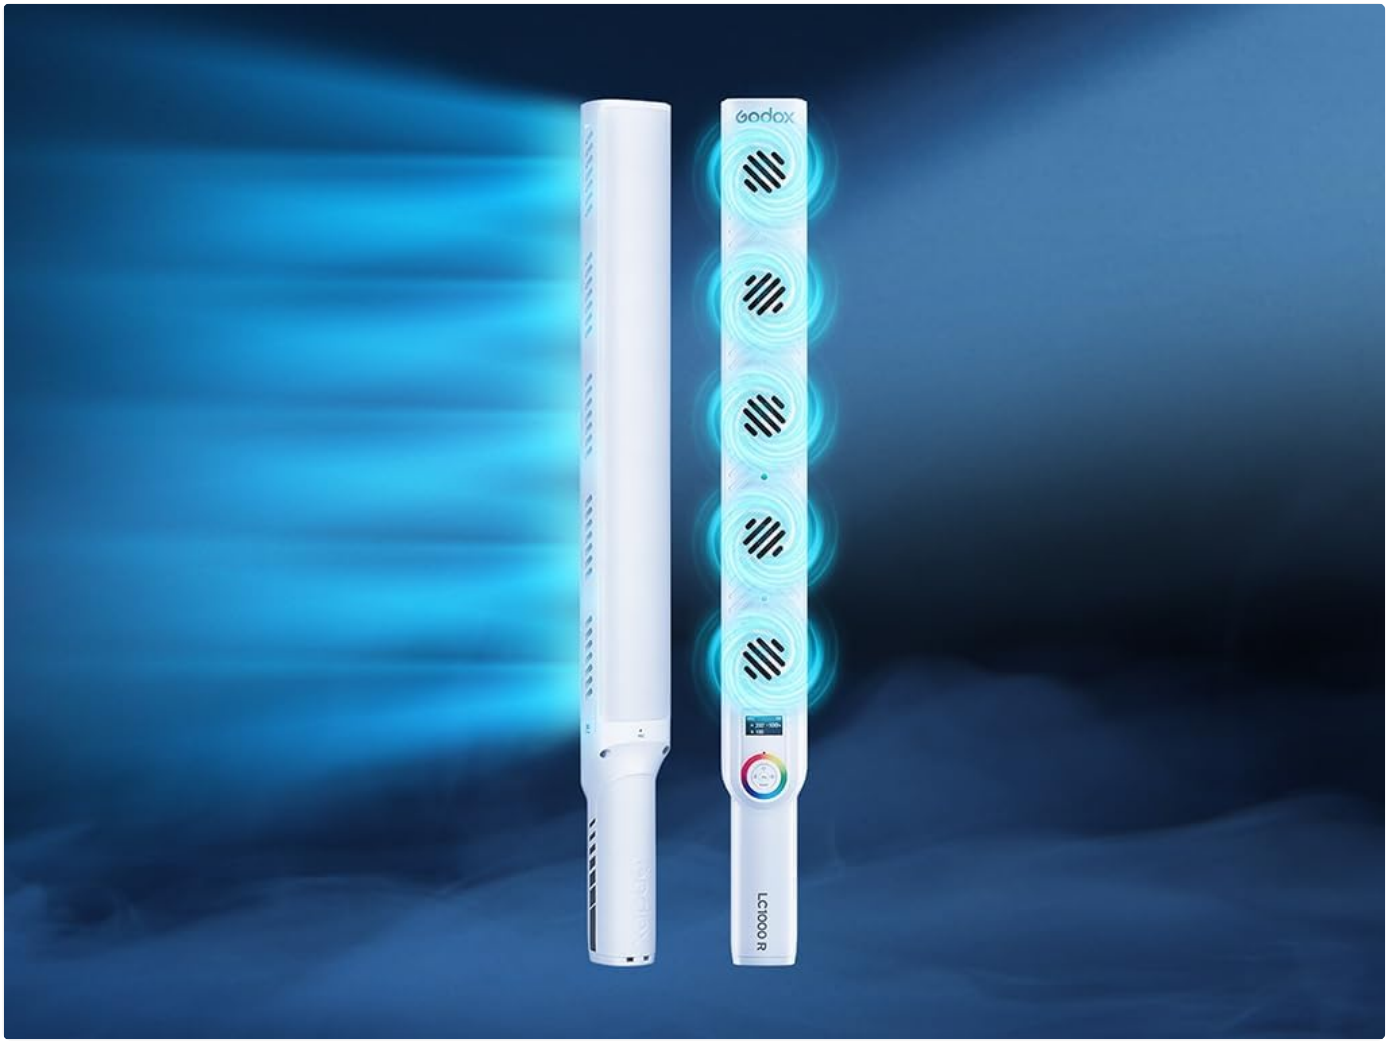


Image: An illustrative diagram showing the internal cooling system and airflow within the Godox LC1000R light wand, highlighting its efficient heat management.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Charge the light wand using the included power adapter or USB-C cable.
Light output is dim or inconsistent.	Low battery level; incorrect settings.	Ensure the battery is fully charged. Check brightness settings and adjust as needed.
Cannot connect to Godox Light app.	Bluetooth is off; app not updated; interference.	Ensure Bluetooth is enabled on your phone. Restart the app and the light wand. Try connecting in a different location to avoid interference.
Light overheats.	Blocked ventilation; prolonged use at maximum power.	Ensure ventilation holes are clear. Reduce brightness or allow the unit to cool down.

Specifications

Feature	Detail

Feature	Detail
Model	LC1000R
Power Output	100W (P mode)
Color Temperature Range	2500K - 8500K
RGB Color Control	360° Hue, Saturation, Intensity (HSI)
CRI/TLCI	96
Brightness Adjustment	0% - 100%
FX Effects	15 types (RGB Cycle, Party, Flash, Lightning, Cloudy, Broken Bulb, Television, Candle, Fire, Fireworks, Explosion, Welding, Police Car, SOS)
Control Methods	On-board controls, Godox Light App (Bluetooth)
Battery Type	Integrated Lithium Ion (1 required, included)
Charging Options	DC Adapter, USB-C
Dimensions	21.97 x 2.2 x 1.89 inches
Weight	2.2 pounds
Water Resistance Level	Water Resistant

Warranty and Support

For warranty information and technical support, please refer to the official Godox website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
Manufacturer: Godox
Brand: GODOX
Contact: Visit the GODOX Store on Amazon for more information and support resources.

© 2024 GODOX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D3FK9XGT

More documents and user manuals: **https://manuals.plus/**