Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Noma CTI1513697

Noma Quick Clip C9 LED Holiday Outdoor Christmas Lights

Model: CTI1513697
Brand: Noma

Introduction

The Noma Quick Clip C9 LED Holiday Outdoor Christmas Lights are designed for effortless and secure holiday decoration. Featuring durable, energy-efficient LED bulbs and an innovative Quick-Clip design, these lights simplify installation on various outdoor surfaces. This manual provides essential information for safe setup, operation, maintenance, and troubleshooting to ensure a bright and festive holiday season.

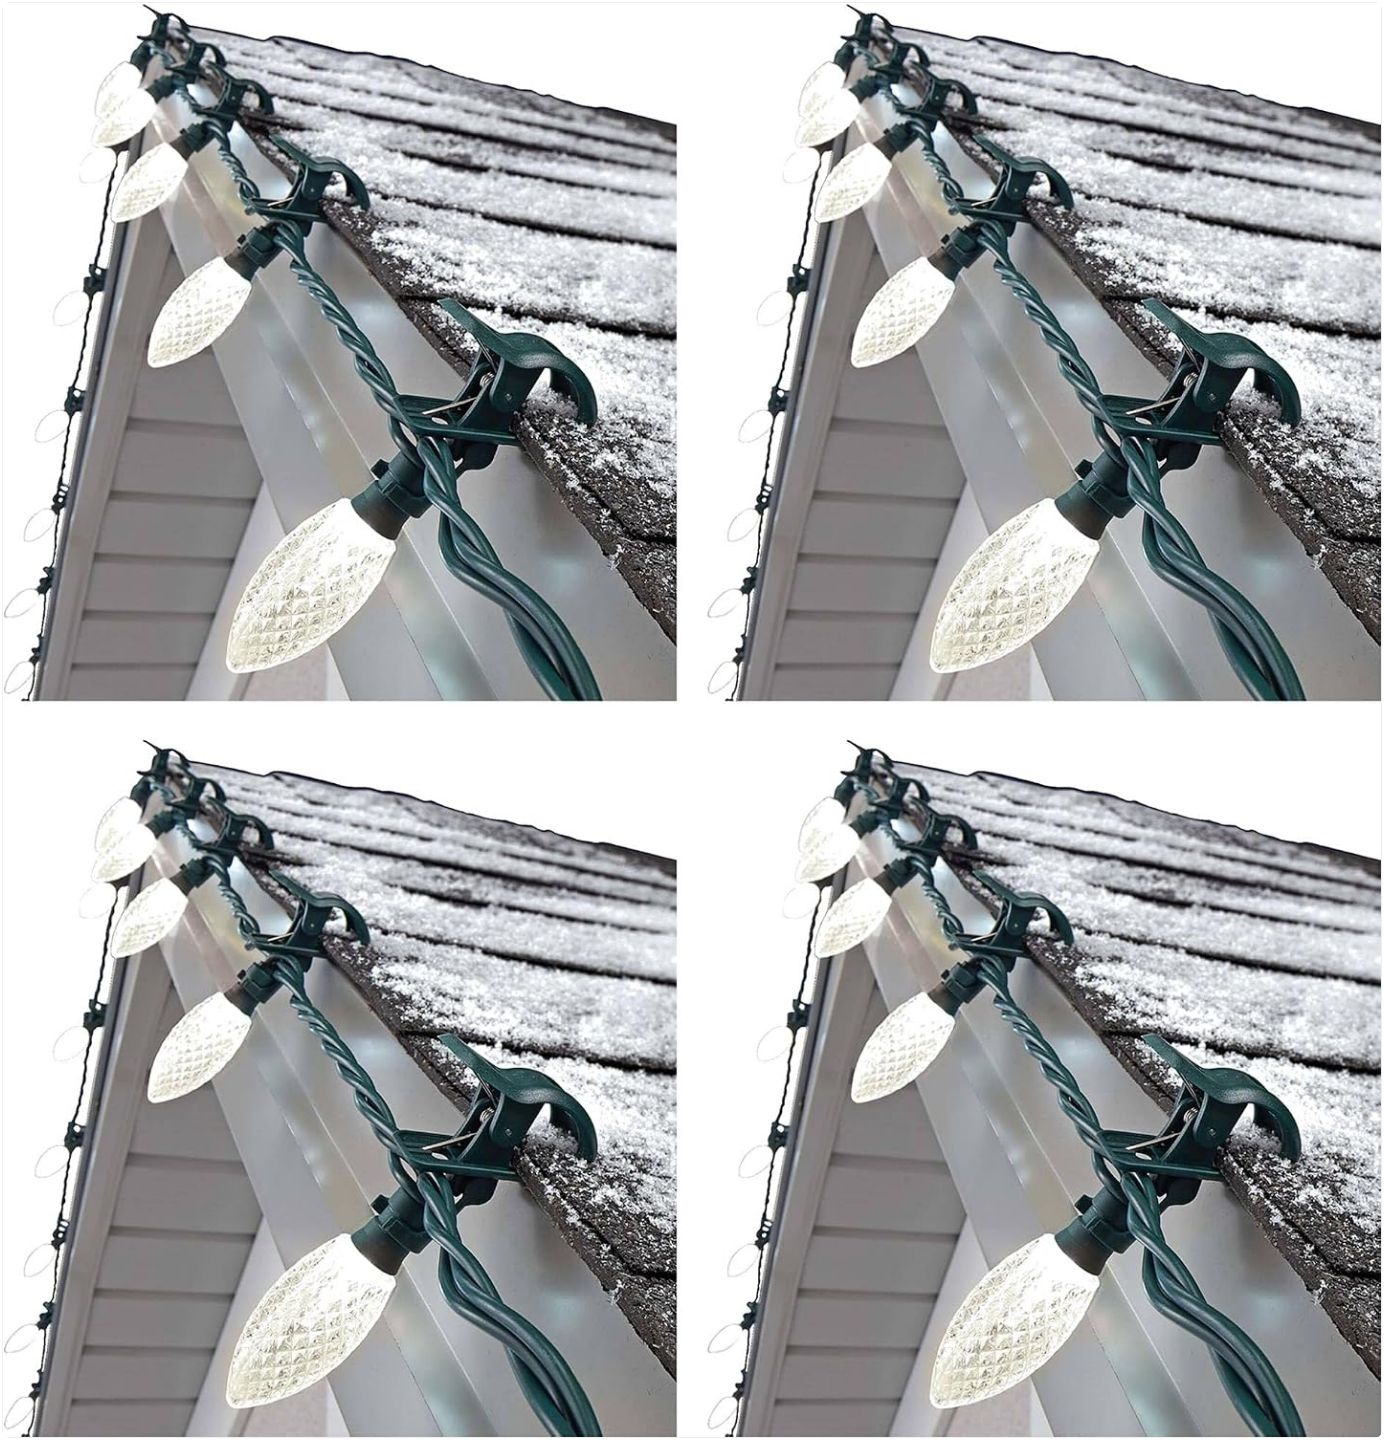


Image: Noma Quick Clip C9 LED Holiday Outdoor Christmas Lights (4 Pack).

Important Safety Instructions

When using electrical products, basic precautions should always be followed, including the following:

1. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.

7. This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
8. Do not hang ornaments or other objects from cord, wire, or light string.
9. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
10. Do not cover the product with cloth, paper or any material not part of the product when in use.
11. This product is equipped with non-shunted type LED lamps. Do not twist or attempt to remove lamps.
12. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
13. Do not immerse the product in liquid.
14. Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS
CAUTION: To reduce the risk of fire and electric shock:

15. Do not install on trees having needles, leaves, or branch coverings of metal or materials that look like metal.
16. Do not mount or support strings in a manner that can cut or damage wire insulation.

Setup & Installation

The Noma Quick Clip lights are designed for stress-free installation, eliminating the need for nails or staples. The integrated Quick-Clip mechanism allows for secure attachment to various surfaces.

Using the Quick-Clip Design

Each C9 LED bulb features a built-in spring-loaded clip. These clips securely attach to branches, rooflines, gutters, railings, and more. The clips also allow for a 180-degree rotation of each bulb, enabling you to adjust the light direction for a consistent and desired look.



Image: Close-up of Quick Clip installation on a roofline.



Image: Adjustable Light Position and Built-In Spring Loaded Clip features.

Connecting Sets End to End

You can connect multiple sets of Noma Quick Clip lights to extend your display. Ensure that the total wattage of all connected products does not exceed the lowest maximum wattage indicated on the label tag of any individual product. For this product, the maximum total wattage is 216 W. If connecting to a lighting string without a wattage rating, calculate the wattage by multiplying the current (A) on the flag-type label (located within 6 inches of the plug) by 120 V. For example: 120 V x 0.02 A = 2.4 W. The total amount of wattage that can be connected is 216 W - 2.4 W = 213.6 W.



Image: Noma Quick Clip lights installed on a snowy roof.

Operating Instructions

Once installed, simply plug the lights into a suitable GFCI outlet (for outdoor use) to illuminate your space. The 100 warm white LED bulbs provide a bright and festive glow, designed to last up to 10,000 hours.



Image: Key features: Customizable Lighting, Energy Efficiency, Sturdy Construction.

Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Noma Quick Clip C9 LED lights, showcasing their easy installation and bright illumination. This video highlights the quick clip technology and weather resistance.

Maintenance

User-Servicing Instructions: Safety Plug with Replaceable Fuse

Risk of fire. Do not replace attached plug. Discard product if the attached plug is damaged. Product employs overload protection (fuse). See instructions for servicing.

1. Always unplug product from the receptacle or other outlet device before installing or replacing fuse.
2. Grasp plug firmly to remove from receptacle. Do not unplug by pulling on cord.

3. Open fuse cover. Slide open fuse access cover on top of plug towards the blades.
4. Remove fuse carefully.
5. **Risk of fire.** Replace fuse only with 3A, 125 V fuse (provided with product).
6. Close fuse cover. Slide closed the fuse access cover on top of plug.
7. For products with a plug: If the attachment plug is damaged, see instructions for servicing.

Usage and Care Instructions

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight. The included reusable plastic tote is ideal for this purpose.



Image: Lights decorating a railing.

Troubleshooting

If your Noma Quick Clip lights are not functioning as expected, please follow these troubleshooting steps:

- **Check Power Connection:** Ensure the lights are securely plugged into a working electrical outlet. For outdoor use, verify the GFCI outlet is functioning correctly.
- **Inspect the Fuse:** As detailed in the "User-Servicing Instructions" section, this product has a replaceable fuse in the plug. If the lights are not working, the fuse may be blown due to an overload or short-circuit. Follow the instructions to replace the fuse with a 3A, 125V fuse. If the new fuse blows immediately, there may be a short-circuit in the light string, and the product should be discarded.
- **Examine for Damage:** Carefully inspect the entire light string for any cut, damaged, or frayed wires, cracks in lamp holders, loose connections, or exposed copper wire. Discard any damaged products to prevent fire or electric shock hazards.
- **Environmental Conditions:** While designed for outdoor use and cold temperatures (down to -40°C), ensure

extreme weather conditions are not impacting performance.

Specifications

Feature	Detail
Model Number	CTI1513697
UPC	193802367294
Light Type	LED C9, Diamond Cut
Bulb Quantity	100 bulbs per string (4 strings included in pack)
Light Color	Warm White
String Length	66.8 feet per string
Voltage	120 V
Wattage	2.4 W per string
Max Connectable Sets	Up to 90 sets (or 216 W total)
Indoor/Outdoor Usage	Outdoor (suitable for indoor use as well)
Special Features	Quick Clip design, 180-degree bulb rotation, Weather-sealed sockets, Energy Star rated
Material	Plastic, Rubber
Water Resistance Level	Water Resistant
Operating Temperature	Tested down to -40°C

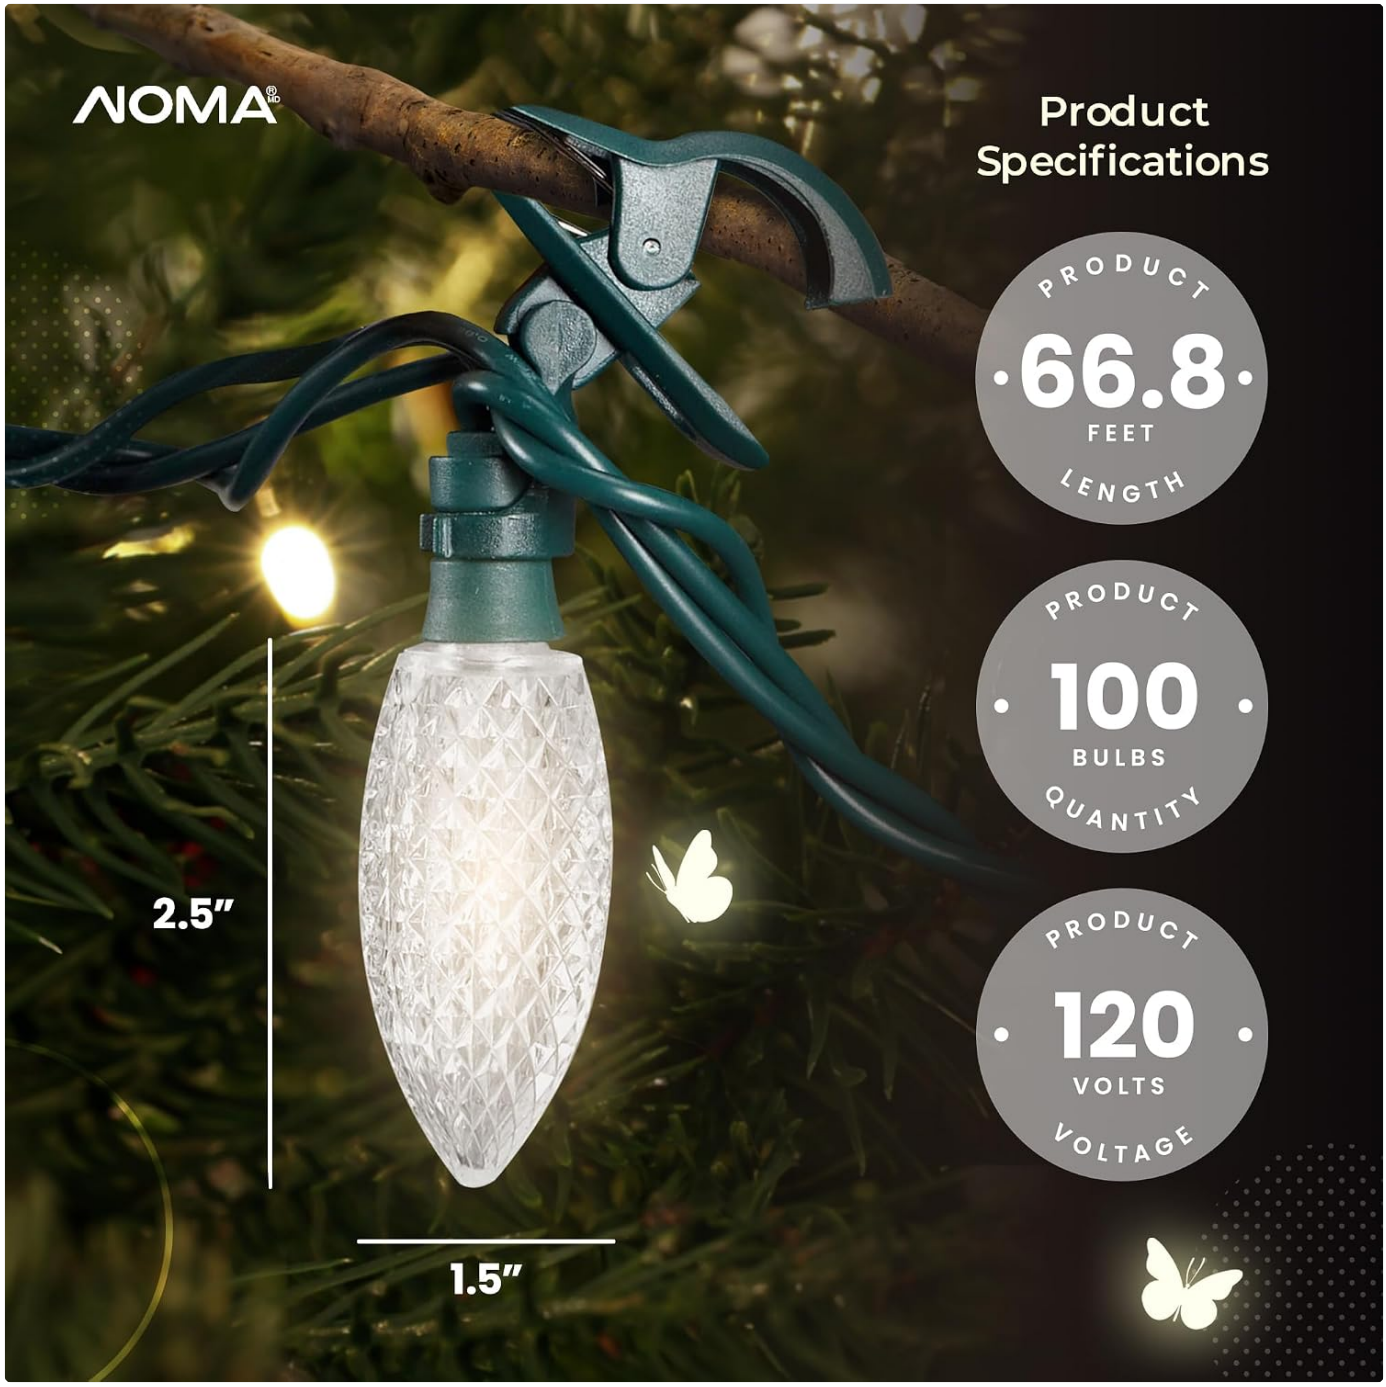


Image: Product Specifications overview.

Warranty & Support

Warranty Information

This Noma product carries a three (3) year warranty against defects in workmanship and materials. If the product becomes defective within the terms of this warranty, Noma will replace it free of charge. This warranty does not cover bulbs, nor does it cover wear or breakage due to misuse or abuse.

Customer Support

For further assistance, product inquiries, or warranty claims, please contact Noma customer support. Refer to the product packaging or the official Noma website for the most current contact information.

© 2024 Noma. All rights reserved.
For more information, visit www.noma.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D3J2N2MG

More documents and user manuals: **https://manuals.plus/**