Aipsun JS8009-120CM

Aipsun LED Wall Sconce Instruction Manual

Model: JS8009-120CM

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Aipsun LED Wall Sconce, Model JS8009-120CM. Please read this manual thoroughly before use to ensure safe and efficient operation. The Aipsun LED Wall Sconce is designed to provide versatile lighting for indoor spaces. It features adjustable color temperature (3000K-6000K) and dimmable brightness (10%-100%), offering flexible illumination options. The 120cm long light bar can be rotated 360° and installed horizontally or vertically using magnetic bases. It includes a 2-meter power cable with an inline switch and a multi-functional remote control with a timer function.

Safety Instructions

- Ensure the power supply is disconnected before installation or maintenance.
- This product is designed for indoor use only. Do not expose to moisture or extreme temperatures.
- Do not attempt to disassemble or modify the product. This may void the warranty and pose a safety risk.
- Keep the remote control and small parts out of reach of children.
- Use only the provided power adapter.

Package Contents

Please verify that all components are present and undamaged:

- Aipsun LED Wall Sconce (120CM)
- Remote Control
- Magnetic Mounting Bases (2 units)
- 2-meter Power Cable with Inline Switch and USB-A Adapter (5V 2A)
- Mounting Screws and Wall Anchors



Image: Overview of the Aipsun LED Wall Sconce, showing the light bar, remote control, and power adapter. The image also illustrates the three available color temperatures: 3000K (warm white), 4000K (neutral white), and 6000K (cool white).

Setup and Installation

The Aipsun LED Wall Sconce offers flexible installation options. It can be mounted horizontally or vertically.

1. **Choose Location:** Select a suitable indoor location for your wall sconce. Ensure it is near a power outlet.
2. **Mounting Bases:** The magnetic bases can be attached to the wall using the provided screws and wall anchors. For metal surfaces, the magnetic attraction alone may be sufficient, but for secure installation, screw mounting is recommended.
3. **Attach Light Bar:** Once the bases are securely mounted, attach the LED light bar to the magnetic bases. The light bar can be rotated 360° to direct the light as desired.
4. **Connect Power:** Plug the USB-A adapter into a standard wall outlet. Connect the power cable to the light bar.



Image: Detailed diagram illustrating the installation process, including how to mount the magnetic bases to the wall using screws and how the light bar attaches magnetically.



Image: The LED wall sconce installed vertically in a modern living room setting, highlighting its 360-degree rotation feature for adjustable light direction.

Operating Instructions

Using the Inline Switch:

The power cable features an inline button switch for basic control:

- Press once: Activates 3000K (Warm White) color temperature.
- Press twice: Changes to 4000K (Neutral White) color temperature.
- Press three times: Changes to 6000K (Cool White) color temperature.
- Press four times: Turns the light OFF.
- The up and down buttons on the inline switch adjust brightness from 10% to 100%.

Using the Remote Control:

For full functionality, use the provided remote control. Ensure the main power switch (inline switch) is ON before using the remote.



Image: Close-up of the corded button switch and the multi-functional remote control, illustrating both control methods for the LED wall sconce.

Remote Control Functions

The remote control allows for comprehensive adjustment of the light settings:

- **ON/OFF:** Power button to turn the light on or off.
- **Brightness Adjustment:** Use the **+** and **-** buttons to increase or decrease brightness (10% to 100%).
- **Color Temperature (C):** Cycle through 3000K (Warm White), 4000K (Neutral White), and 6000K (Cool White).
- **Timer Function:** Set the light to automatically turn off after a specified duration (30 minutes, 1 hour, 2 hours, 3 hours, 4 hours).



Image: The LED wall sconce illuminating a bedroom, with an overlay highlighting the remote control's timer function buttons (30min, 1h, 2h, 3h, 4h) for automatic shut-off.



Image: Visual representation of the dimming capability of the LED wall sconce, showing light intensity ranging from 10% to 100% brightness.

Maintenance

To ensure the longevity and optimal performance of your Aipsun LED Wall Sconce, follow these maintenance guidelines:

- **Cleaning:** Disconnect power before cleaning. Wipe the light bar and bases with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check the power cable and connections for any signs of damage.
- **Storage:** If storing the product for an extended period, keep it in a dry, cool place away from direct sunlight.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Light does not turn on.	No power, loose connection, inline switch off.	Check power outlet, ensure all connections are secure, turn inline switch ON.
Remote control not working.	Battery depleted, light's inline switch is OFF, remote out of range.	Replace remote battery, ensure inline switch is ON, operate remote within close proximity to the light.
Brightness or color temperature cannot be adjusted.	Remote control issue, inline switch override.	Ensure remote battery is good. Note that the inline switch has its own sequence; use the remote for more granular control after turning the light on via the inline switch.

Specifications

Feature	Detail
Brand	Aipsun
Model Number	JS8009-120CM
Dimensions (L x W x H)	120 x 3 x 3 cm (47.2 x 1.2 x 1.2 inches)
Weight	900 grams
Power	18 Watts
Luminous Flux	1200 lumens
Color Temperature	3000K, 4000K, 6000K (Adjustable)
Dimmable	Yes (10% - 100%)
Material	Aluminum
Input Voltage	100V-240V 50Hz-60Hz
Power Cable Length	2 meters (78.7 inches)
Special Features	360° Magnetic Rotation, Dimmable, Adjustable Color Temperature, Timer Function, Energy-saving

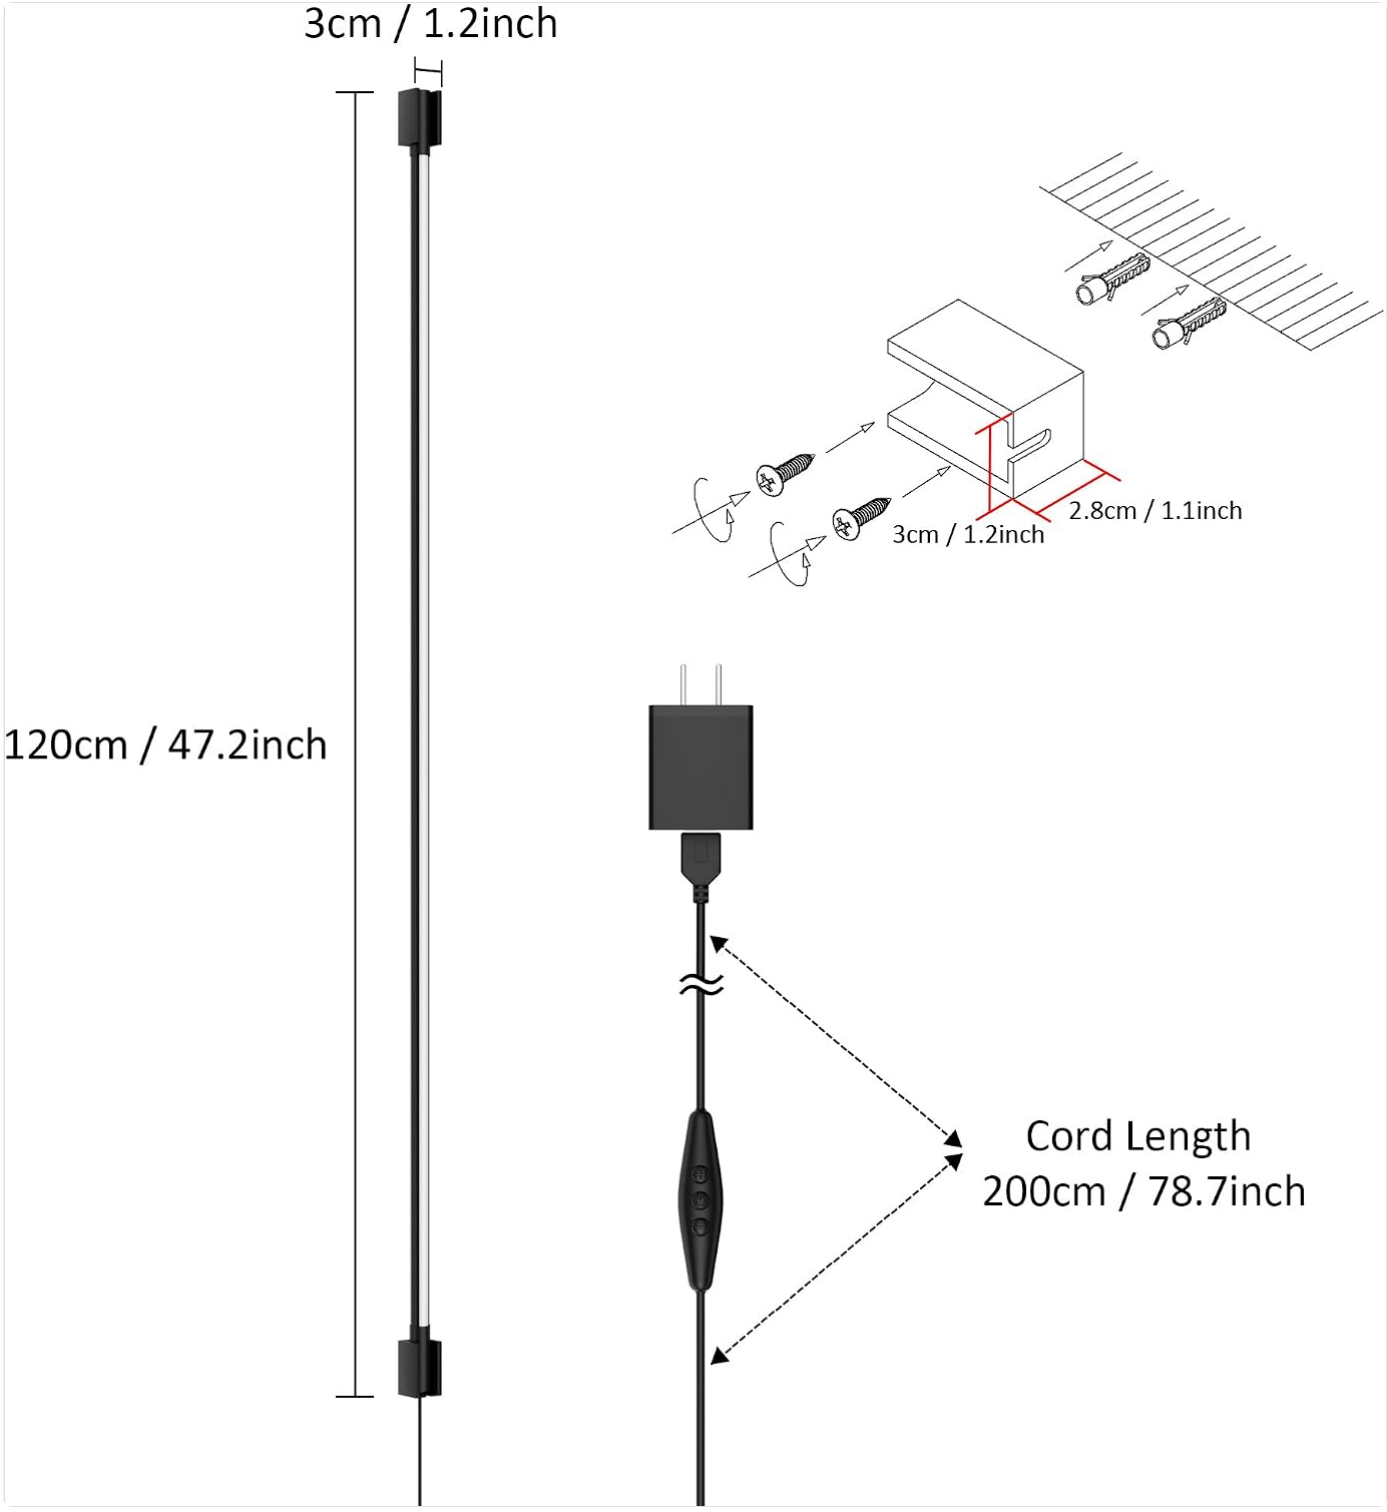


Image: Technical drawing displaying the dimensions of the LED wall sconce, including its 120cm length and 3cm width, along with the 2-meter cord length.

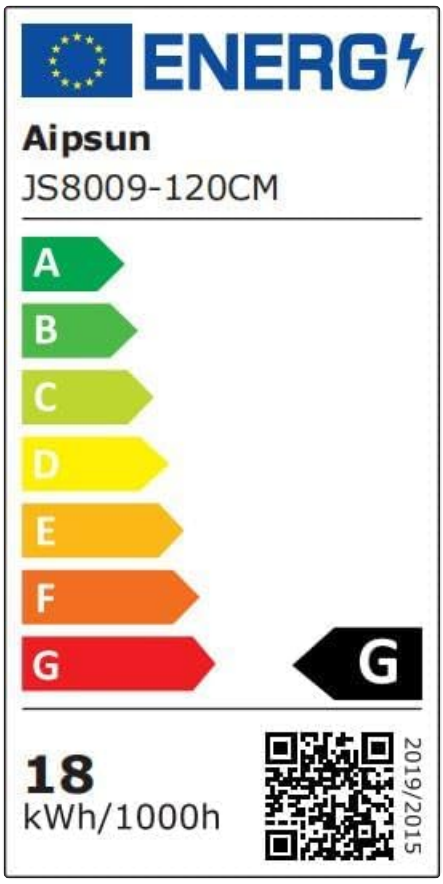


Image: EU Energy Label for the Aipsun LED Wall Sconce, Model JS8009-120CM, indicating an energy efficiency class of G and an energy consumption of 18 kWh per 1000 hours. For more details, refer to the EPREL database.

Warranty and Support

Warranty: The product includes a 2-year availability for spare parts, implying a 2-year warranty period for manufacturing defects.
Customer Support: The Aipsun team is committed to providing excellent customer service. If you have any questions, concerns, or require assistance with your LED wall sconce, please do not hesitate to contact us. We aim to resolve any issues within 24 hours.
Contact Information: Please contact us via email or through the Amazon platform where you purchased the product.

© 2024 Aipsun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question