K&F CONCEPT MS08

K&F CONCEPT MS08 62-inch 2-in-1 Phone Selfie Stick Tripod

Model: MS08

Introduction

This instruction manual provides detailed guidance for the proper setup, operation, and maintenance of your K&F CONCEPT MS08 62-inch 2-in-1 Phone Selfie Stick Tripod. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.




The K&F CONCEPT MS08 2-in-1 Phone Selfie Stick Tripod shown in its compact, handheld, and extended tripod configurations, alongside its detachable Bluetooth remote control.

What's in the Box

Verify that all items listed below are included in your package:

- K&F Concept Tripod & Selfie Stick (1)
- Camera & Phone Holder (1)
- Remote Control (1)
- Tripod Mount Adapter for GoPro (1)

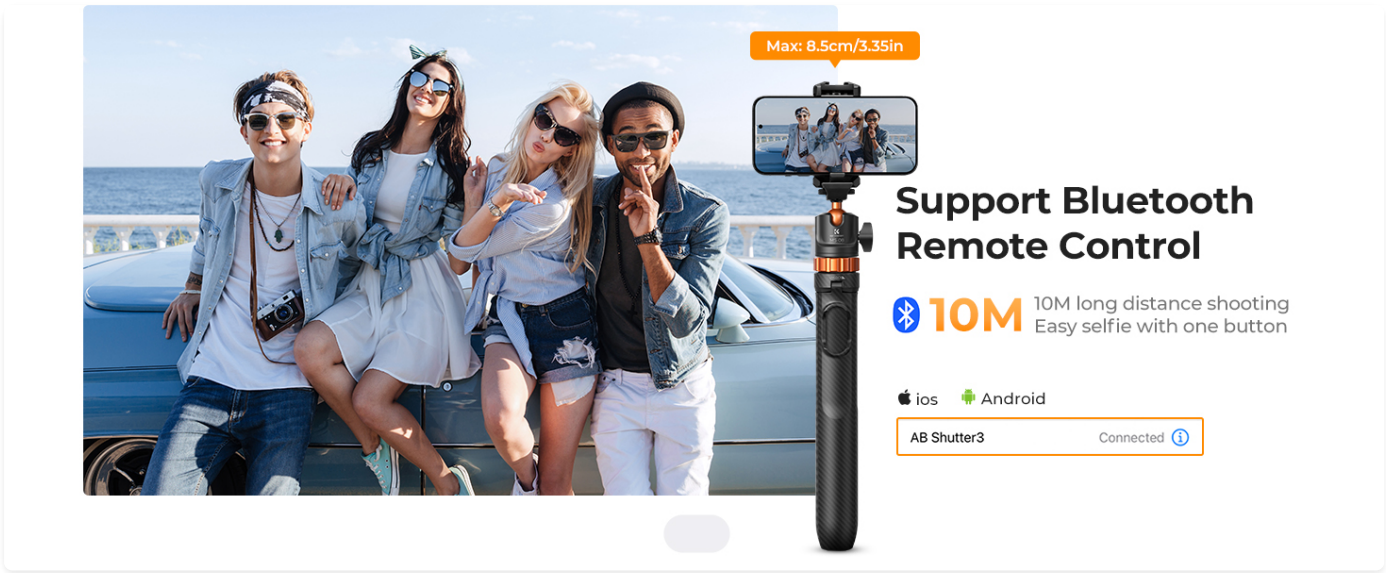

An illustration of the K&F CONCEPT MS08 product packaging and its included components.

Setup Instructions

1. Converting Between Camera Mount and Phone Clip

The integrated mount offers versatility for both cameras and smartphones.

1. To use as a phone clip, push the top part of the mount in the direction of the arrow near the 1/4-inch screw.
2. Unfold the hidden phone clip part.
3. Wrench the phone clip into a vertical position.
4. Adjust the width as needed to securely hold your smartphone (compatible with widths from 2.2 to 3.7 inches / 5.6 to 9.5 cm).
5. To revert to a 1/4-inch screw mount for cameras, fold the phone clip back in and push the top part down until it locks.

How to use



1. Push in the direction of the arrow near the 1/4” screws



2. Unfold the folded part



3. Wrench the phone clip into a vertical position



4. Adjust the width as needed

Visual instructions for transforming the mount into a phone clip.

Phone Holder Usage Steps




Further detailed steps for phone holder usage.

2. Attaching Action Cameras

For action cameras like GoPro, DJI Osmo, or Insta360, use the provided GoPro adapter. Attach the adapter to your action camera, then secure the adapter to the 1/4-inch screw on the tripod mount.



The 2-in-1 phone clip design illustrating its use with a camera, smartphone, and GoPro adapter.

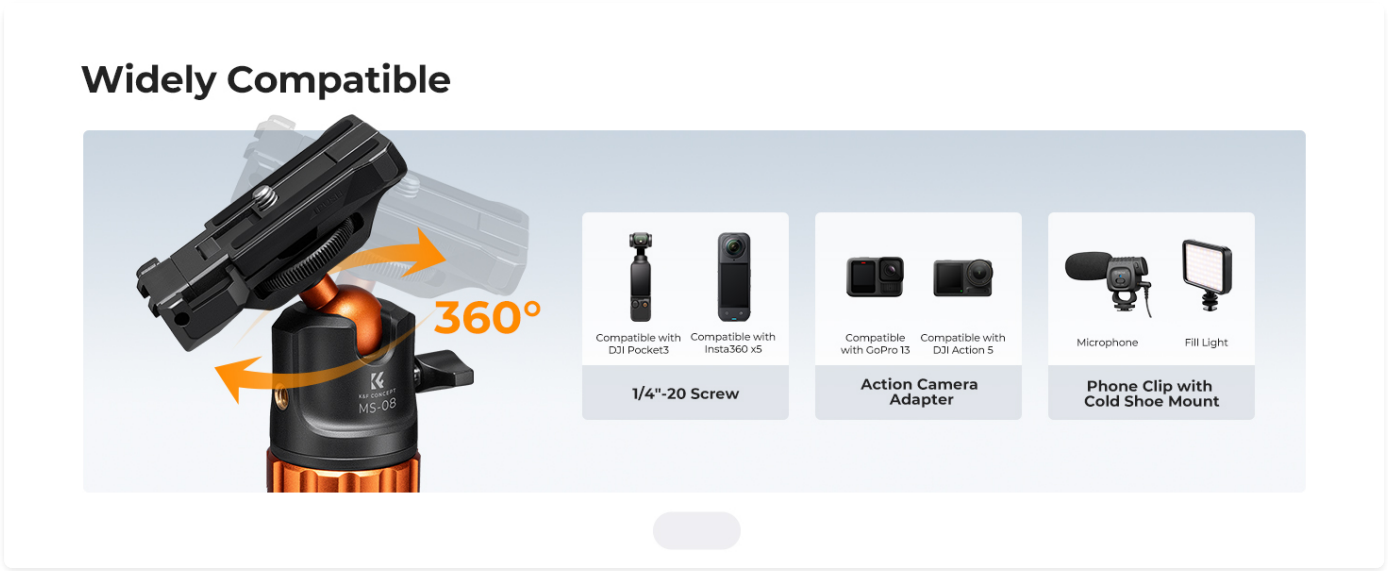


The tripod's wide compatibility with devices such as DJI Pocket 3, Insta360 X5, X4, GoPro, and external accessories like microphones or fill lights.


3. Bluetooth Remote Control Pairing

The detachable Bluetooth remote control allows for convenient photo and video capture from a distance.

1. Turn on the Bluetooth remote control switch.
2. Wait for approximately 5 seconds; the LED light will blink, indicating it has entered pairing mode.
3. On your smartphone, navigate to Bluetooth settings and find "AB Shutter3" to connect.

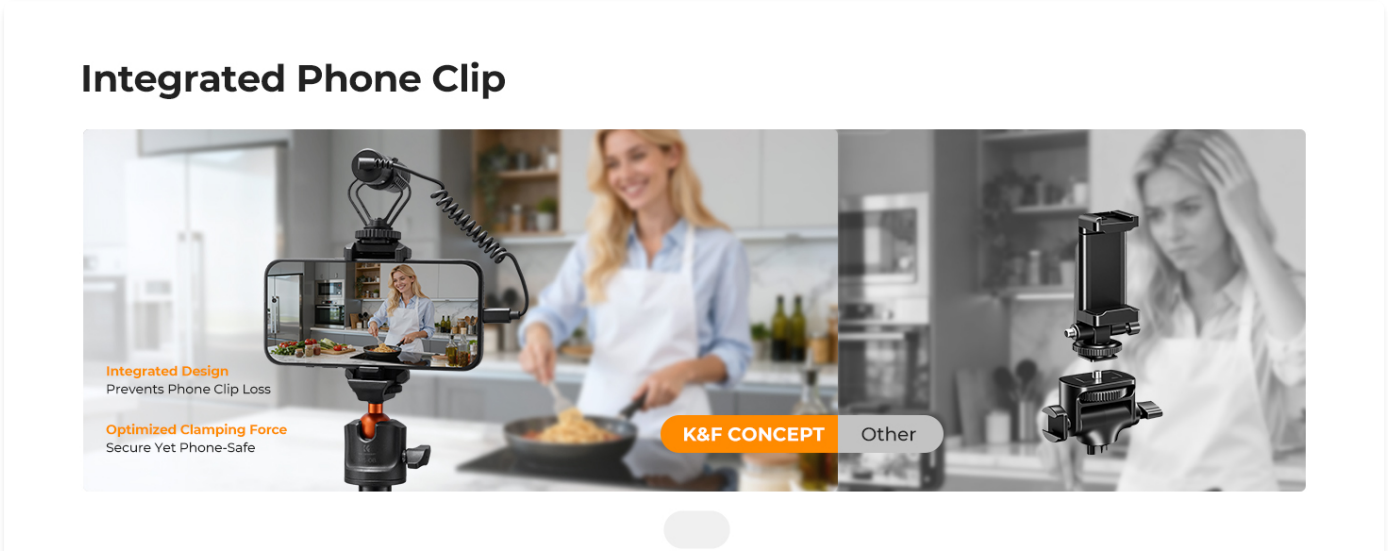

Detailed steps for pairing the Bluetooth remote control with your smartphone.

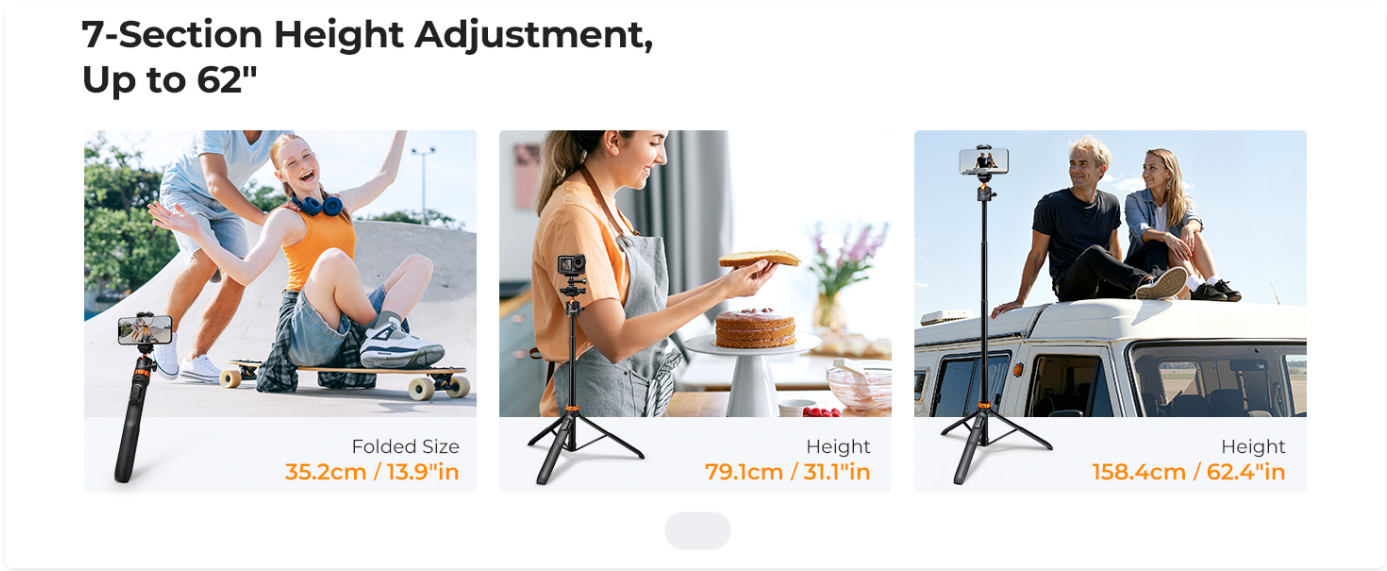

The Bluetooth remote control enables long-distance shooting up to 10 meters for easy selfies and group photos.


Operating Instructions

1. Height Adjustment

The selfie stick tripod features 7-section leg adjustments, allowing it to extend up to 62.5 inches (1.59 meters) for flexible shooting heights. To adjust, simply pull the sections to extend and push to retract. Ensure each section is securely locked in place after adjustment.

7 Levels of Height Adjustment

Maximum height up to 158.4cm/62.4"

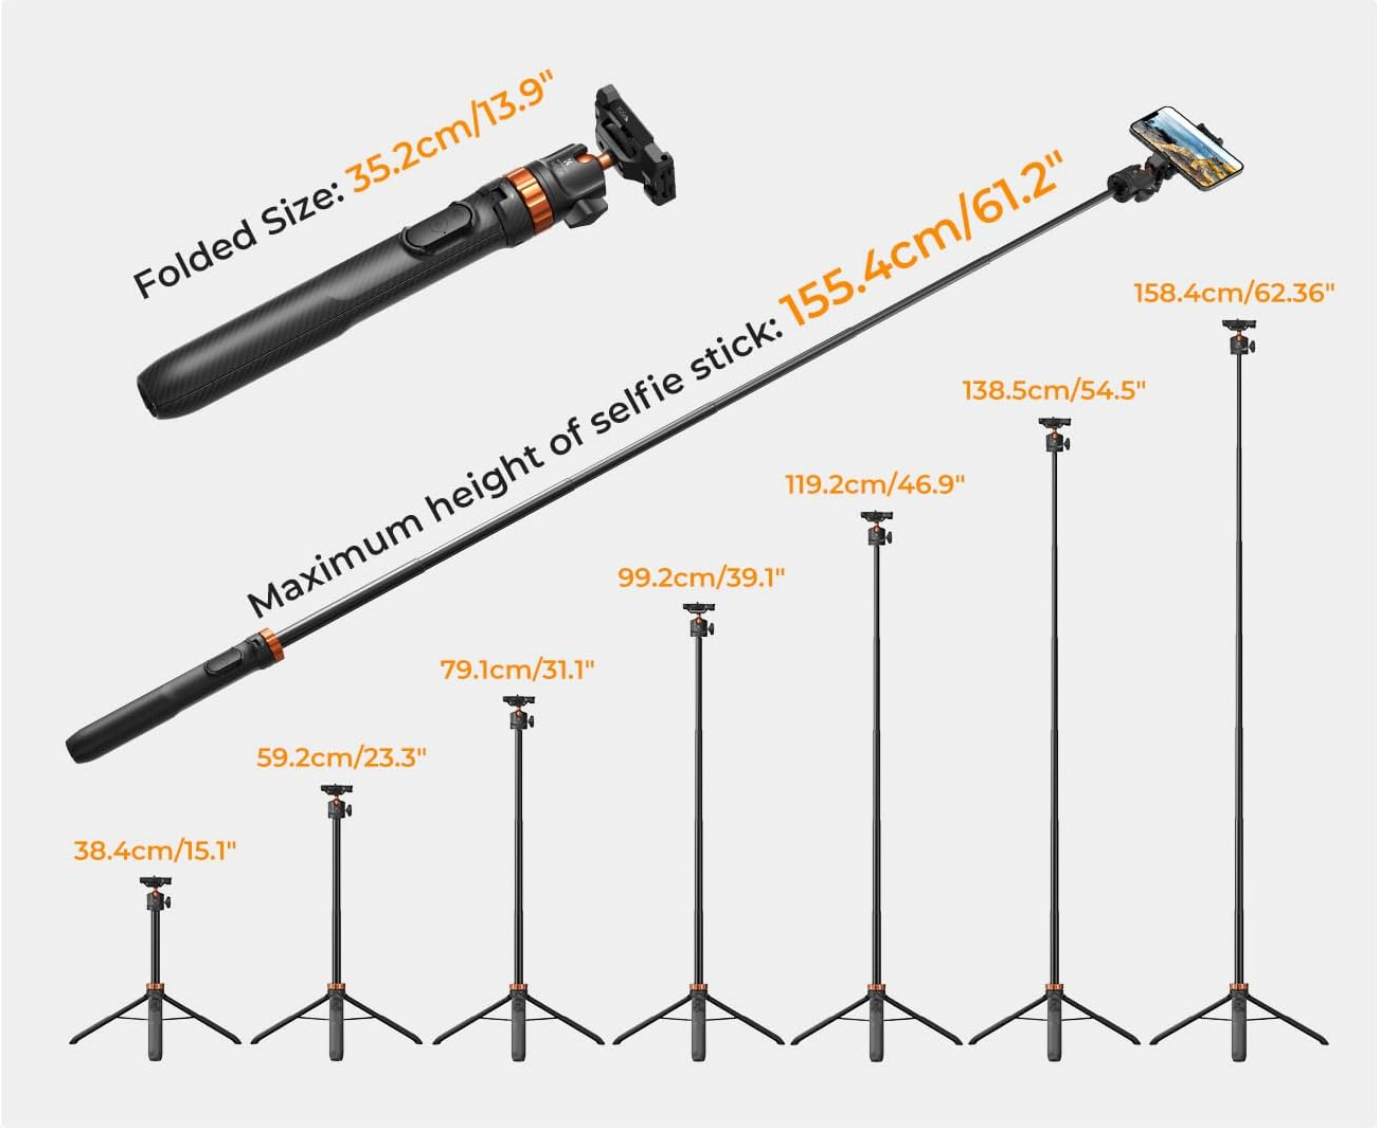

The tripod offers 7 levels of height adjustment, reaching a maximum height of 62.4 inches (158.4 cm) and folding down to 13.9 inches (35.2 cm).



Examples of height adjustments for different uses, from folded to fully extended.

2. Angle Adjustment (360-Degree Ball Head)

The integrated 360-degree ball head allows for versatile angle adjustments. Loosen the knob on the side of the ball head to freely rotate your device horizontally 360 degrees or tilt it vertically 90 degrees. Tighten the knob to lock the desired angle.



The 360-degree adjustable ball head enables horizontal, vertical, and elevation shots.

3. Usage Modes

The MS08 can be used in three primary modes:

- **Selfie Mode:** Extend the stick to your desired length and hold it for capturing selfies or group shots.
- **Tripod Mode:** Deploy the legs for a stable base, ideal for hands-free recording, time-lapses, or stable photography.
- **Handheld Mode:** Use the compact, folded unit as a stable grip for vlogging or quick shots.

Selfie Mode





The selfie stick extended for capturing a wider perspective in selfie mode.

Tripod Mode





The tripod deployed, providing a stable platform for recording or photography.

Handheld Mode

Folded Dimensions
35.2 cm / 13.9"

Weight
450 g / 0.99 lbs





The compact handheld mode, ideal for portability and quick shots.

Stability Features

The MS08 is designed with several features to enhance stability:

- **Wider Fixing Structure:** Provides a more secure base when the tripod legs are deployed.
- **Anti-slip Silicone Pads:** Located on the feet of the tripod legs for enhanced grip on various surfaces.
- **Shock-absorbing Rubber Ring:** Contributes to overall stability and reduces vibrations.



Key stability features including the widened stabilizing structure, anti-slip silicone pads, and shock-absorbing rubber ring.

SPECIFICATIONS

Feature	Detail
Brand	K&F CONCEPT
Model Number	MS08
Product Dimensions	14.76 x 1.77 x 3.07 inches
Item Weight	15.9 ounces (450 Grams)
Material	Aluminum
Weight Limit	6.6 lbs (3000 Grams)
Maximum Height	62.5 Inches (159 cm)
Minimum Height	15.1 Inches (38 cm)
Tripod Head Type	Ball Head
Phone Holder Width	2.2 to 3.7 inches (5.6 to 9.5 cm)

Remote Control Range	10 meters
Battery (Remote)	1 Lithium Metal battery (included)
Compatible Devices	Smartphones (iPhone 17/16/15/14/13/12/11/X, Samsung Galaxy S23/S22/S21, Google Pixel, One Plus), Action Cameras (GoPro Hero 12/11/10/9/8/7/6/5 Black, GoPro Max, DJI Osmo 360 Action, Insta360, AKASO Action Camera), Mirrorless Cameras with 1/4-inch screw mount.

Maintenance

To ensure the longevity and proper functioning of your K&F CONCEPT MS08 selfie stick tripod, follow these maintenance guidelines:

- **Cleaning:** Wipe the tripod with a soft, dry cloth after each use to remove dust and debris. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the tripod in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully retracted and the legs are folded before storage.
- **Remote Control Battery:** If the remote control's performance degrades, replace the Lithium Metal CR1632 3V battery.
- **Moving Parts:** Periodically check all screws and joints for tightness. Do not overtighten.

Troubleshooting

- **Remote Control Not Connecting:**
  - Ensure the remote control is powered on and in pairing mode (blinking LED).
  - Check your smartphone's Bluetooth settings to ensure Bluetooth is enabled and try re-pairing with "AB Shutter3".
  - Verify the remote control battery is not depleted. Replace if necessary.
  - Ensure no other Bluetooth devices are interfering with the connection.
- **Tripod Instability:**
  - Ensure all leg sections are fully extended and locked.
  - Confirm the tripod legs are fully spread out on a flat, stable surface.
  - Do not exceed the maximum weight limit of 6.6 lbs (3 kg).
  - Ensure the ball head knob is securely tightened after adjusting the angle.
- **Phone Not Fitting in Clip:**
  - Verify your phone's width is within the compatible range of 2.2 to 3.7 inches (5.6 to 9.5 cm).
  - Ensure the phone clip is fully extended and adjusted to its maximum width.

Official Product Video

Your browser does not support the video tag.

This official K&F Concept video demonstrates the features and usage of the Selfie Stick Tripod for action cameras and phones, including its versatility and ease of use.

Warranty and Support

For warranty information, product support, or to contact customer service, please visit the official K&F CONCEPT store or website. Keep your purchase receipt as proof of purchase.

Visit the K&F CONCEPT Store

© 2025 K&F CONCEPT. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I remove the battery cover on the K&F CONCEPT MS08 remote control?

To remove the battery cover on the K&F CONCEPT MS08 Bluetooth remote control, follow these steps:Locate the Remote: Remove the detachable remote from its slot on the selfie stick handle.Identify the Battery Compartment: Look...

Read full answer