EUARY A44-A34

EUARY Cordless Vacuum Cleaner User Manual

Model: A44-A34

1. Introduction

Thank you for choosing the EUARY Cordless Vacuum Cleaner A44-A34. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger specified by the manufacturer.

2. Package Contents

Carefully unpack your EUARY Cordless Vacuum Cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush with LED Lights
- Crevice Tool
- 2-in-1 Brush Tool
- Wall-Mount Charging Dock
- Power Adapter
- Cleaning Tool
- User Manual
- Removable Battery

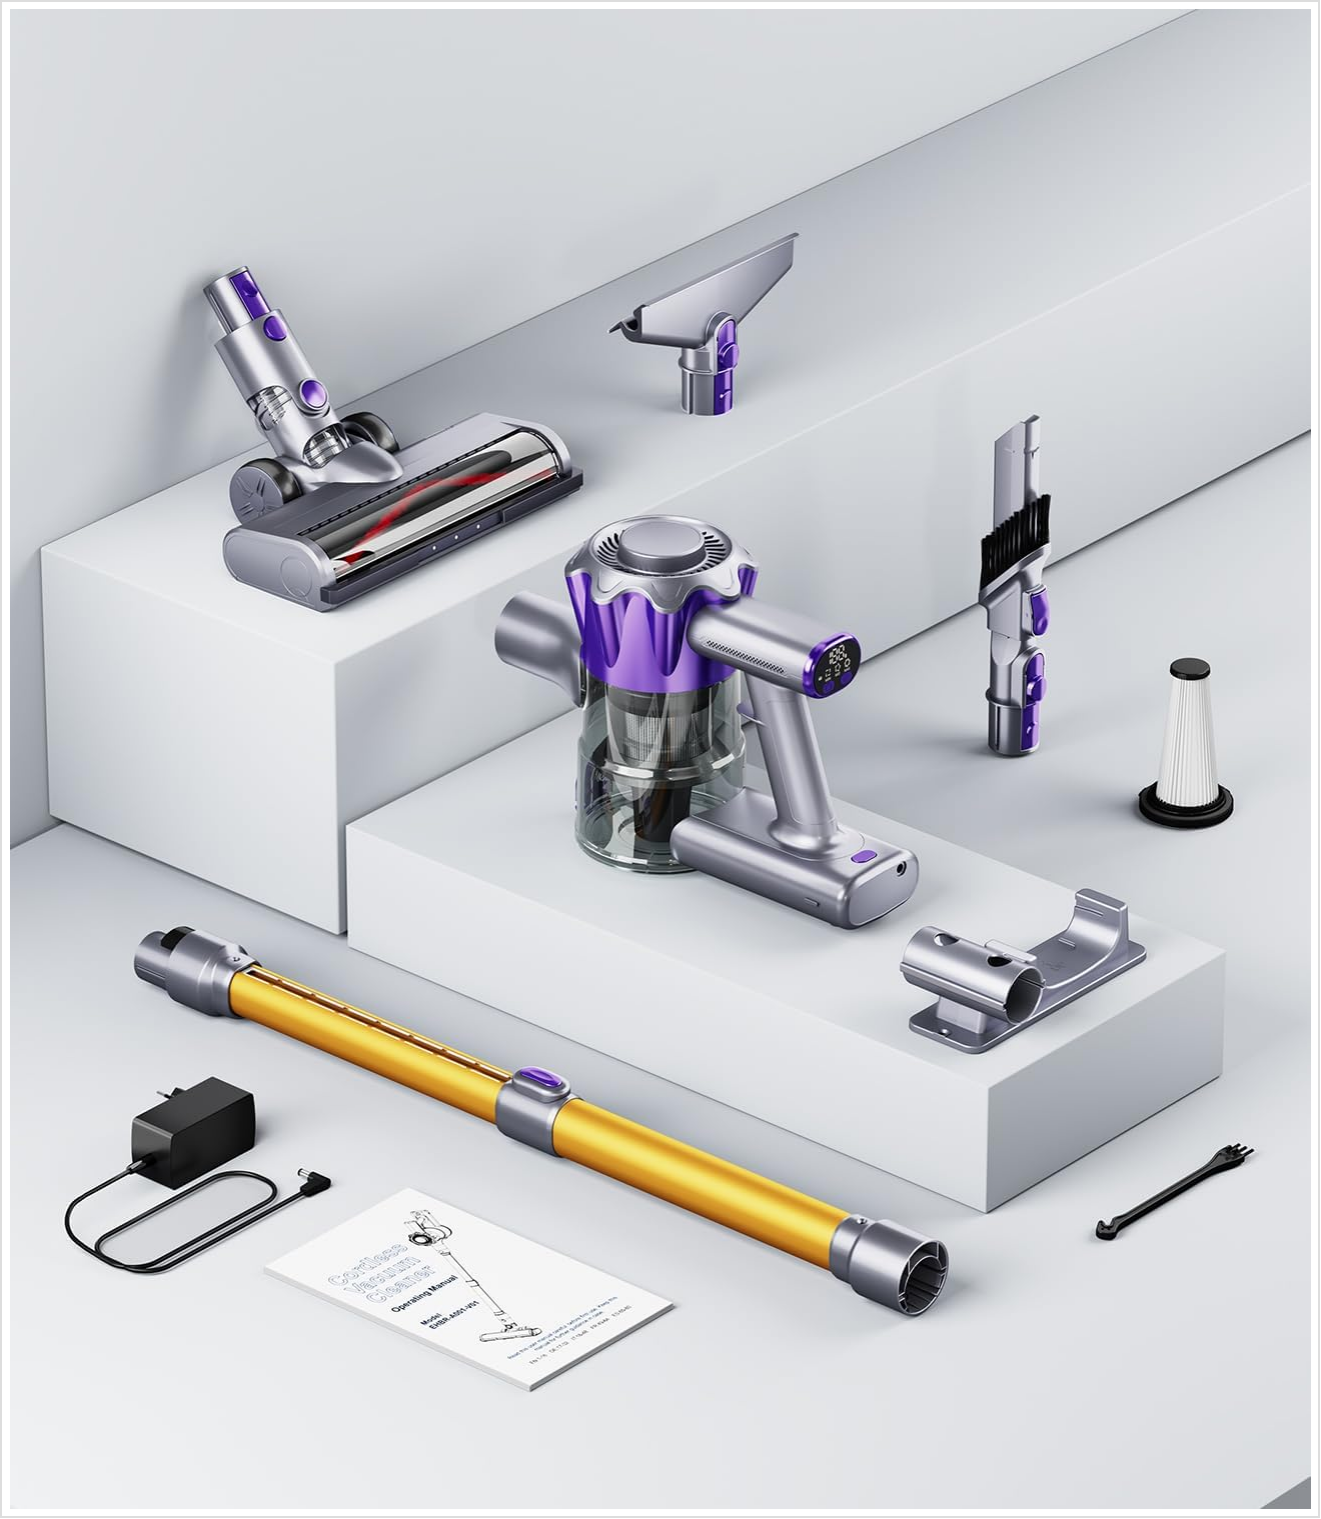


Image: All components included with the EUARY Cordless Vacuum Cleaner A44-A34, laid out on a white surface. This includes the main motor unit, extension wand, floor brush, various nozzles, wall mount, power adapter, and cleaning tool.

3. Product Overview

Familiarize yourself with the main parts of your EUARY Cordless Vacuum Cleaner.

- **Main Motor Unit:** Contains the 450W brushless motor, intelligent LED display, power button, and mode selection button.
- **Intelligent LED Display:** Shows battery level and current suction mode (MIN, MID, MAX).
- **Dustbin:** 1.5-liter capacity for collecting dust and debris. Features an 11-layer filtration system.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.

- **Motorized Floor Brush:** Equipped with a V-shaped anti-tangle roller brush and LED lights for effective cleaning on various surfaces and in dark areas. Offers flexible maneuverability.
- **Removable Battery:** Provides up to 50 minutes of runtime.



Image: The EUARY Cordless Vacuum Cleaner A44-A34 in action, demonstrating its powerful 450W upgraded brushless motor and 40KPa suction capability on a hard floor with scattered debris.



Image: A close-up view of the intelligent LED display on the main motor unit, showing battery percentage and suction modes (MIN, MID, MAX) with touch controls.

4. Setup

4.1 Assembly

1. Insert the extension wand into the main motor unit until it clicks securely into place.
2. Attach the motorized floor brush to the other end of the extension wand until it clicks securely.
3. Alternatively, attach the crevice tool or 2-in-1 brush tool directly to the main motor unit or the extension wand for handheld cleaning.

4.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

1. Install the wall-mount charging dock in a convenient location.
2. Connect the power adapter to the charging dock and plug it into a power outlet.
3. Place the vacuum cleaner onto the charging dock, or remove the battery and charge it directly using the adapter.
4. The intelligent LED display will show the charging status. A full charge typically takes several hours.



Image: An illustration depicting the EUARY Cordless Vacuum Cleaner A44-A34 being used in different rooms, emphasizing its 50-minute battery runtime for cleaning multiple areas on a single charge.

5. Operating Instructions

5.1 Powering On/Off

- To turn on the vacuum, press the power button on the main motor unit.
- To turn off the vacuum, press the power button again.

5.2 Adjusting Suction Modes

The vacuum offers three suction modes: MIN, MID, and MAX. Use the mode selection button (touch control) on the intelligent LED display to cycle through the modes.

- **MIN Mode:** Ideal for light cleaning tasks and maximizing battery runtime.
- **MID Mode:** Suitable for everyday cleaning of various surfaces.
- **MAX Mode:** Provides powerful 40,000 Pa suction for deep cleaning, stubborn dirt, and pet hair.



Image: An illustration demonstrating the adjustable suction power of the EUARY Cordless Vacuum Cleaner A44-A34, showing different suction levels (17000Pa, 25000Pa, 40000Pa) effectively cleaning various debris sizes from a carpet.

5.3 Using Attachments

- **Motorized Floor Brush:** Use for general cleaning on carpets, rugs, and hard floors. The LED lights illuminate the cleaning path.
- **Crevice Tool:** Perfect for reaching into narrow gaps, corners, and along edges.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like upholstery, curtains, or car interiors. Remove the brush for a wider nozzle to pick up larger debris.



Image: Three different women demonstrating the versatility of the EUARY Cordless Vacuum Cleaner A44-A34 with multiple suction nozzles, performing various cleaning tasks such as floor cleaning, high-reach cleaning, and handheld cleaning.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the MAX line is reached, to maintain strong suction.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Press the dustbin release button to detach the dustbin from the main motor unit.

3. Position the dustbin over a trash can and press the bottom release button to open the flap and empty the contents.
4. Close the dustbin flap and reattach the dustbin to the main motor unit until it clicks.

6.2 Cleaning Filters

The 11-layer filtration system includes a HEPA filter and a metal filter. Clean them regularly to prevent clogging and maintain suction power.

1. Remove the dustbin.
2. Twist and pull out the filter assembly (HEPA filter and metal filter).
3. Tap the filters gently over a trash can to remove loose dust.
4. If heavily soiled, rinse the filters under running water. Ensure they are completely air-dried for at least 24 hours before reassembling. Do not use a dryer or direct heat.
5. Reassemble the filters and reattach the dustbin.



Image: A detailed diagram illustrating the 11-level filtration system of the EUARY Cordless Vacuum Cleaner A44-A34, showing the airflow path and how dust and particles are separated and captured by various filter components.

6.3 Cleaning the Brush Roll

The anti-tangle brush roll minimizes hair wrapping, but occasional cleaning is recommended.

1. Ensure the vacuum is off.
2. Locate the brush roll release tab on the side of the motorized floor brush.
3. Remove the brush roll.
4. Use the provided cleaning tool or scissors to cut and remove any tangled hair or debris.
5. Reinsert the brush roll until it clicks into place.

6.4 Battery Care

- Always use the original charger provided.
- Do not expose the battery to extreme temperatures (hot or cold).
- If storing the vacuum for an extended period, ensure the battery has some charge (around 50%) and store it in a cool, dry place.

7. Troubleshooting

If you encounter any issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Battery not properly installed	Charge the battery fully Ensure battery is securely clicked into place
Low suction power	Dustbin is full Filters are clogged Blockage in the wand, hose, or brush head	Empty the dustbin Clean or wash the filters Check and remove any blockages
Brush roll not spinning	Hair or debris tangled in brush roll Brush roll not properly installed	Clean the brush roll Ensure brush roll is securely in place
Short battery runtime	Battery not fully charged Using MAX mode continuously Battery degradation	Ensure battery is fully charged Use lower suction modes for longer runtime Contact customer support if battery life significantly decreases

If the problem persists after trying these solutions, please contact customer support.

8. Specifications

Feature	Specification
Model Number	A44-A34
Power	450 Watts
Suction Power	Up to 40,000 Pa (40 KPa)
Battery Runtime	Up to 50 minutes
Dustbin Capacity	1.5 Liters
Filter Type	HEPA filter, 11-layer filtration system
Voltage	400 Volts
Dimensions (L x W x H)	30 x 30 x 30 cm
Weight	3.24 Kilograms

Feature	Specification
Special Features	Cordless, Intelligent LED Display, Anti-tangle brush, LED lights on floor head

9. Warranty and Support

9.1 Product Warranty

This EUARY Cordless Vacuum Cleaner A44-A34 comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact our 24/7 customer support team. Refer to your purchase documentation or the manufacturer's official website for the most up-to-date contact information.

© 2024 EUARY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question