Nespresso ENV92Y

Nespresso Vertuo Pop+ Coffee and Espresso Machine User Manual

Model: ENV92Y

Introduction

Welcome to the Nespresso Vertuo Pop+ experience. This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your new coffee and espresso machine. Please read all instructions carefully before first use to ensure proper function and safety.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Package Contents

Verify that all components are present in your Nespresso Vertuo Pop+ package:

- Nespresso Vertuo Pop+ Coffee and Espresso Machine
- Removable Water Tank
- Drip Tray and Cup Support
- Welcome Kit with Nespresso Vertuo Capsules (assortment may vary)
- User Manual (this document)



Image: Nespresso Vertuo Pop+ machine in Mango Yellow, showing the main unit, water tank, drip tray, and sample capsules.

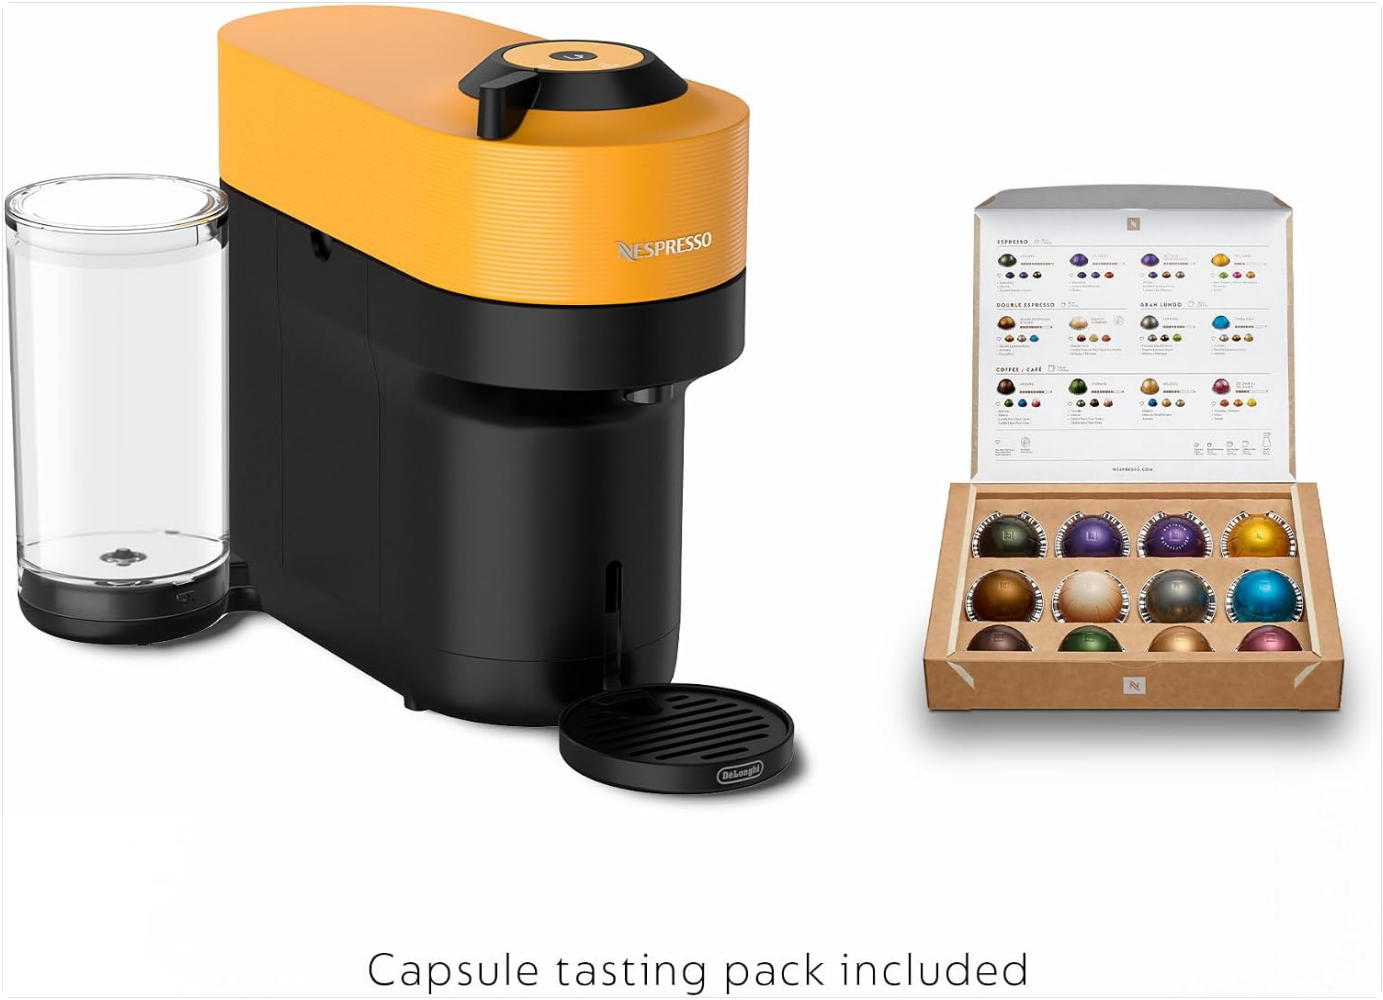


Image: Nespresso Vertuo Pop+ machine alongside a box containing a variety of Nespresso Vertuo capsules, indicating the included tasting pack.

Setup

1. Unpacking and Placement

1. Remove the machine from its packaging.
2. Place the machine on a clean, stable, and level surface.
3. Ensure the power cord is accessible and not pinched.
4. Attach the drip tray and cup support to the machine.

2. Filling the Water Tank

1. Remove the water tank from the side of the machine.
2. Rinse the water tank with fresh drinking water.
3. Fill the water tank with fresh drinking water up to the 'MAX' level.
4. Place the water tank back onto the machine securely.



Image: The Nespresso Vertuo Pop+ machine with its removable 25.4 fl oz water tank clearly visible on the side, illustrating its compact design and dimensions (14"D x 8.6"W x 10.4"H).

3. First Use and Rinsing

1. Plug the machine into a grounded power outlet. The button will blink as the machine heats up.
2. Once the button is steady, the machine is ready.
3. Place a container (at least 12 oz) under the coffee outlet.
4. Press the button three times quickly to start the rinsing cycle. The machine will dispense hot water.
5. Repeat the rinsing cycle two more times.
6. The machine is now ready for brewing.

Operating Instructions

1. Powering On

Press the main button on top of the machine. The button will blink white as the machine heats up (approximately 30 seconds). It will glow steady white when ready for use.

2. Brewing Coffee or Espresso

1. Lift the lever to open the machine head.
2. Insert a Nespresso Vertuo capsule into the capsule holder, ensuring it is correctly seated.
3. Close the machine head and lock the lever by turning it to the left.
4. Place a cup or mug on the cup support. The machine automatically detects the capsule type and adjusts brewing parameters for the optimal cup size and style.
5. Press the main button once to start brewing. The button will blink during brewing.
6. Once brewing is complete, the button will glow steady white. Lift the lever to eject the used capsule into the capsule container.

The Vertuo Pop+ offers a variety of coffee formats in 5 sizes: 1.4 oz (Espresso), 2.7 oz (Double Espresso), 5 oz, 8 oz, and 12 oz coffees. It can brew both hot and iced beverages.

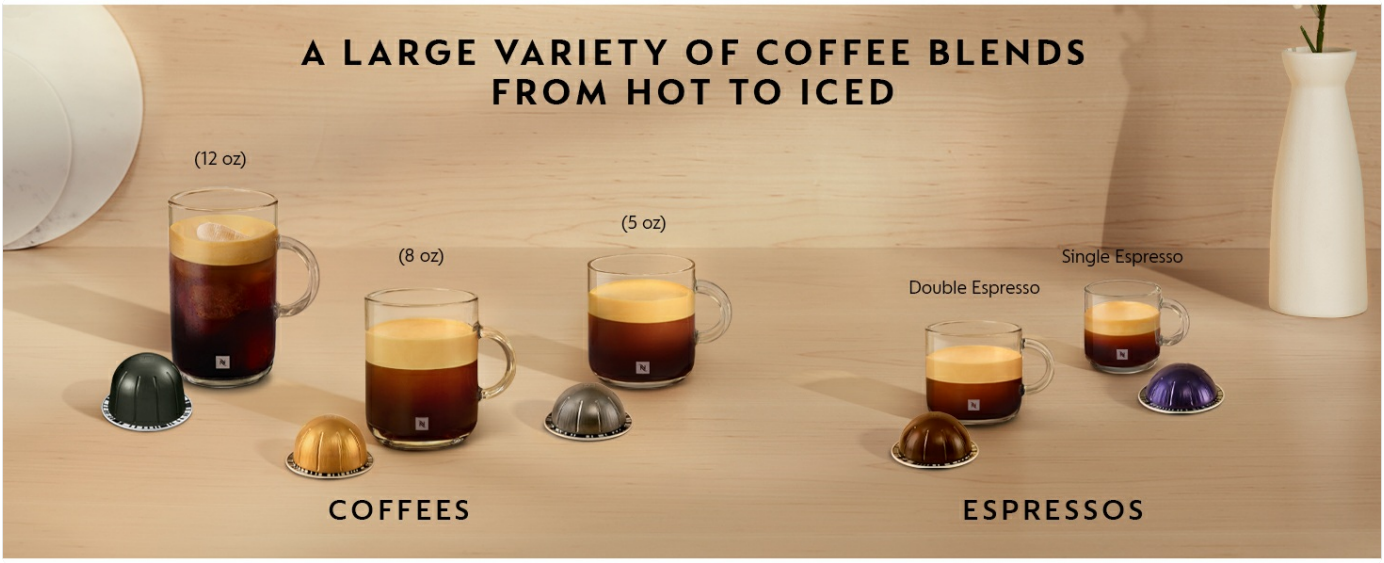


Image: Visual representation of the five available cup sizes for Nespresso Vertuo capsules: 1.4 oz, 2.7 oz, 5 oz, 8 oz, and 12 oz, each with a corresponding capsule.



Image: The Nespresso Vertuo Pop+ machine dispensing coffee into a glass filled with ice, demonstrating its capability to brew iced coffee.



Image: The Nespresso Vertuo Pop+ machine brewing hot coffee into a large mug and espresso into a smaller cup, showcasing its versatility.

3. Adjustable Drip Tray

The drip tray can be adjusted to accommodate different cup sizes. Simply lift or lower the cup support to the desired position.

Maintenance

1. Cleaning

- **Daily Cleaning:** Empty and rinse the used capsule container and drip tray with warm water. Wipe the machine exterior with a damp cloth.
- **Water Tank:** Clean the water tank regularly with warm water and mild detergent. Rinse thoroughly.
- **Coffee Outlet:** Perform a rinsing cycle (without a capsule) daily to clean the coffee outlet.

2. Descaling

The machine features a descaling alert. When the button blinks orange, it indicates that descaling is required. Follow the descaling instructions provided by Nespresso or refer to the Nespresso website for detailed steps. Regular descaling ensures optimal machine performance and coffee quality.

3. Capsule Recycling

Nespresso capsules are fully recyclable. Participate in Nespresso's free recycling program by collecting used capsules and returning them through designated channels. Visit the official Nespresso website for more information on how to recycle your capsules.



Image: A Nespresso recycling bag being filled with used aluminum capsules, illustrating the brand's recycling program.

Troubleshooting

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
No coffee flow	Water tank empty; machine not primed; capsule incorrectly inserted.	Fill water tank; perform rinsing cycle; ensure capsule is correctly seated.
Coffee is cold	Machine not fully heated; cup not preheated.	Wait for the button to glow steady white; preheat cup with hot water.
Button blinking orange	Descaling required.	Perform descaling procedure as per Nespresso instructions.
Machine leaks	Water tank not properly seated; damaged seal.	Ensure water tank is correctly installed; contact Nespresso support if issue persists.

Specifications

Feature	Detail
Brand	Nespresso
Model Name	Vertuo Pop+

Feature	Detail
Model Number	ENV92Y
Color	Mango Yellow
Product Dimensions	14"D x 8.6"W x 10.4"H
Item Weight	7.9 pounds
Water Tank Capacity	25.4 fl oz (approx. 0.75 L)
Coffee Maker Type	Espresso Machine
Special Features	App-Controlled, Removable Tank
Operation Mode	Fully Automatic
Voltage	120 Volts
Coffee Input Type	Capsules (Nespresso Vertuo only)
UPC	044387009225

Warranty and Support

Your Nespresso Vertuo Pop+ machine is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your original packaging for specific terms and conditions. Keep your proof of purchase for warranty claims.
For technical assistance, troubleshooting beyond this manual, or to order accessories and descaling kits, please contact Nespresso Customer Service:

- **Website:** www.nespresso.com
- **Phone:** Refer to your local Nespresso website for country-specific contact numbers.

© 2025 Nespresso. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question