Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Stagecaptain PPP-70 SR

Stagecaptain PPP-70 SR Parking Post User Manual

Model: PPP-70 SR

1. Introduction

Thank you for choosing the Stagecaptain PPP-70 SR Parking Post. This manual provides essential information for the safe and effective installation, operation, and maintenance of your parking post. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Information

Please observe the following safety precautions to prevent injury or damage to the product:

- Ensure the installation surface is stable and suitable for anchoring the post.
- Wear appropriate personal protective equipment (PPE) such as gloves and eye protection during installation.
- Keep children and pets away from the installation area.
- Do not attempt to modify the parking post. Use only original parts and accessories.
- Ensure the post is securely locked in the upright position to prevent accidental lowering.
- Be aware of potential tripping hazards when the post is in the lowered position.

3. Package Contents

Carefully unpack the box and ensure all items are present and undamaged. If any items are missing or damaged, contact your retailer immediately.

- 1x Stagecaptain PPP-70 SR Parking Post
- 3x Keys
- 4x Concrete Anchors (Ø16mm x 50mm)

4. Product Overview and Dimensions



Figure 1: The Stagecaptain PPP-70 SR parking post shown in both its upright, blocking position (70 cm high) and its lowered, flat position (9 cm high). This illustrates its dual functionality for securing or allowing access to a parking space.

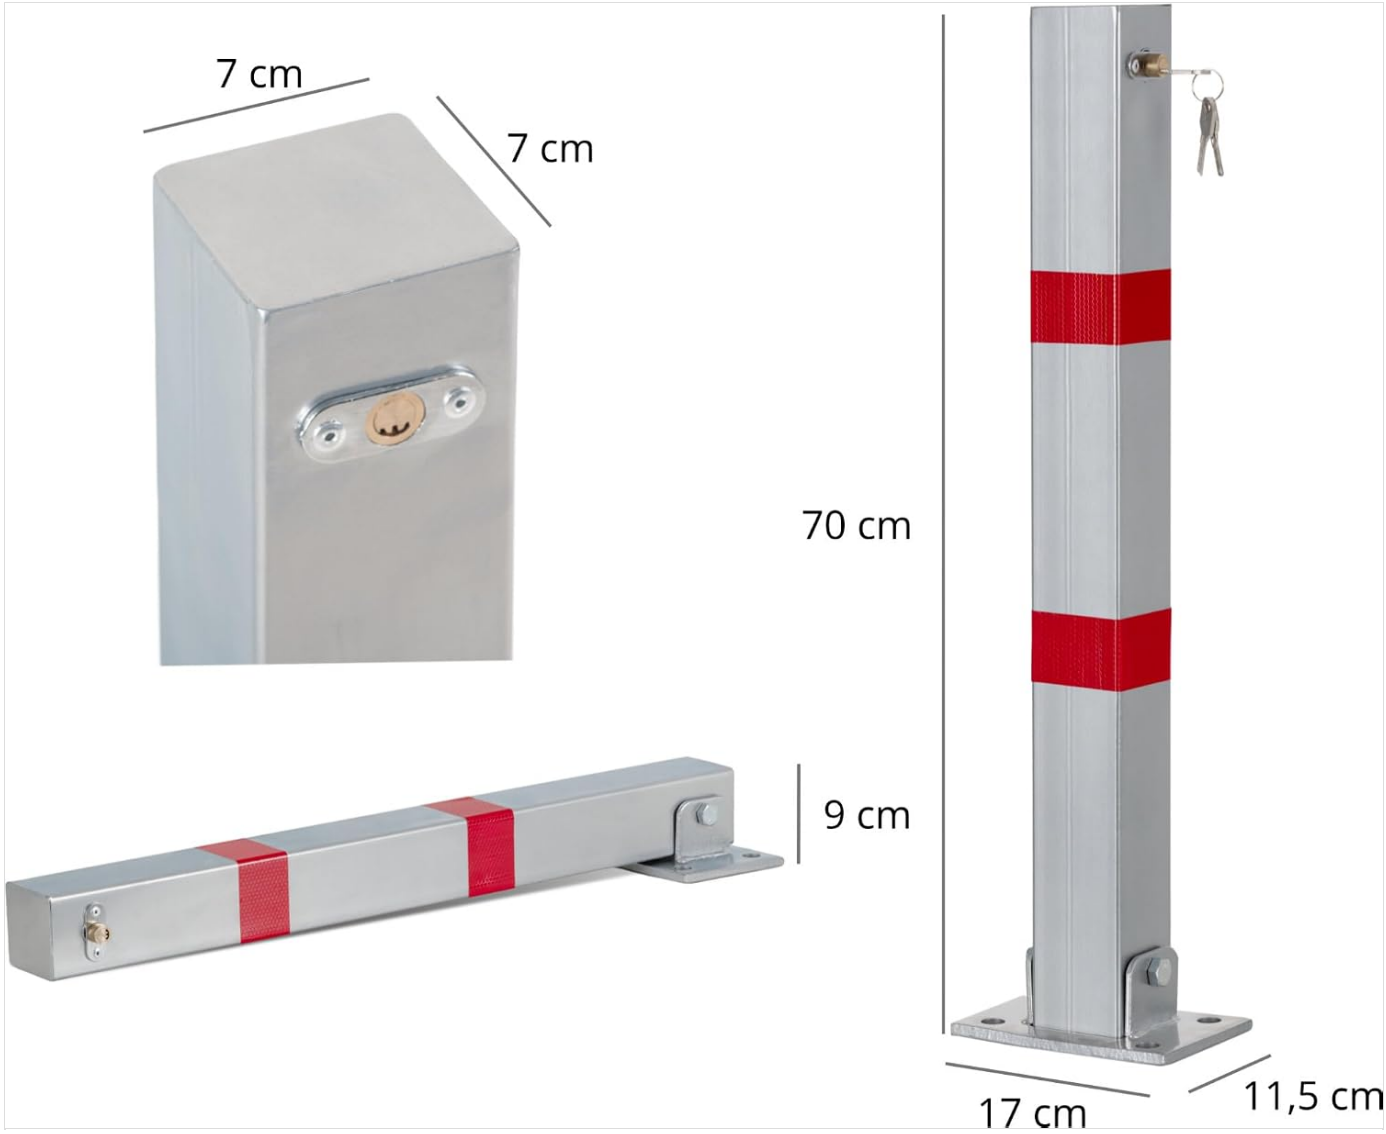


Figure 2: Detailed dimensions of the parking post. When upright, it measures 70 cm in height. The base plate is 17 cm by 11.5 cm. The post itself has a cross-section of 7 cm by 7 cm. In the lowered position, its height is 9 cm.

The Stagecaptain PPP-70 SR is a robust parking post designed to secure parking spaces and prevent unauthorized vehicle access. It features a lockable mechanism and reflective stripes for enhanced visibility.

- **Upright Height:** 70 cm
- **Lowered Height:** 9 cm
- **Base Plate Dimensions:** 17 cm x 11.5 cm
- **Post Cross-section:** 7 cm x 7 cm
- **Material:** Galvanized, powder-coated 2 mm steel (post), 7 mm steel (base plate)
- **Weight:** 4.5 kg

5. Setup and Installation

Follow these steps for proper installation of your parking post:

1. **Choose Location:** Select a flat, stable concrete or asphalt surface for installation. Ensure there are no underground pipes or cables in the drilling area.
2. **Mark Drilling Points:** Place the parking post base plate on the desired installation spot. Use a marker to mark the four drilling points through the holes in the base plate.
3. **Drill Holes:** Using an appropriate drill bit (e.g., 16mm masonry drill bit), drill holes at the marked points to a depth of

at least 50mm. Clear any dust or debris from the holes.

4. **Insert Anchors:** Place the parking post over the drilled holes. Insert the concrete anchors through the base plate holes and into the drilled holes.
5. **Secure Post:** Tighten the nuts on the concrete anchors firmly with a wrench until the post is securely fastened to the ground. Do not overtighten.



Figure 3: Close-up view of the robust 16mm concrete anchors and the sturdy base plate. These components ensure the parking post is securely mounted to a solid surface, providing reliable protection.



Figure 4: The parking post shown installed in two different environments: a typical asphalt parking lot (lowered position) and on a paved pathway (upright position, inset). This demonstrates its versatility in various settings.

6. Operation

The Stagecaptain PPP-70 SR parking post is designed for simple and secure operation.



Figure 5: A close-up of the locking mechanism and the three included keys. The key is inserted into the lock to either raise or lower the post, providing controlled access to the protected area.

1. **To Raise the Post:**
    - Insert one of the provided keys into the lock cylinder located on the side of the post.
    - Turn the key to unlock the mechanism.
    - Lift the post to its upright position. It will automatically lock into place.
    - Remove the key. The post is now secured and blocking access.
2. **To Lower the Post:**
    - Insert one of the provided keys into the lock cylinder.
    - Turn the key to unlock the mechanism.
    - Gently push the post downwards until it lies flat on the ground.
    - Remove the key. The post is now in the lowered position, allowing access.



Figure 6: This image highlights key features: the red reflective stripes for high visibility day and night, the robust steel construction ensuring stability and security, and the special lock with three keys for authorized access control.

7. Maintenance

The Stagecaptain PPP-70 SR parking post requires minimal maintenance to ensure long-lasting performance.

- **Cleaning:** Periodically wipe down the post with a damp cloth to remove dirt and debris. Avoid abrasive cleaners that could damage the powder coating.
- **Lubrication:** Apply a small amount of silicone spray or light oil to the hinge mechanism and lock cylinder annually to ensure smooth operation.
- **Inspection:** Regularly check the mounting bolts for tightness. Inspect the post for any signs of damage, corrosion, or wear. Address any issues promptly.
- **Key Care:** Keep spare keys in a safe place. Do not force the key if it feels stiff; apply lubricant to the lock cylinder.

8. Troubleshooting

Problem	Possible Cause	Solution
Post is difficult to raise or lower.	Hinge mechanism is stiff or dirty.	Clean the hinge area and apply lubricant (e.g., silicone spray).
Key is difficult to turn in the lock.	Lock cylinder is dirty or dry.	Apply a small amount of graphite powder or lock lubricant into the keyhole.
Post feels wobbly after installation.	Mounting bolts are loose or anchors are not fully secured.	Tighten all mounting bolts. Ensure anchors are properly expanded in the drilled holes. Re-drill if necessary.
Post does not lock in the upright position.	Locking mechanism is obstructed or damaged.	Check for debris obstructing the locking pin. If damaged, contact customer support.

9. Specifications

- **Model:** Stagecaptain PPP-70 SR
- **Dimensions (Upright):** 70 cm (H) x 17 cm (W) x 11.5 cm (D)
- **Dimensions (Lowered):** 9 cm (H) x 70 cm (L) x 11.5 cm (W)
- **Post Cross-section:** 7 cm x 7 cm
- **Material:** Galvanized, powder-coated steel (2mm post, 7mm base plate)
- **Weight:** Approximately 4.5 kg
- **Anchors:** 4x Ø16mm x 50mm concrete anchors included
- **Keys:** 3 included
- **Visibility:** Integrated reflective stripes

10. Warranty and Support

Stagecaptain products are manufactured to high-quality standards. For warranty information, please refer to the terms and conditions provided by your retailer at the time of purchase. If you encounter any issues or require technical assistance, please contact your point of purchase or visit the official Stagecaptain website for support resources.
For further assistance, please visit: www.stagecaptain.com/support (example link)

© 2024 Stagecaptain. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D47342QG

More documents and user manuals: **https://manuals.plus/**