ChooChoo TS19003-2TBL

ChooChoo Farmhouse TV Stand Instruction Manual

Model: TS19003-2TBL

Brand: ChooChoo

1. Introduction

Thank you for choosing the ChooChoo Farmhouse TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read these instructions carefully before beginning assembly and retain them for future reference.

Important Safety Information

- Always follow assembly instructions precisely.
- Ensure all parts are securely fastened before use.
- Do not overload the TV stand; adhere to weight limits for your television and stored items.
- Keep small parts away from children during assembly to prevent choking hazards.
- Place the TV stand on a level, stable surface to prevent tipping.

2. Package Contents

Before starting assembly, please verify that all components and hardware listed in your product's specific assembly guide are present and undamaged. If any parts are missing or damaged, please contact customer support.

3. Setup and Assembly Instructions

Assembly is required for this TV stand. We recommend having two people for assembly to ensure stability and ease of handling. Clear assembly instructions with labeled parts are provided with the product. Please follow them step-by-step.

General Assembly Tips:

- Lay out all parts on a clean, soft surface to prevent scratches.
- Identify each part using the provided labels or diagrams.

- Do not overtighten screws during initial assembly; tighten fully once all parts are aligned.
- Pay close attention to the orientation of panels, especially for grooves designed for the back panel.
- For cam locks, ensure they are properly aligned and engaged for a secure connection.
- Install the two middle support legs to add extra stability and aid in leveling the unit.



Image 3.1: Fully assembled ChooChoo Farmhouse TV Stand.



Image 3.2: Detailed dimensions of the TV stand, showing length, width, and height.

4. Operating Instructions

This TV stand is designed to accommodate televisions up to 55 inches in size. Its robust construction ensures stability for your media setup.

Placement of Television:

- Carefully place your television on the thickened tabletop. Ensure the TV's base is centered and fully supported.
- The tabletop is 1.1 inches thick, providing a sturdy and durable surface.

Storage and Organization:

- Utilize the two open shelves for media players, gaming consoles, soundbars, or decorative items. These shelves are approximately 20 inches wide and 7 inches tall each.
- The two side cabinets with slotted wood doors provide concealed storage for DVDs, remote controls, or other accessories, helping to keep your living space tidy.
- The integrated cord management system (circular cutouts in the back panel) allows for neat routing of cables, preventing tangles and maintaining a clean appearance.

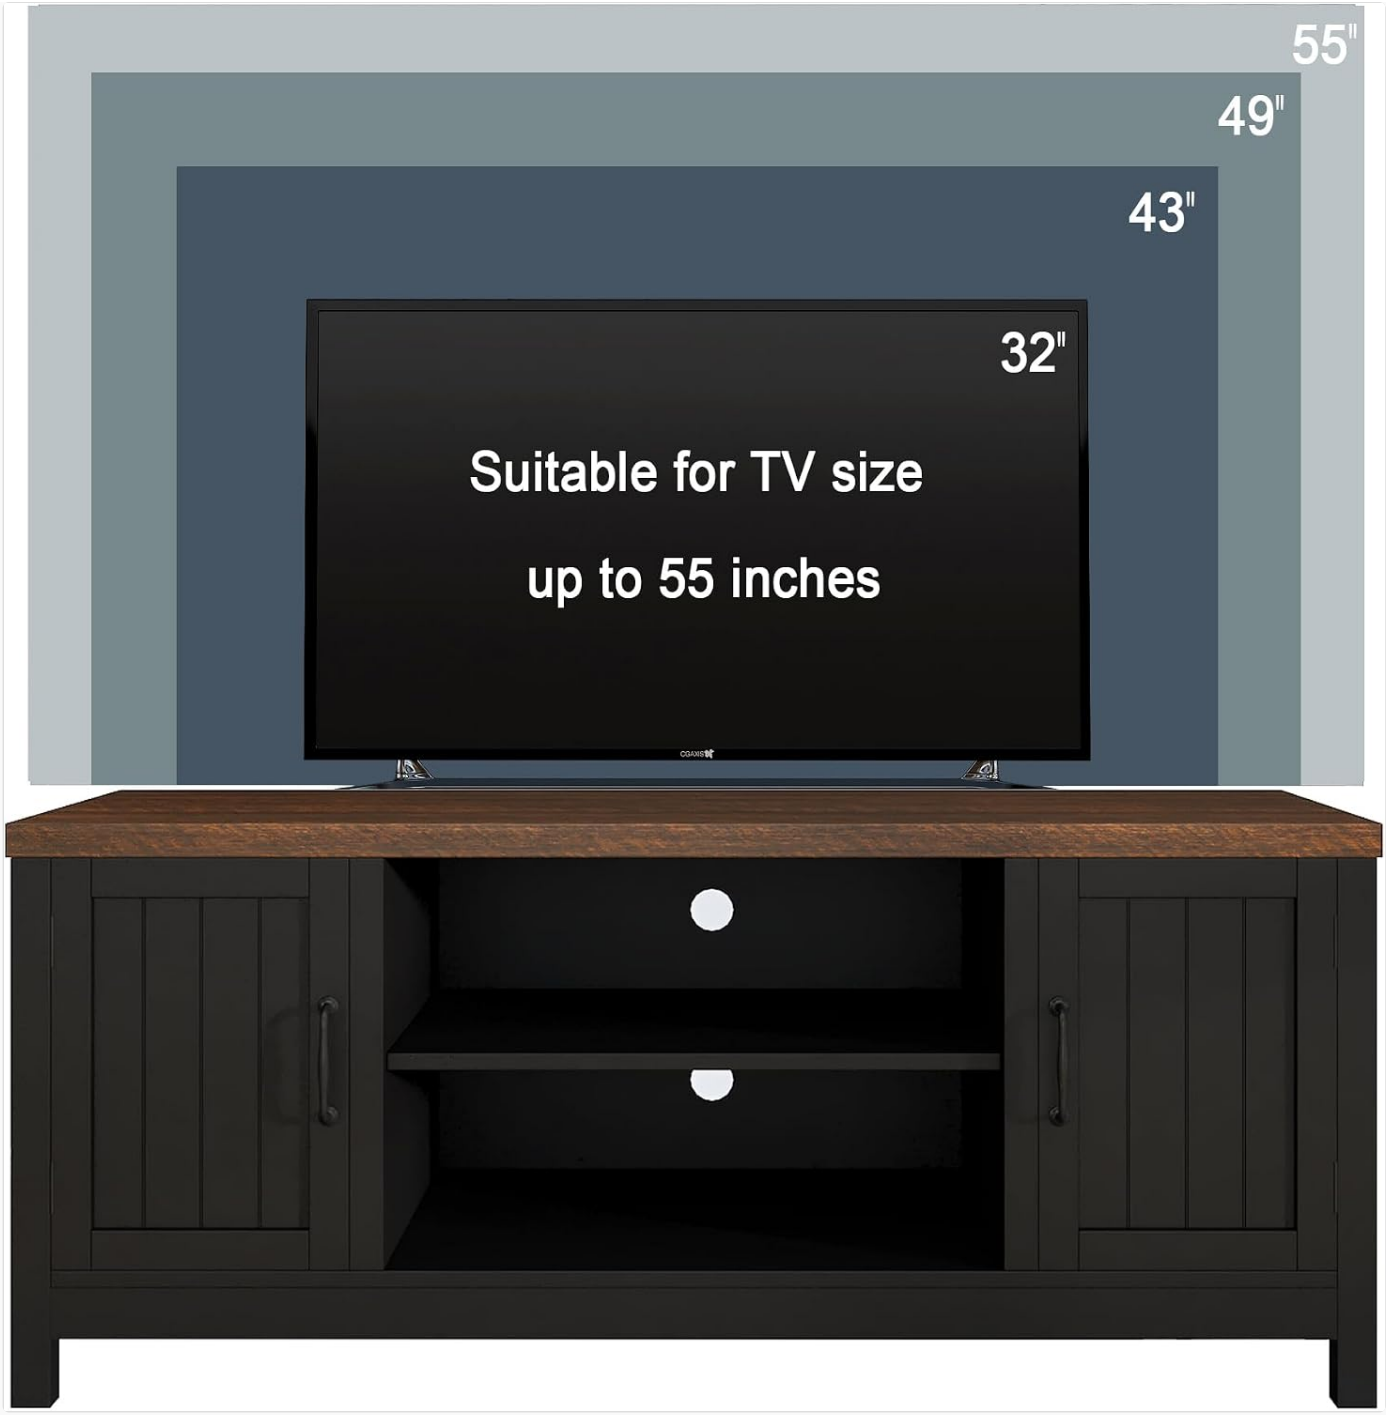


Image 4.1: Illustration showing the TV stand's compatibility with various TV sizes, up to 55 inches.



Image 4.2: Close-up details highlighting the thickened tabletop, farmhouse style, cord management hole, and stable support legs.



Image 4.3: The TV stand shown with a television and various media devices on its shelves.

5. Maintenance

To ensure the longevity and appearance of your ChooChoo Farmhouse TV Stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent moisture damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Scratches:** The product features a black finish over a white base material. Be mindful of scratches, as the underlying white color may become visible.

6. Troubleshooting

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Wobbly Stand:** Ensure all screws and cam locks are fully tightened. Verify that the stand is placed on a level

surface. If necessary, adjust the middle support legs or use furniture levelers.

- **Doors Not Closing Properly:** Check the alignment of the door hinges and adjust as needed. Ensure the back panel is correctly seated in its grooves, as misalignment can affect door closure.
- **Damaged Parts:** If any parts arrived damaged or become damaged during assembly, please contact customer support for assistance.

7. Specifications

Feature	Detail
Model Number	TS19003-2TBL
Brand	ChooChoo
Style	Farmhouse
Material	Engineered Wood
Color	Black with Wood Tone Top
Dimensions (L x W x H)	120 x 39 x 51 cm (47.24 x 15.31 x 20.07 inches)
Weight	19.6 kg (43.21 lbs)
Tabletop Thickness	1.1 inches
Suitable TV Size	Up to 55 inches
Assembly Required	Yes
Care Instructions	Wipe with a dry cloth

8. Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Our customer service team is available to assist with any questions or concerns regarding your ChooChoo Farmhouse TV Stand.

© 2024 ChooChoo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question