Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Angrox AMZ3

Angrox AMZ3 Voice Replacement Remote Control User Manual

Model: AMZ3

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Angrox AMZ3 Voice Replacement Remote Control. Please read this manual thoroughly to ensure proper use and to maximize your viewing experience.





Front view of the Angrox AMZ3 Voice Replacement Remote Control, featuring a microphone button, navigation ring, playback controls, volume buttons, and dedicated shortcut buttons for streaming services.

2. Compatibility

The Angrox AMZ3 Voice Replacement Remote Control is designed for broad compatibility with various Amazon Fire TV devices and smart TVs. It supports:

- **Fire TV Stick:** 1st Gen, 2nd Gen, 3rd Gen, Lite, 4K, 4K Max
- **Fire TV Cube:** 1st Gen, 2nd Gen, 3rd Gen
- **Amazon Fire Smart TVs:** 2-series, 4-series, Omni series, Omni QLED series, 3rd Gen
- **Replacement for original remote models:** Voice Remote (2nd Gen, 3rd Gen, Lite, Lite 2nd Gen), and TV remote control models such as NS-RCFNA-21, CT-95018, CT-RC1US-21, NS-RCFNA-19, CT-RC1US-19.



This image illustrates the range of devices compatible with the Angrox AMZ3 remote, including different generations of Fire TV Stick, Fire TV Cube, and Amazon Fire Smart TVs.



The Angrox AMZ3 remote is designed to replace various original Fire TV remote control models, shown here for comparison.

3. Features

The Angrox AMZ3 remote control offers several features designed to enhance your media consumption experience:

- **Voice Search Function:** Utilize the integrated microphone button to issue voice commands for content search, navigation, and device control.
- **Dedicated Shortcut Buttons:** Four pre-programmed buttons provide instant access to popular streaming services: Prime Video, Netflix, Disney+, and Hulu.
- **Ergonomic Design:** The remote is designed for comfortable handling and intuitive button placement.
- **Wireless Control:** Enjoy reliable control from various angles and distances within your viewing area.



The remote features a voice search function, activated by pressing the microphone button, allowing users to issue commands like 'Open Video' or 'Go home'.



Dedicated shortcut buttons provide quick access to popular streaming services such as Prime Video, Netflix, Disney+, and Hulu.



The remote offers wireless control with multi-angle induction, ensuring reliable operation from various positions within the room.

4. Setup and Pairing


Follow these steps to set up and pair your Angrox AMZ3 remote control with your Fire TV device or Smart TV.

4.1. Inserting Batteries

1. Remove the battery cover from the back of the remote.
2. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
3. Replace the battery cover.

4.2. Pairing with Fire TV (Smart TV)

1. Insert 2*AAA batteries into the new remote.
2. Reset the new remote by pressing the **Back**, **Home**, and **Menu** buttons simultaneously for 10 seconds.
3. On your TV, navigate to **Settings** > **Controllers & Bluetooth Devices** > **Amazon Fire TV Remotes** > **Add new remote**.
4. Follow the on-screen prompts to complete the pairing process.

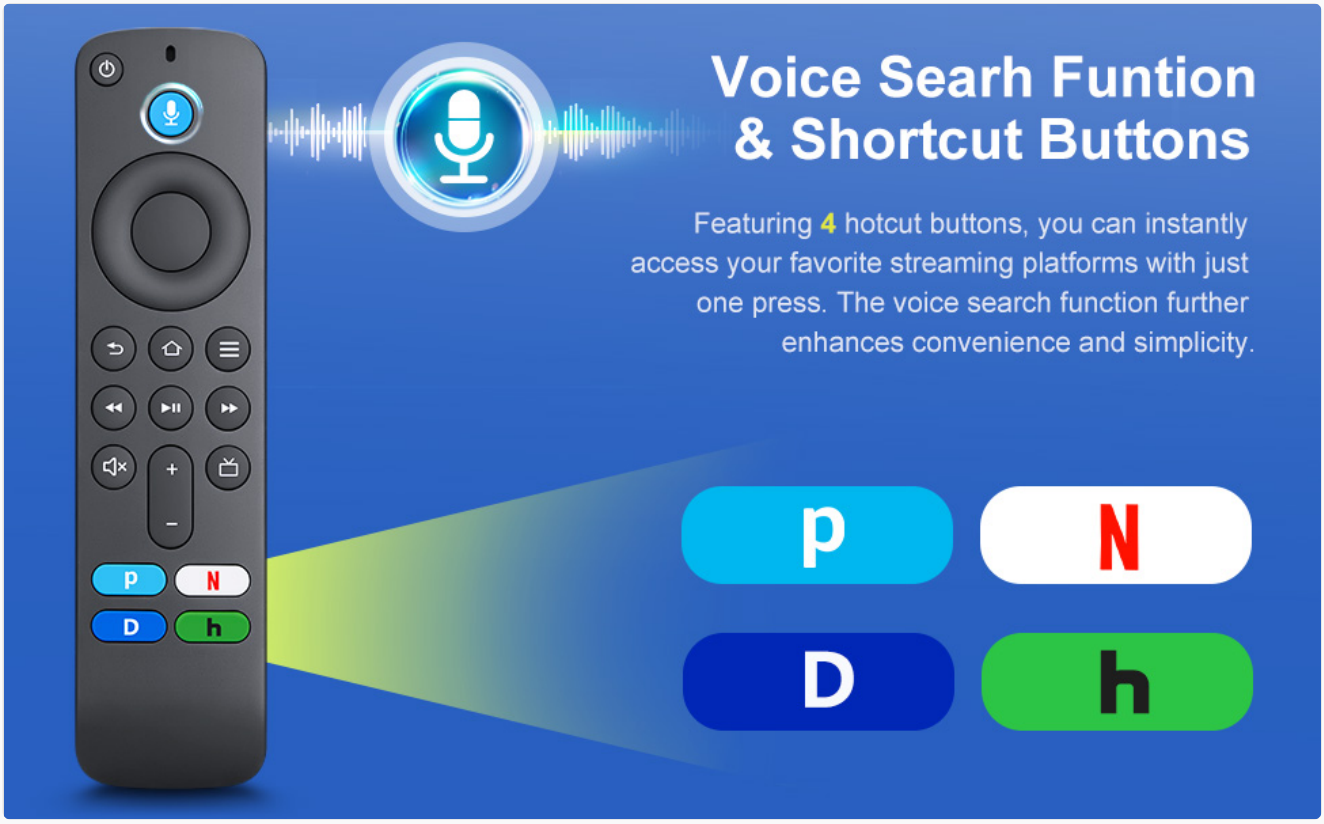

Step-by-step visual guide for pairing the remote control with a compatible Fire TV, showing menu navigation and button presses.

4.3. Pairing with Fire TV Stick

1. Insert 2*AAA batteries into the new remote.
2. Reset the new remote by pressing the **Back**, **Home**, and **Menu** buttons simultaneously for 10 seconds.
3. Ensure your Fire TV system has been updated before pairing. Navigate to **Settings** > **My Fire TV** > **About** > **Check for Updates**.
4. Unplug the power cord of your Fire TV Stick device, wait for 5 seconds, then plug it back in.
5. Once the 'Pairing Tip' appears on the home screen, press and hold the **Home** button on the new remote for 10 seconds.



Visual instructions detailing the process of pairing the remote control with a Fire TV Stick, including battery insertion and system update checks.

5. Operating Instructions

Familiarize yourself with the buttons on your Angrox AMZ3 remote control:



This diagram identifies each button on the remote control, including Power, Microphone, Navigation, Select, Back, Home, Menu, Play/Pause, Fast Forward, Rewind, Mute, Volume, and Preset App Buttons.

- **Power Button**: Turns your TV or Fire TV device on/off.
- **Microphone Button**: Activates voice search to control your device or search for content.
- **Navigation Ring**: Use to move up, down, left, or right through menus and content.
- **Select Button** (center of navigation ring): Confirms selections.
- **Back Button**: Returns to the previous screen or menu.
- **Home Button**: Navigates to the main home screen.
- **Menu Button**: Opens context-sensitive menus or options.
- **Rewind**, **Play/Pause**, **Fast Forward**: Standard media playback controls.
- **Volume Up (+)** / **Down (-) Buttons**: Adjusts the audio volume.
- **Mute Button**: Mutes or unmutes the audio.
- **Guide Button**: Accesses the TV guide (if supported by your device/service).
- **Preset App Buttons** (Prime Video, Netflix, Disney+, Hulu): Direct access to these streaming applications.

Your browser does not support the video tag.

Video demonstrating the features and compatibility of the Angrox voice replacement remote control for Fire TV Stick. This video provides an overview of the Angrox voice replacement remote control, showcasing its compatibility with various Fire TV devices and highlighting its key functions, including voice control and quick access buttons.

6. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or if the indicator light does not illuminate. Always use two new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or exposing it to excessive force, which can cause internal damage.

7. Troubleshooting

If you encounter issues with your Angrox AMZ3 remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
    a. Ensure batteries are correctly inserted and not depleted. Replace with fresh AAA batteries if necessary.
    b. Move closer to your Fire TV device or Smart TV.
    c. Re-pair the remote by following the steps in Section 4.2 or 4.3.
- **Voice Control Not Working:**
    a. Ensure the remote is properly paired.
    b. Check your device's internet connection.
    c. Speak clearly and hold the microphone button while speaking.
- **TV Turns On Randomly:**
    a. This can sometimes occur due to signal interference or device settings. Try holding the power button on the remote for 3-5 seconds to reset its power state.
    b. Unplug your Fire TV device from its power source for 5 seconds, then plug it back in.
- **Buttons Not Functioning Correctly:**
    a. Clean the remote's surface and buttons to remove any debris that might be obstructing them.
    b. If specific buttons are unresponsive, try re-pairing the remote.

8. Specifications

Feature	Specification
Model Number	AMZ3
Product Dimensions	5.7 x 1.49 x 0.7 inches

Feature	Specification
Item Weight	1.6 ounces
Batteries Required	2 AAA batteries (not included)
Special Features	Ergonomic, No Programming Required, Universal, Voice Search
Color	Black
Max Number of Supported Devices	3

9. Support

For further assistance, please refer to the manufacturer's official website or contact their customer support. The package includes one replacement voice remote control and one user manual.

© 2025 Angrox. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D49HKPMG

More documents and user manuals: **https://manuals.plus/**