NSHUNYI POLYCUT 28-2

NSHUNYI POLYCUT 28-2 Trimmer Head Instruction Manual

For Stihl FS56, FS70, FS89, FS91, FS94 Series Trimmers

1. Introduction

This manual provides essential instructions for the safe and effective use, installation, and maintenance of your NSHUNYI POLYCUT 28-2 Trimmer Head. This replacement trimmer head is designed for compatibility with various Stihl trimmer models, including FS56, FS70, FS89, FS91, and FS94 series.
Please read this manual thoroughly before installation and operation to ensure proper function and to prevent injury or damage.

2. Important Safety Information

WARNING: Failure to follow these safety instructions may result in serious injury or death.

- Always wear safety glasses and gloves when installing, operating, or maintaining the trimmer head.
- Keep bystanders, children, and pets at a safe distance (at least 50 feet or 15 meters) from the operating area.
- Do not operate the trimmer in enclosed areas. Ensure adequate ventilation to avoid inhaling exhaust fumes.
- Before each use, inspect the trimmer head for any damage, cracks, or loose parts. Replace damaged components immediately.
- Ensure the trimmer head is securely attached to the trimmer shaft before operation.
- Always turn off the trimmer engine and disconnect the spark plug wire before performing any maintenance or installation.

3. Package Contents

Your NSHUNYI POLYCUT 28-2 Trimmer Head package should contain the following items:

- 1 x NSHUNYI POLYCUT 28-2 Trimmer Head
- Replacement cutting lines (typically included, verify packaging)

- Instruction Manual (this document)



Figure 1: Front view of the NSHUNYI POLYCUT 28-2 Trimmer Head in its retail packaging, showing the clear plastic housing and orange cutting blades.

4. Setup and Installation

Follow these steps to properly install the NSHUNYI POLYCUT 28-2 Trimmer Head onto your compatible Stihl trimmer.

1. **Prepare the Trimmer:** Ensure the trimmer engine is turned off and cool. Disconnect the spark plug wire to prevent accidental starting.
2. **Remove Existing Head (if applicable):** If replacing an old trimmer head, refer to your Stihl trimmer's manual for specific removal instructions. Typically, this involves locking the shaft and unscrewing the old head.
3. **Attach New Trimmer Head:** Align the NSHUNYI POLYCUT 28-2 Trimmer Head with the trimmer shaft's threads. Screw the head onto the shaft by hand, ensuring it threads smoothly.
4. **Secure the Head:** Use a wrench or the tool provided with your trimmer (if applicable) to tighten the trimmer head securely. Do not overtighten, but ensure it is firm and will not loosen during operation.
5. **Verify Compatibility:** This trimmer head is designed for Stihl models FS56, FS70, FS89, FS91, FS94. Refer to the back of the packaging for a detailed list of compatible models.

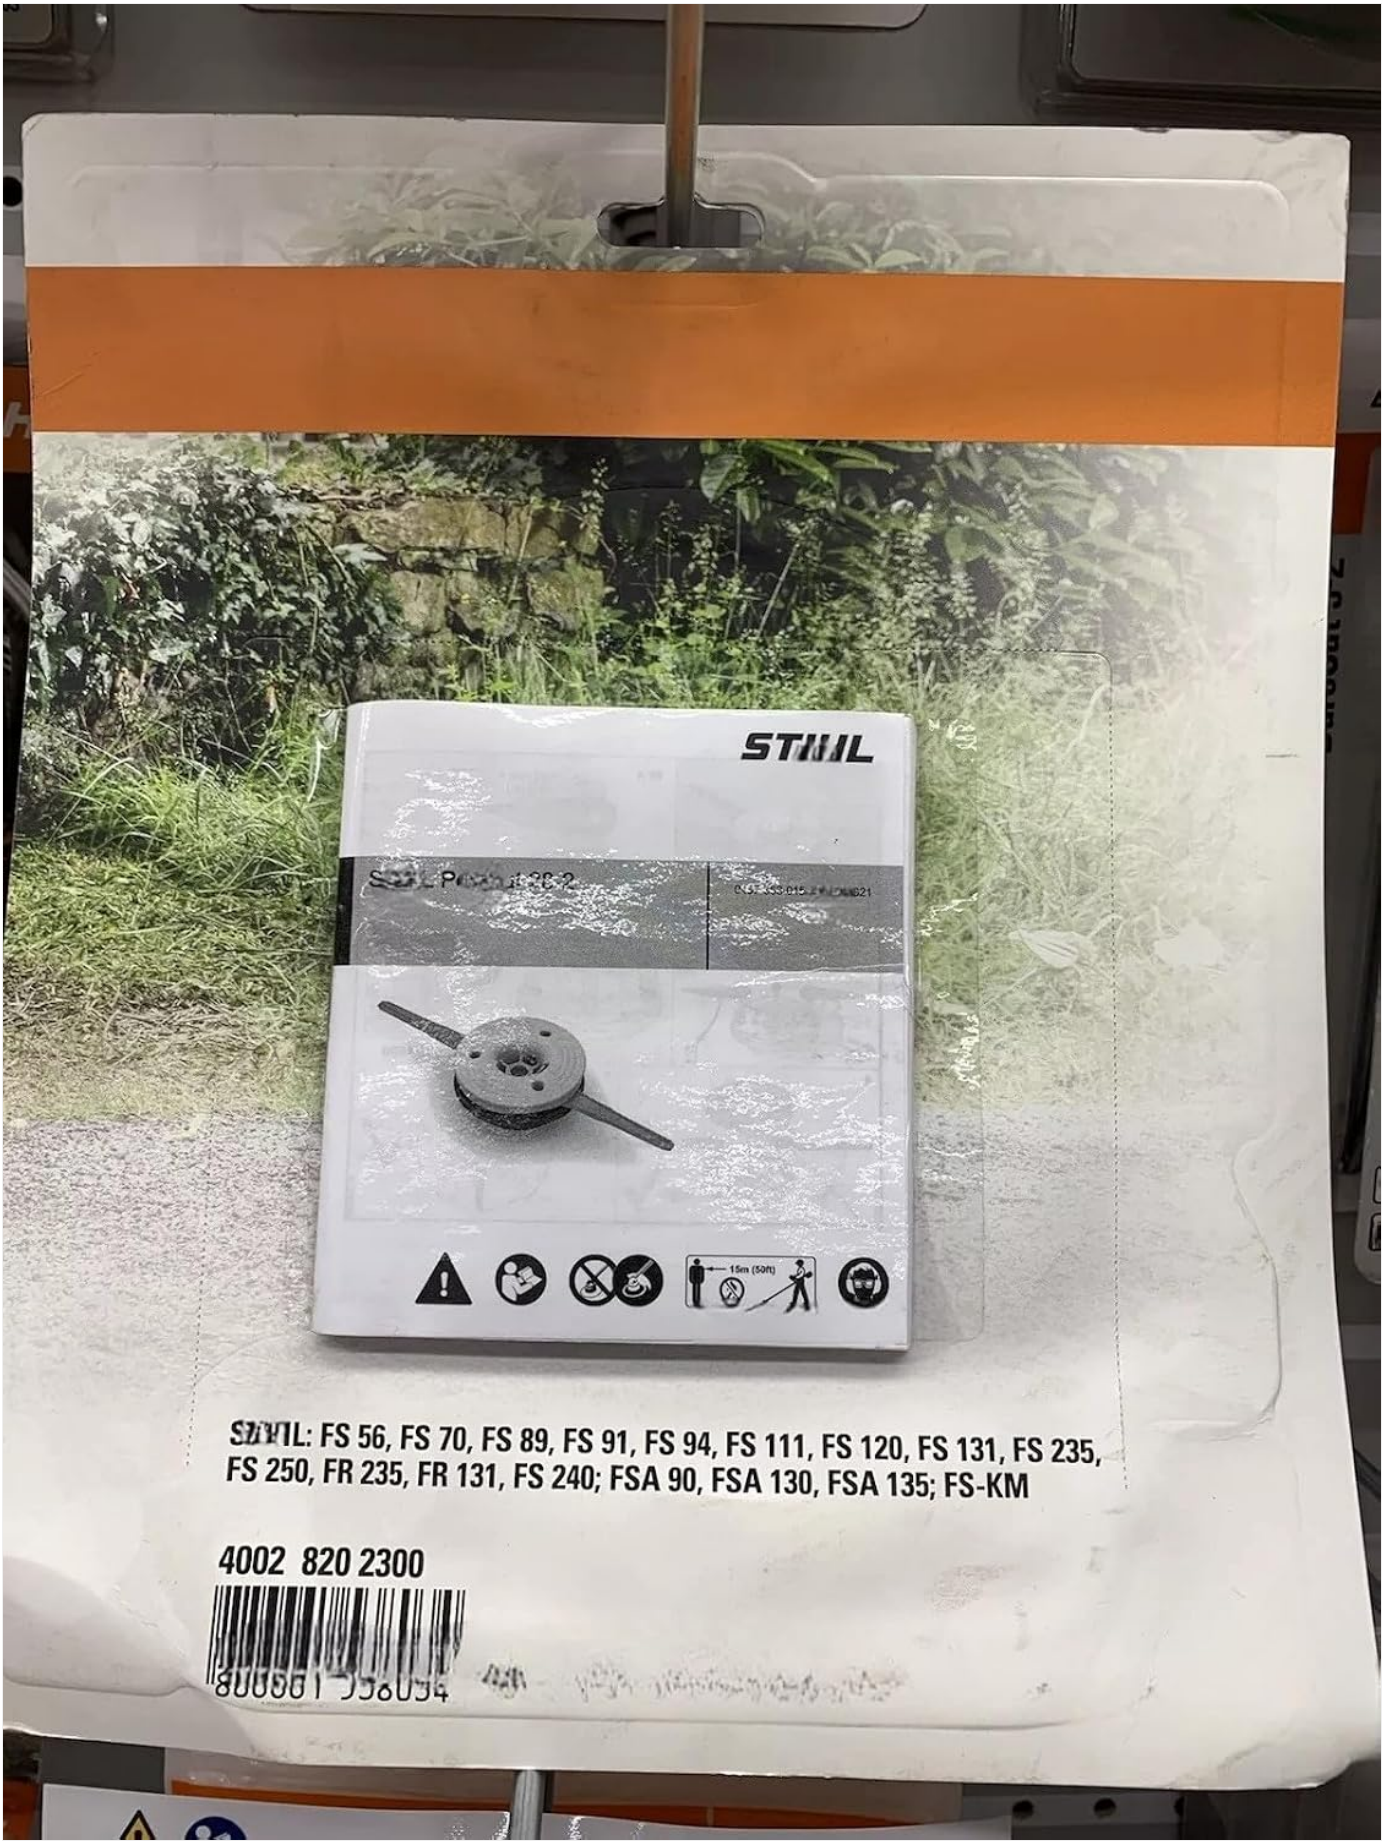


Figure 2: Back view of the NSHUNYI POLYCUT 28-2 Trimmer Head packaging, displaying a list of compatible Stihl trimmer models (FS56, FS70, FS89, FS91, FS94, FS111, FS120, FS131, FS235, FS250, FR131, FS240, FSA90, FSA130, FS135, FS-KM).

5. Operating Instructions

Once the trimmer head is securely installed, follow your trimmer's operating instructions. The NSHUNYI POLYCUT 28-2 Trimmer Head functions similarly to other polycut heads.

- **Starting the Trimmer:** Follow the manufacturer's instructions for starting your specific Stihl trimmer model.
- **Cutting Technique:** Use a sweeping motion to cut grass and weeds. Avoid hitting hard objects like rocks, fences, or concrete, as this can damage the cutting lines and the trimmer head.
- **Line Replacement:** When the cutting lines wear down, they can be easily replaced. Turn off the trimmer, disconnect the spark plug, and follow the instructions provided with your replacement lines or refer to the trimmer head's design for line insertion.
- **Safety During Operation:** Always maintain a firm grip on the trimmer, keep your balance, and be aware of your surroundings.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your trimmer head.

- **Cleaning:** After each use, clean the trimmer head to remove grass clippings, dirt, and debris. Use a stiff brush or cloth. Do not use harsh chemicals that could damage the plastic.
- **Inspection:** Periodically inspect the trimmer head for signs of wear, cracks, or damage. Check the cutting lines for wear and replace them as needed.
- **Storage:** Store the trimmer head in a clean, dry place away from direct sunlight and extreme temperatures.

7. Troubleshooting

If you encounter issues with your NSHUNYI POLYCUT 28-2 Trimmer Head, consider the following common solutions:

Problem	Possible Cause	Solution
Trimmer head not cutting effectively.	Worn or damaged cutting lines.	Replace cutting lines with new ones.
Trimmer head vibrates excessively.	Improperly installed head or damaged components.	Ensure the head is securely tightened. Inspect for damage and replace if necessary.
Cutting lines break frequently.	Hitting hard objects; incorrect line type; old/brittle lines.	Avoid hitting hard objects. Use appropriate replacement lines. Replace old lines.

If problems persist, consult your Stihl trimmer's original manual or contact NSHUNYI customer support.

8. Specifications

Feature	Detail
Brand	NSHUNYI
Model	POLYCUT 28-2 Trimmer Head
Compatibility	Stihl FS56, FS70, FS89, FS91, FS94 series (and others listed on packaging)
Part Number (OEM Equivalent)	4002 820 2300

Feature	Detail
Cutting Width	28 Centimeters
Maximum Speed	7000 RPM
Assembly Required	Yes
UPC	635401171976

9. Warranty and Support

For warranty information or technical support regarding your NSHUNYI POLYCUT 28-2 Trimmer Head, please refer to the product packaging or contact NSHUNYI customer service directly. Contact details are typically available on the manufacturer's official website or through the retailer where the product was purchased.

© 2025 NSHUNYI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question