Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JIKOCXN C5

JIKOCXN C5 11-inch Android 14 Tablet User Manual

Model: C5 | Brand: JIKOCXN

1. Introduction

This manual provides essential information for setting up, operating, and maintaining your JIKOCXN C5 11-inch Android 14 Tablet. Please read it thoroughly to ensure optimal performance and longevity of your device.

What's in the Box

- JIKOCXN C5 Tablet
- User Manual
- Charging Cable

Note: The 18W power adapter is sold separately.

2. Device Overview

Familiarize yourself with the physical components of your JIKOCXN C5 tablet.



Image: Front and back view of the JIKOCXN C5 tablet, highlighting its sleek design and rear camera module.

Key Components

- **11-inch IPS Display:** High-definition screen for clear visuals.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For capturing photos and videos.
- **Power Button:** To turn the device on/off or wake/sleep.
- **Volume Buttons:** To adjust audio levels.
- **USB-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expandable storage.
- **Speakers:** For audio output.

3. Setup

3.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB-C charging cable to the tablet's USB-C port and a compatible 18W power adapter (sold separately). The battery indicator on the screen will show charging status.



Image: The JIKOCXN C5 tablet displaying charging status and indicating 5G WiFi and Bluetooth 5.0 connectivity.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the JIKOCXN logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password).

3.4 Setting Up Face Unlock

Face Unlock provides a convenient way to secure your tablet.

1. Go to **Settings** > **Security & privacy** > **Face unlock**.
2. Follow the on-screen instructions to register your face. Ensure you are in a well-lit area.
3. Once set up, you can unlock your tablet by simply looking at the front camera.

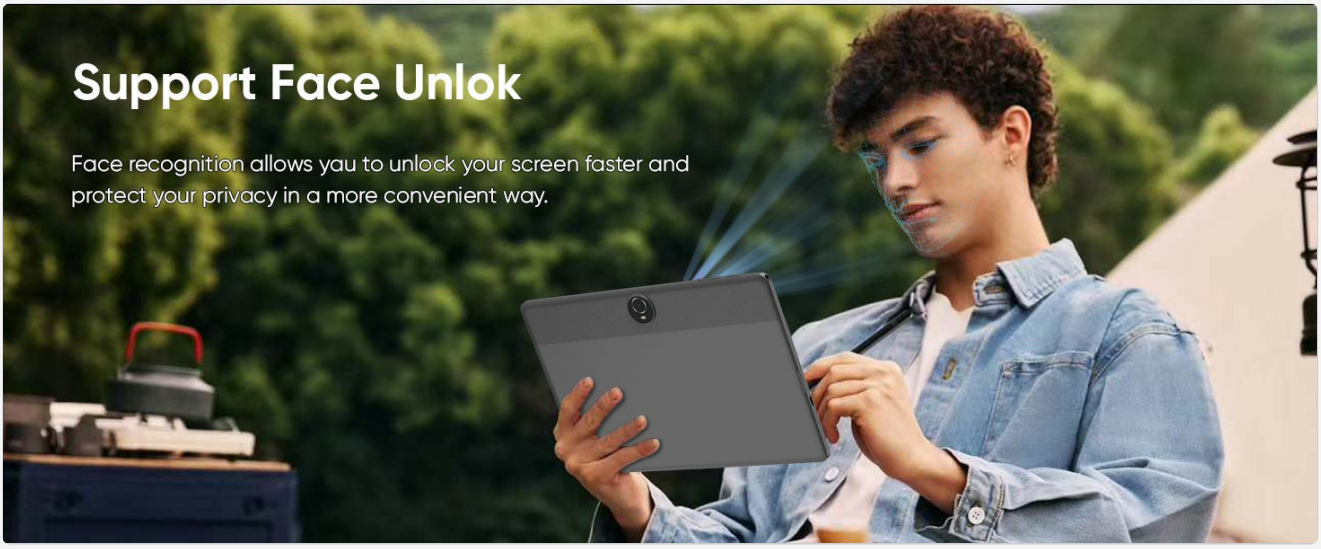


Image: A person demonstrating the face unlock feature on the JIKOCXN C5 tablet, showing the tablet recognizing their face.

4. Operating Your Tablet

4.1 Basic Navigation

Your JIKOCXN C5 tablet uses standard Android touch gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

4.2 Wi-Fi and Bluetooth Connectivity

The tablet supports 2.4G/5GHz Wi-Fi and Bluetooth 5.0 for fast and stable connections.

- **Wi-Fi:** Go to **Settings** > **Network & internet** > **Wi-Fi**. Turn Wi-Fi on and select your desired network.
- **Bluetooth:** Go to **Settings** > **Connected devices** > **Bluetooth**. Turn Bluetooth on and pair with compatible devices.



Image: A visual representation of the JIKOCXN C5 tablet's WiFi 6 and Bluetooth 5.0 capabilities, with data streams flowing towards the device.

4.3 Storage Management and Expansion

Your tablet comes with 128GB of internal storage. You can expand this by up to 1TB using a microSD card.

- **Inserting a MicroSD Card:** Locate the card slot on the side of the tablet. Carefully insert the microSD card until it clicks into place.
- **Checking Memory Expansion:** The tablet features 12GB RAM (6GB physical + 6GB virtual expansion). To verify, navigate to **Settings** > **System** > **Memory Expansion**.



Image: The JIKOCXN C5 tablet showcasing its large storage capacity with icons representing 12GB RAM, 128GB ROM, and support for 1TB Micro SD expansion.

4.4 Multimedia and Streaming

The 11-inch Full HD IPS display (1280x800) offers vibrant visuals. With Widevine L1 support, you can enjoy high-definition streaming from platforms like Netflix, Hulu, Prime Video, and Disney+.



Image: The JIKOCXN C5 tablet screen comparing L1 (1080P) and L3 Widevine levels, indicating support for high-definition streaming from various platforms.

4.5 Smart Features

- **Wireless Projection:** Cast your tablet's screen to a compatible display or TV. Access this feature from the quick settings panel or **Settings** > **Connected devices** > **Cast**.
- **Child Protection:** Utilize Google's Family Link or similar features to manage screen time and content access for children.
- **Split-Screen Mode:** Use two apps simultaneously. Long-press the recent apps button or swipe up and hold from the bottom of the screen, then drag an app to one side.



Image: The JIKOCXN C5 tablet showing wireless projection to a larger screen and a user interacting with the face recognition feature.

5. Maintenance

5.1 Battery Care

The 8000mAh battery provides 8-10 hours of usage. To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely regularly.
- Use the recommended 18W charger for optimal charging speed.
- Adjust screen brightness and disable unnecessary features (Wi-Fi, Bluetooth, GPS) when not in use.



Image: The JIKOCXN C5 tablet displaying a 90% charge level, with icons indicating standby time, website browsing, music playback, and video playback durations.

5.2 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals that could damage the display or finish.

5.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements.

- Go to **Settings** > **System** > **System update**.
- Follow the on-screen prompts to check for and install any available updates.

6. Troubleshooting

If you encounter issues with your tablet, refer to the following common solutions:

Tablet Not Turning On or Charging

- Ensure the tablet is sufficiently charged. Connect it to a power source for at least 30 minutes.
- Try a different charging cable and adapter.
- Perform a forced restart by holding the Power button for 10-15 seconds.

Slow Performance

- Close unnecessary background applications.
- Clear cache data for frequently used apps (**Settings** > **Apps** > [App Name] > **Storage & cache** > **Clear cache**).
- Ensure you have sufficient free storage space.
- Restart the tablet.

Wi-Fi or Bluetooth Connectivity Issues

- Toggle Wi-Fi/Bluetooth off and on.
- Restart your router (for Wi-Fi issues).
- Forget the network/device and reconnect.

Display Issues

- Adjust screen brightness in quick settings or**Settings** > **Display**.
- If the screen is unresponsive, perform a forced restart.

7. Specifications

Key technical specifications for the JIKOCXN C5 Tablet:

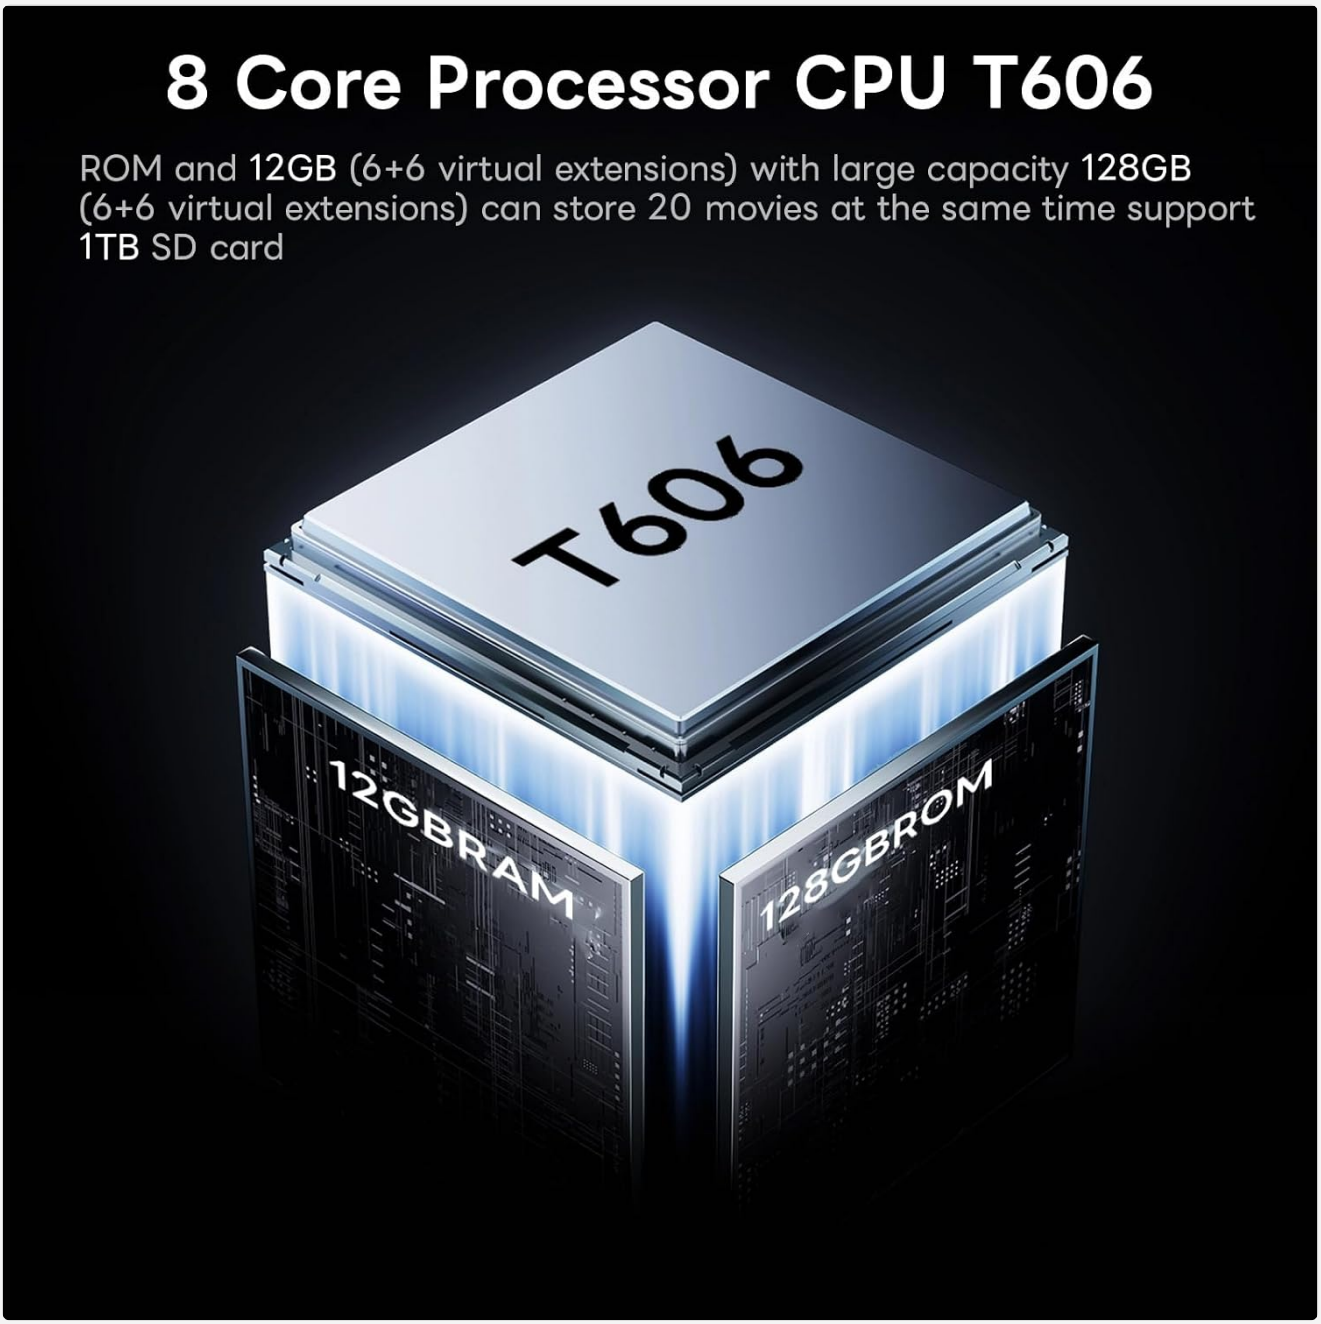


Image: A detailed view of the JIKOCXN C5 tablet's internal components, emphasizing the 8-core T606 processor, 12GB RAM, and 128GB ROM.

Feature	Specification
Model Name	C5
Operating System	Android 14
Processor	Unisoc T606 Octa-core (1.62GHz)
RAM	12GB (6GB physical + 6GB expansion)
Internal Storage	128GB
Expandable Storage	Up to 1TB via MicroSD card
Display Size	11 Inches
Screen Resolution	1280 x 800 pixels (IPS)
Battery Capacity	8000mAh
Charging	18W Fast Charging support
Wireless Connectivity	2.4G/5GHz Wi-Fi (802.11ac), Bluetooth 5.0
GPS	GPS/GLONASS/BDS/GALILEO
Rear Camera	8 MP
Dimensions	9.65 x 6.5 x 0.4 inches
Item Weight	1.87 pounds

8. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official JIKOCXN website. Keep your proof of purchase for any warranty claims.
If you require further assistance or have questions not covered in this manual, please contact JIKOCXN customer service.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D4HFKWPJ

More documents and user manuals: **https://manuals.plus/**