ALLIMITY MM-HY-TVS32HD-006-NP

User Manual for ALLIMITY Compatible Remote Control

Model: MM-HY-TVS32HD-006-NP

1. Product Overview

This manual provides instructions for the ALLIMITY compatible remote control, designed to operate various TV models from brands such as STRONG, HYUNDAI, EDENWOOD, and BLAUPUNKT. This remote is a direct replacement and requires no programming.





Figure 1: Front view of the ALLIMITY compatible remote control. The remote is black with clearly labeled buttons for power, input, Netflix, YouTube, playback controls, navigation, volume, channel, number pad, and colored function buttons.

2. Setup and Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps for proper battery installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

3. Operating Instructions

This remote control is designed to be fully functional out of the box for compatible models. Simply point the remote at your television and press the desired button.

3.1. Button Functions

Button	Function
Power ( )	Turns the TV on or off.
Input	Selects the input source (HDMI, AV, etc.).
Netflix	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.
Volume (+/-)	Adjusts the volume level.
Channel (+/-)	Changes the TV channel.
OK	Confirms selections in menus.
Navigation Arrows	Navigates through menus and options.
Number Pad (0-9)	Direct channel entry or numerical input.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions depending on the TV menu or application.

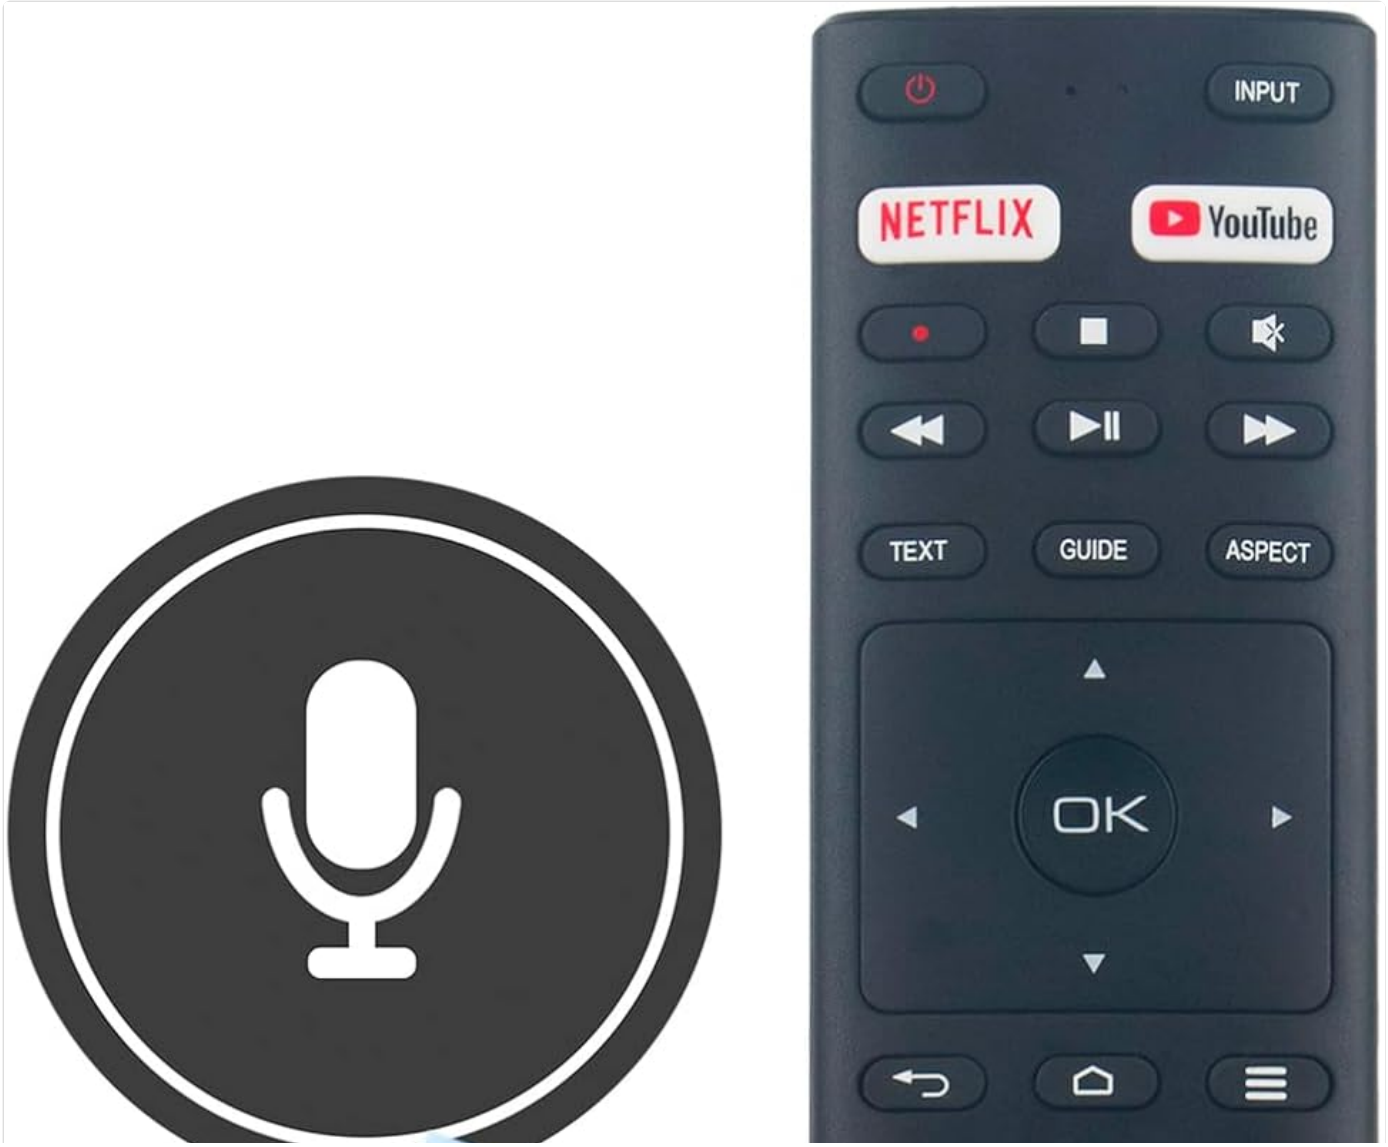




Figure 2: The remote control highlighting the voice assistant button. This button, located below the volume controls, allows for voice commands if supported by your television model.

4. Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Refer to Section 2 for battery installation instructions.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
  - Make sure you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
  - This remote is designed for specific TV models. Verify that your TV model is listed as compatible.

- Clean the remote control buttons and surrounding areas to ensure no debris is preventing proper contact.

- **Voice control not working:**
  - Ensure your TV model supports voice control and that it is enabled in the TV's settings.
  - Some voice control features may require an internet connection on your TV.

6. Specifications

Feature	Detail
Brand	ALLIMITY
Model Number	MM-HY-TVS32HD-006-NP
Dimensions	17 x 5 x 1 cm
Weight	59 grams
Connectivity Technology	Infrared
Maximum Range	10 Meters
Number of Buttons	25
Compatible Devices	STRONG, HYUNDAI, EDENWOOD, BLAUPUNKT TVs (models: 50UN265, ED43E00UHD-MM, ED32C01HD-MM, HY-TVS32HD-006, MSDV326BY-66830, 32HC4433, SRT43UC6433, SRT40FC4433, SRT65UC6433, 40FC4433, SRT32HC4433, SRT50UC6433, SRT-32HC4432)
Batteries Required	2 x AAA (not included)

7. Warranty and Support

For any questions or support regarding your ALLIMITY remote control, please refer to the seller's contact information on the platform where the purchase was made. This product is designed as a direct replacement and typically does not require extensive technical support beyond basic troubleshooting.
Please retain your proof of purchase for any warranty claims, if applicable, as per the seller's policy.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question