Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WOPET F01 Plus

WOPET Automatic Pet Feeder Instruction Manual

Brand: WOPET | **Model:** F01 Plus

1. Introduction and Overview

The WOPET Automatic Pet Feeder (Model: F01 Plus) is designed to simplify pet feeding, ensuring your beloved companions receive their meals consistently and on schedule. With a generous 7-liter capacity, this feeder can store enough dry food for several days, making it ideal for busy pet owners or during short trips. It features precise portion control, allowing you to customize up to 5 meals per day with adjustable serving sizes. The intuitive LED display and voice recording function enhance the user experience, while a reliable backup power system ensures uninterrupted feeding.



Figure 1.1: Front view of the WOPET Automatic Pet Feeder with food in the tray.

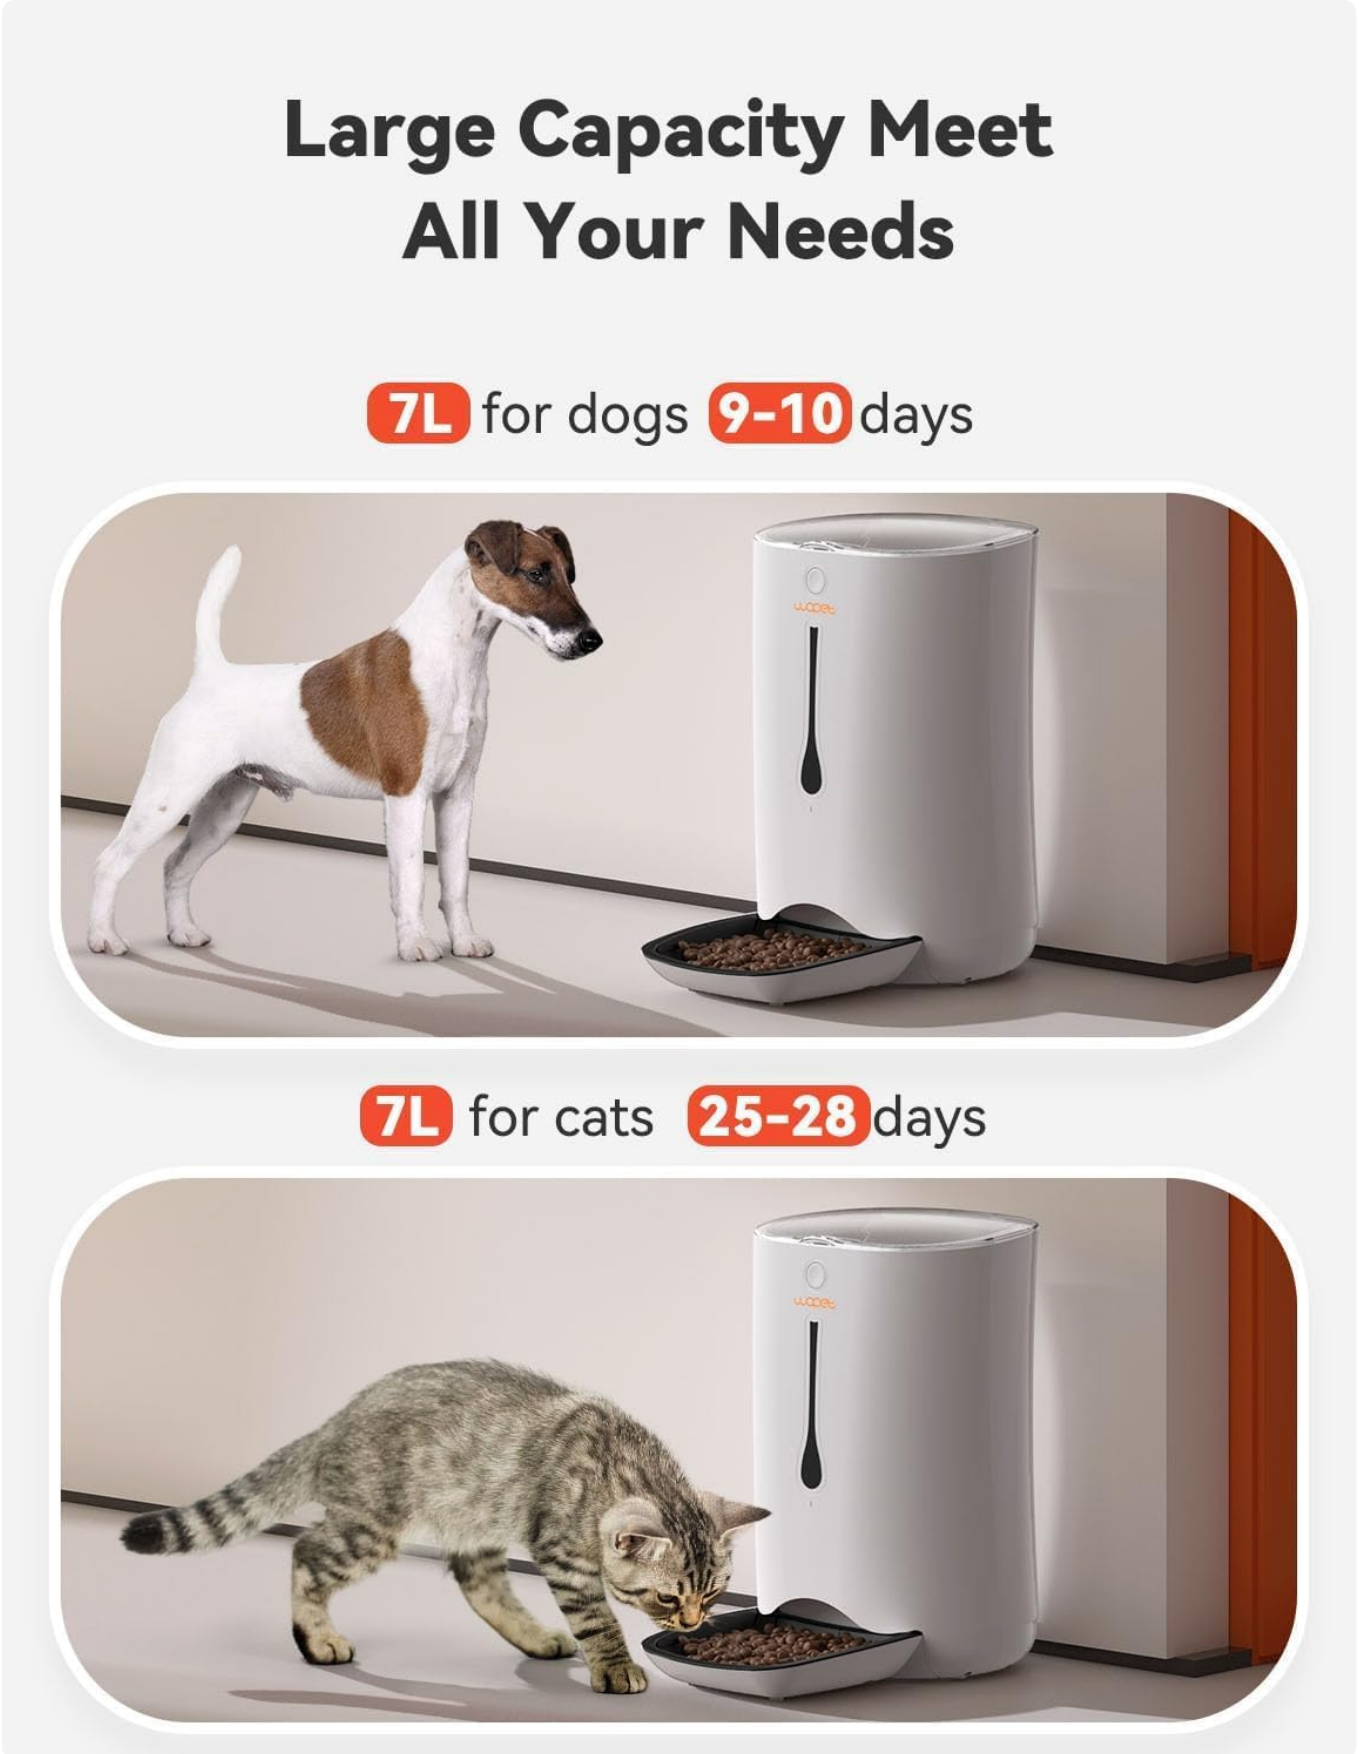


Figure 1.2: Illustration of the 7L capacity, suitable for 9-10 days for dogs and 25-28 days for cats.

2. Setup Instructions

Follow these steps to assemble and power your WOPET Automatic Pet Feeder:

1. **Unpack Components:** Carefully remove all components from the packaging, including the main feeder unit, food bucket, food tray, and power adapter.
2. **Install Food Bucket:** Press the button on the top of the feeder to open the cover. Place the food bucket securely into the main feeder unit.
3. **Attach Food Tray:** Slide the food tray into the designated slot at the base of the feeder until it clicks into place.
4. **Power Connection:**
   - **Battery Installation (Optional but Recommended):** Open the battery cover at the bottom of the feeder and insert three D-sized alkaline batteries (not included). This provides backup power in case of an outage.
   - **AC Adapter Connection:** Connect the USB power cable to the port at the base of the pet feeder and plug the adapter into a wall outlet.
5. **Fill with Dry Food:** Open the feeder cover and fill the food bucket with dry pet food. The recommended pellet size is 0.2-0.6 inches. Press the cover lightly to lock it securely.

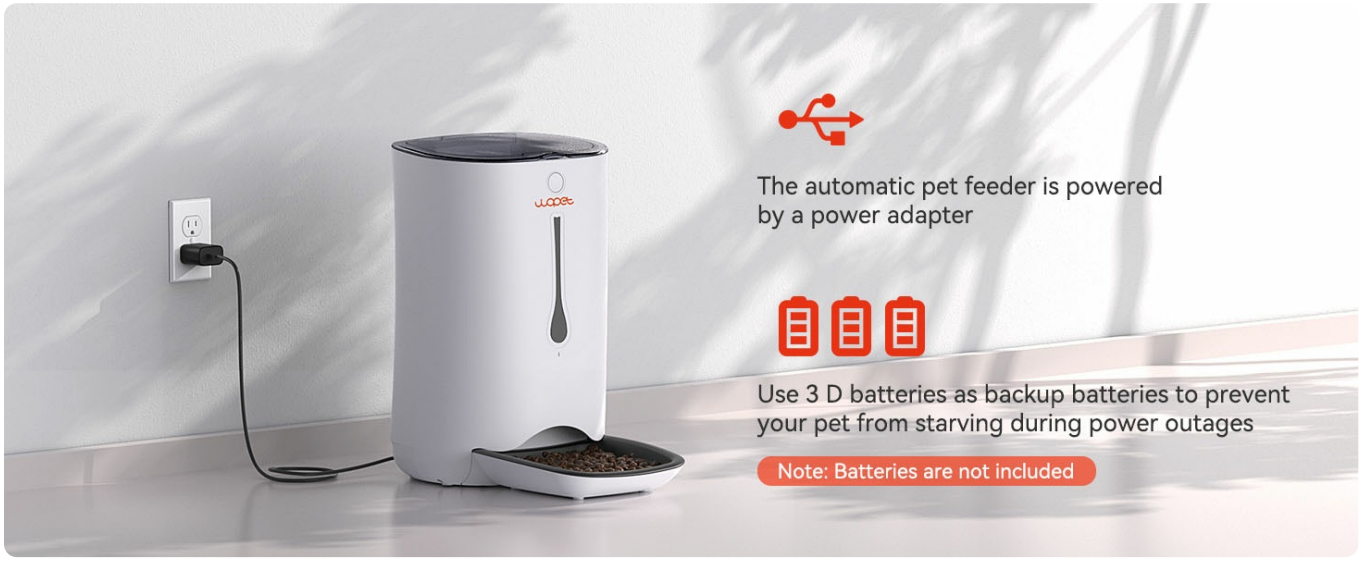


Figure 2.1: Powering the feeder with the AC adapter and optional D batteries for backup.

Video 2.1: Detailed assembly and power setup guide for the WOPET Automatic Pet Feeder. This video demonstrates how to unpack, assemble the food bucket and tray, and connect both battery and AC power sources.

3. Operating Instructions

The WOPET feeder offers flexible programming options to suit your pet's needs.

3.1 Setting Current Time

1. Plug in the adapter; the LED screen will light up.
2. Press and hold the 'Back/Lock' button for 2 seconds until you hear a "Ding-Ding" sound to unlock the feeder.
3. Press and hold the 'Setting' button for 2 seconds until you hear a "Ding" sound to enter setting mode.
4. When the clock symbol is flashing, use the '+' and '-' buttons to set the hour.
5. Press the 'Setting' button again, then use the '+' and '-' buttons to set the minute.

6. Finally, press the 'Setting' button again to finish and move on to setting the first meal.

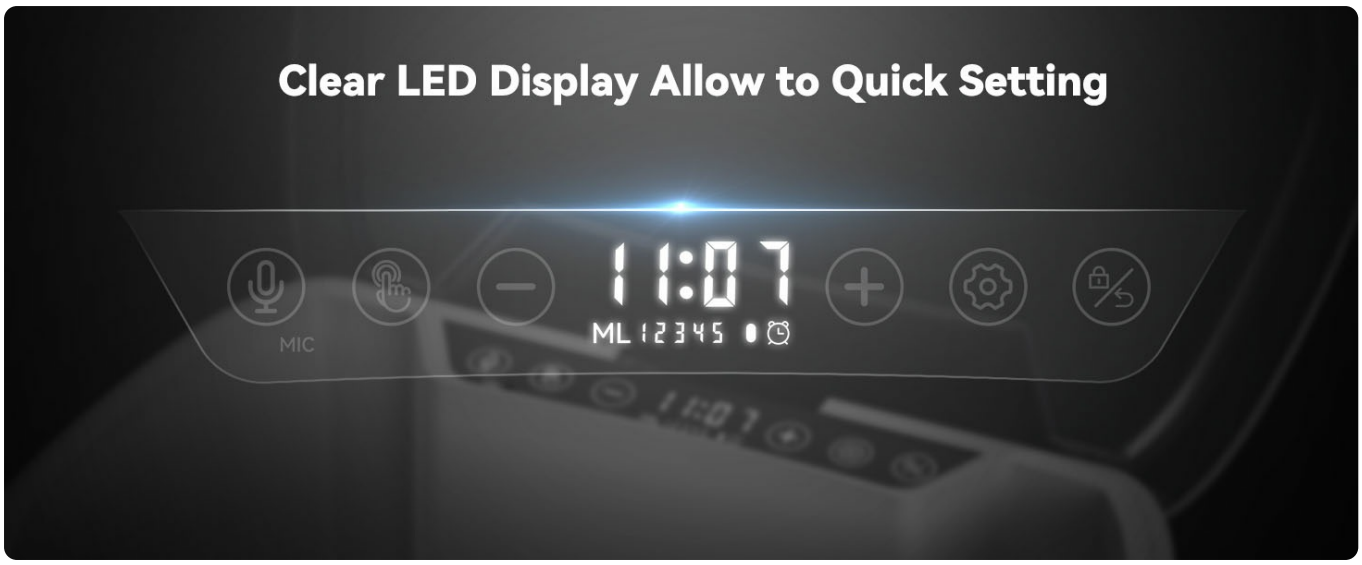


Figure 3.1: Clear LED display for quick setting of time and feeding schedules.

3.2 Programming Feeding Schedule and Portions

The feeder allows you to schedule up to 5 meals per day with customizable portions (1-40 portions per feeding, 10g per portion).

1. After setting the current time, "ML 1" will flash, indicating you can set the first meal.
2. Press the 'Setting' button to confirm the meal and set the portion size using '+' and '-' buttons.
3. After setting the portion, press the 'Setting' button to set the feeding time (hour and minute) using '+' and '-' buttons.
4. Press the 'Setting' button to save and move to set the next meal (ML 2, ML 3, etc.).
5. Repeat steps for meals 2-5. When finished, press the 'Setting' button to save and exit setting mode.

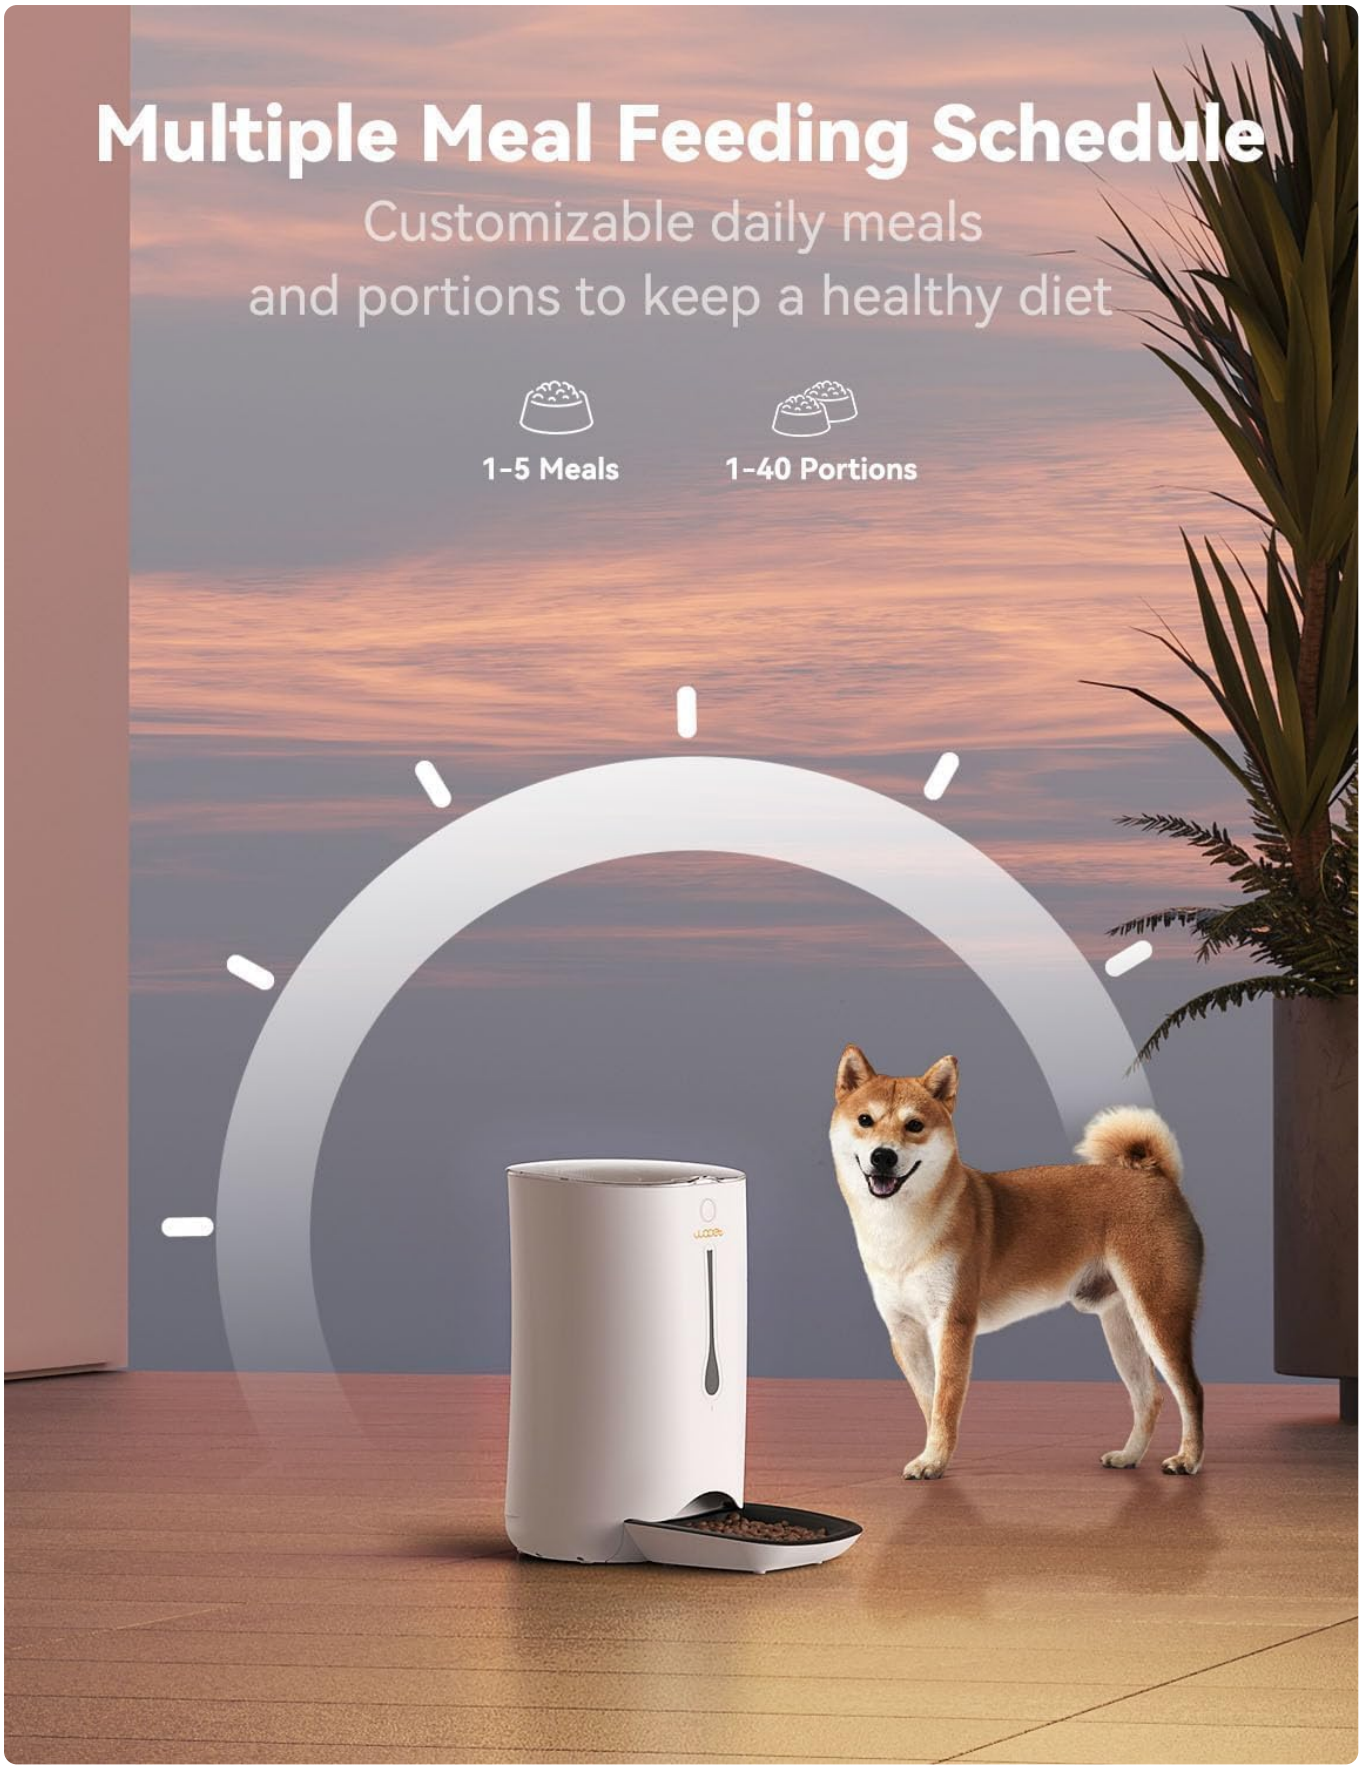


Figure 3.2: Visual representation of setting multiple meals and portion sizes.

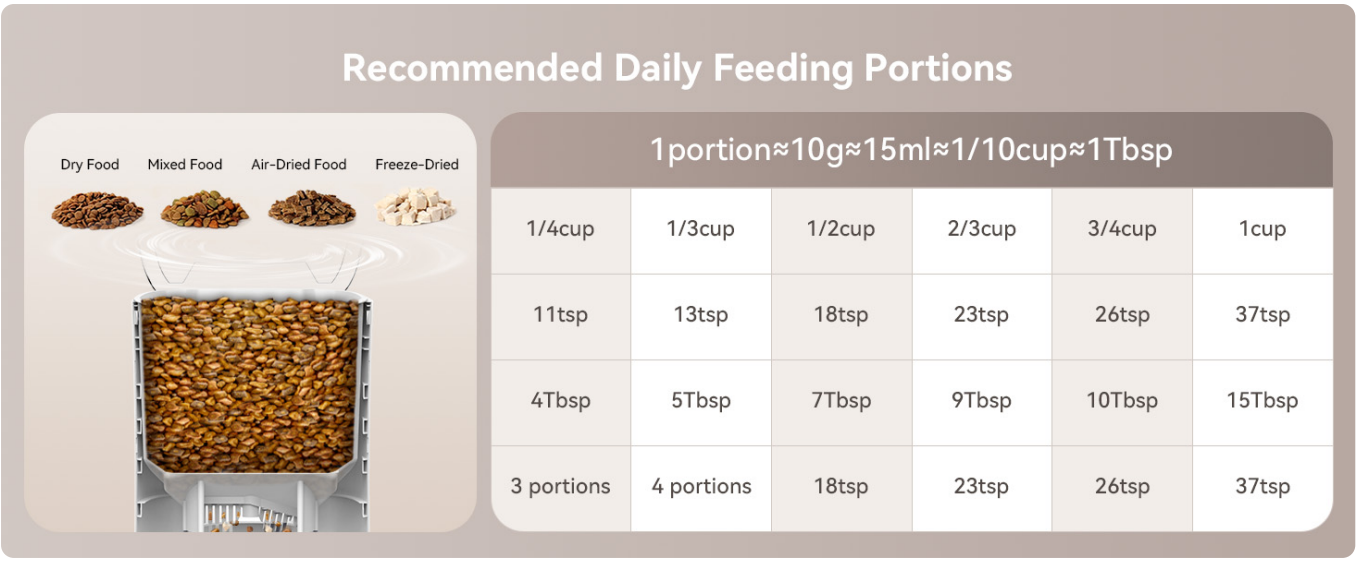


Figure 3.3: Chart showing recommended daily feeding portions based on weight (1 portion ≈ 10g).

3.3 Personalized Voice Message

Record a 10-second voice message that will play automatically at each feeding time to call your pet.

1. Long press the 'Recording' button (microphone icon) until you hear a "Ding" sound.
2. Begin recording your 10-second message.
3. Release the button when finished. You will hear two "Ding-Ding" sounds to confirm successful recording. Your message will play back.
4. To cancel a recording, long press the 'Recording' button until you hear a "Ding-Ding" sound, then release the button without recording a message.

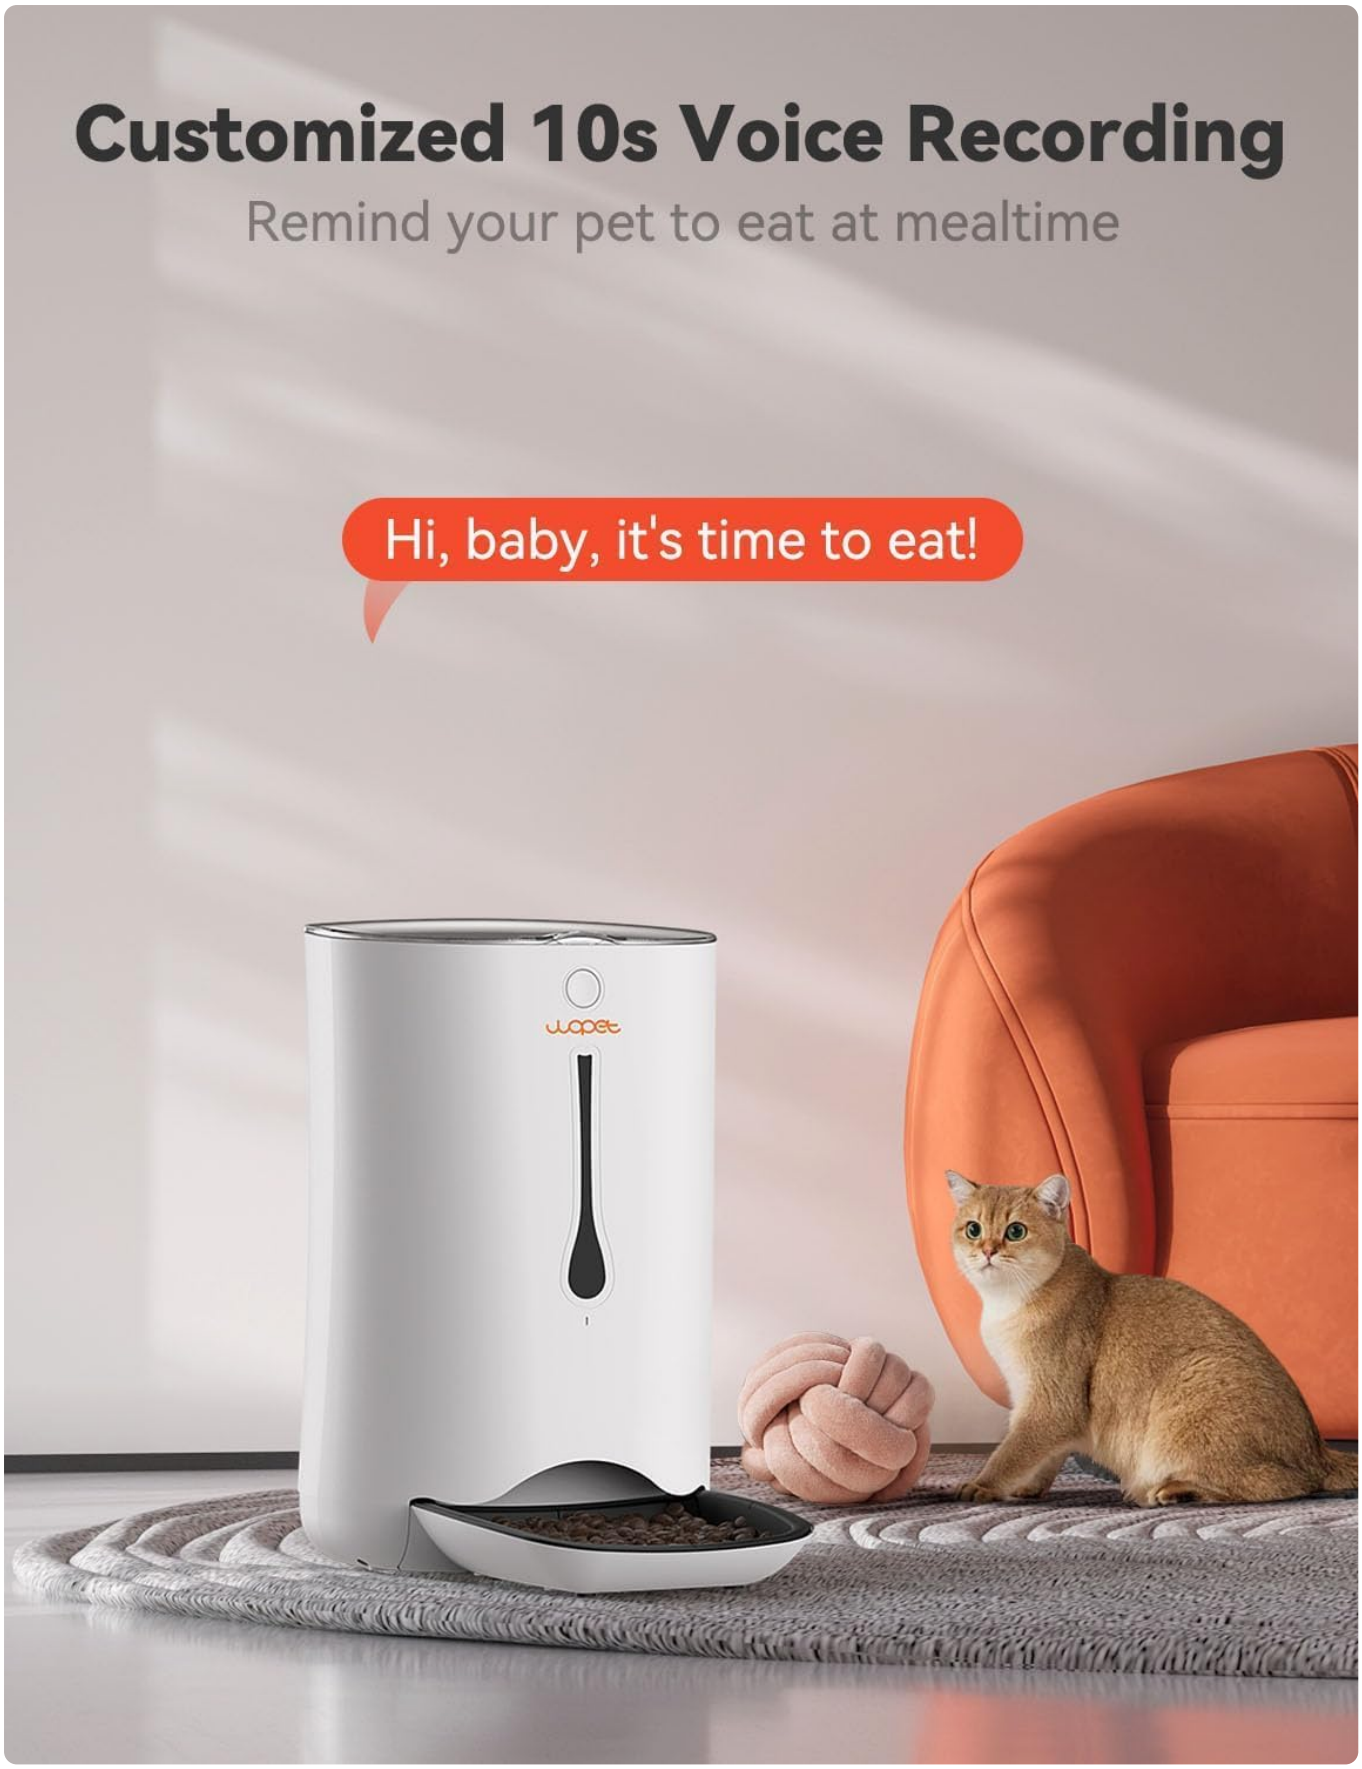


Figure 3.4: The feeder features a customized 10-second voice recording to call your pet at mealtime.

3.4 Manual Feeding

To dispense food manually at any time:

- Click the 'Manual Feeding' button (paw icon) to dispense one portion of food.

Video 3.1: This video demonstrates how to set the current time, program feeding schedules, record and cancel voice messages, and

manually dispense food. It provides a comprehensive guide to the feeder's operational features.

4. Maintenance

Regular cleaning ensures the longevity and hygiene of your pet feeder.

1. **Unplug and Remove Batteries:** Before cleaning, always unplug the feeder from the power outlet and remove any installed batteries.
2. **Disassemble Components:** Remove the food bucket and food tray from the main unit.
3. **Clean Components:** The food bucket and food tray are removable and can be cleaned with a damp cloth or are dishwasher safe. Ensure all parts are completely dry before reassembly.
4. **Wipe Main Unit:** Wipe the exterior of the main feeder unit with a damp cloth. Do not submerge the main unit in water.



Figure 4.1: Removable food tank and food bowls are easy to clean, ensuring a clean and secure diet for your pets.

Video 4.1: This video segment demonstrates the disassembly and cleaning process for the WOPET Automatic Pet Feeder, highlighting how to remove components for thorough cleaning.

5. Troubleshooting

If you encounter issues with your feeder, try the following:

- **Feeder Not Dispensing Food:**
  - Check if the feeder is properly plugged in or if batteries are installed and charged.
  - Ensure the food bucket is not empty.
  - Verify that the food chute is not blocked by large kibble or debris.
  - Check the programmed schedule to ensure feeding times are correctly set.

- **LED Display Not Working:**
  - Confirm the power adapter is connected and the outlet is functional.
  - If using batteries, check if they are correctly inserted and have sufficient charge.
- **Food Spillage:**
  - Ensure the food tray is correctly installed and not dislodged.
  - Check the portion size settings; reduce if too much food is being dispensed at once.
- **Restore Factory Settings:** If persistent issues occur, you can reset the feeder. Press the '+' and '-' buttons simultaneously for 5 seconds until you hear a "Ding-Ding" sound. This confirms factory settings have been restored.

6. Specifications

Feature	Detail
Brand	WOPET
Model Number	F01 Plus
Capacity	7 Liters (approx. 29 cups)
Material	BPA Free
Power Supply	AC Adapter (Included), 3 x D Batteries (Not Included)
Feeding Schedule	Up to 5 meals per day
Portion Control	1-40 portions per feeding (approx. 10g per portion)
Voice Recording	10-second personalized message
Recommended Kibble Size	0.2-0.6 inches (dry food only)
Item Weight	5.66 pounds
Product Dimensions	6 x 4 x 8 inches

7. Warranty and Support

WOPET is committed to providing high-quality products and customer satisfaction. For any questions, technical support, or warranty inquiries, please contact WOPET customer service through the contact information provided in your product packaging or on the official WOPET website. Please retain your proof of purchase for warranty claims.



Figure 7.1: WOPET - Boundless Love for Pets.

© 2024 WOPET. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D4YB37SV

More documents and user manuals: **https://manuals.plus/**