Dreo DR-HTF001

Dreo Tower Fan 42 Inch Cruiser Pro T1 User Manual

Model: DR-HTF001 | Brand: Dreo

Introduction

The Dreo Tower Fan 42 Inch Cruiser Pro T1 is designed to provide efficient and quiet air circulation for indoor spaces. Featuring a powerful motor, multiple speed and mode settings, and a wide oscillation angle, this fan offers customizable comfort. Its bladeless design ensures safety and ease of maintenance, making it suitable for various rooms including bedrooms, offices, and living areas.

Safety Instructions

Please read all safety instructions carefully before using this appliance to reduce the risk of fire, electric shock, or injury.

- Always unplug the fan before cleaning, disassembling, or moving it.
- Do not insert fingers or foreign objects into the fan grille.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not operate the fan with a damaged cord or plug.
- Keep the fan away from water or excessive humidity.
- This appliance is for indoor use only.
- Supervise children when the fan is in operation.

Package Contents

Verify that all components are present and in good condition upon unpacking.

- 1 × Tower Fan
- 1 × Remote Controller (Includes 1 × CR2032 Type Lithium Battery)
- 1 × Front Fan Base
- 1 × Rear Fan Base

- 4 × Thumbs Screws
- User Manual (This document)

Setup

Follow these steps to assemble your Dreo Tower Fan:

1. **Assemble the Base:** Align the front and rear fan base pieces and snap them together.
2. **Attach the Fan to the Base:** Place the tower fan body onto the assembled base, ensuring the alignment posts fit into the corresponding holes.
3. **Secure the Base:** Use the four thumbscrews provided to firmly attach the fan body to the base from underneath. Tighten securely.
4. **Position the Fan:** Place the fan on a flat, stable surface in your desired location, ensuring adequate space for oscillation.





Image: The Dreo Tower Fan 42 Inch Cruiser Pro T1 with its remote control, illustrating the assembled unit.

Operating Instructions

Your Dreo Tower Fan offers various settings for optimal comfort. All functions can be controlled via the touch panel on the fan or the included remote control.

Control Panel and Remote Control

The fan features an intuitive LED display and touch controls on top, mirrored by the functions on the remote control. The LED display will automatically dim after 20 seconds in Sleep Mode.

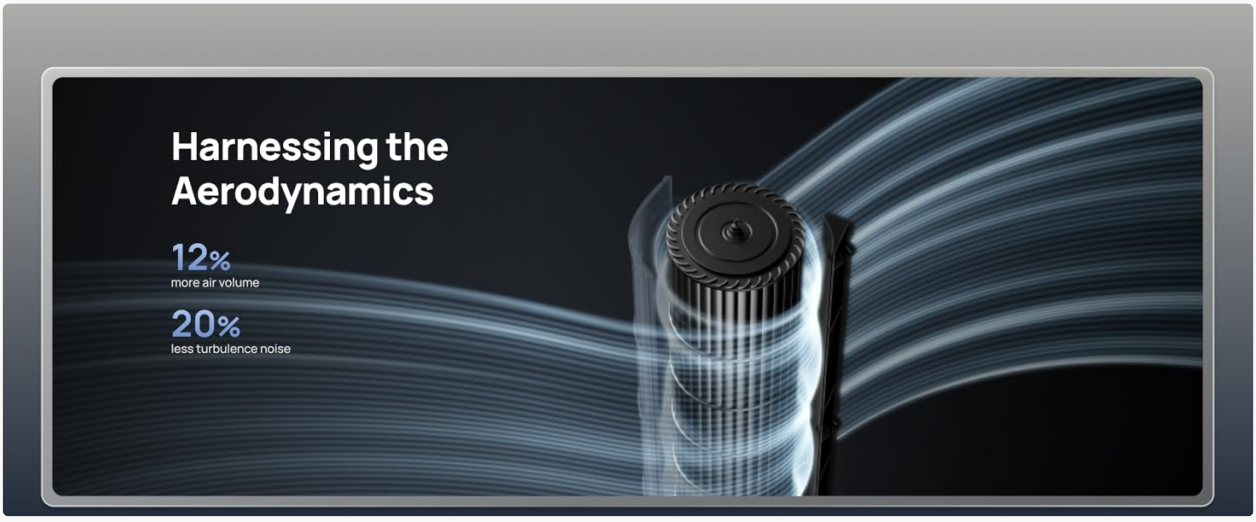


Image: Illustration of the fan's control panel and available modes (Sleep, Auto, Normal, Natural) and 6 wind speeds.

Modes and Speeds

- **Normal Mode:** Provides a consistent airflow at your selected speed (1-6).
- **Natural Mode:** Simulates natural breeze by cycling through different wind speeds.
- **Sleep Mode:** Gradually decreases fan speed and dims the LED display for quiet operation during sleep.
- **Auto Mode:** Automatically adjusts wind velocity based on the ambient room temperature to maintain a comfortable environment.
- **6 Speeds:** Choose from six fan speeds to customize airflow intensity.

Oscillation

The fan features a 900 oscillation function to distribute air across a wider area, enhancing air circulation in the room.

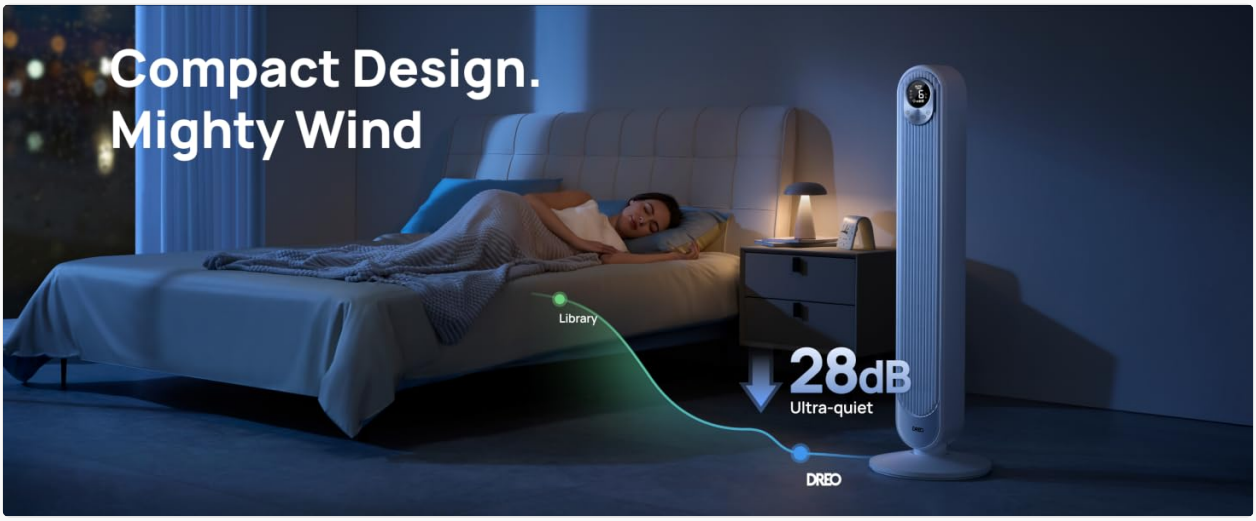


Image: Diagram showing the 90-degree oscillation range of the Dreo Tower Fan, indicating wide area coverage.

Timer Function

Set the fan to automatically turn off after a specified period, up to 12 hours, using the timer function.

Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your fan.

1. **Unplug the Fan:** Always disconnect the power cord before any cleaning or maintenance.
2. **Clean the Exterior:** Wipe the outer surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Clean the Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to remove dust from the air inlet and outlet grilles.
4. **Detachable Rear Grille and Rotor Cleaning:**
    - Carefully detach the rear grille by unscrewing the retaining screws.
    - Gently remove the fan rotor.
    - Wash the rotor under running water or wipe it clean with a damp cloth. Ensure it is completely dry before reinstallation.
    - Reinstall the rotor and secure the rear grille.



Image: A user demonstrating the detachable design of the fan for easy cleaning of the internal components.

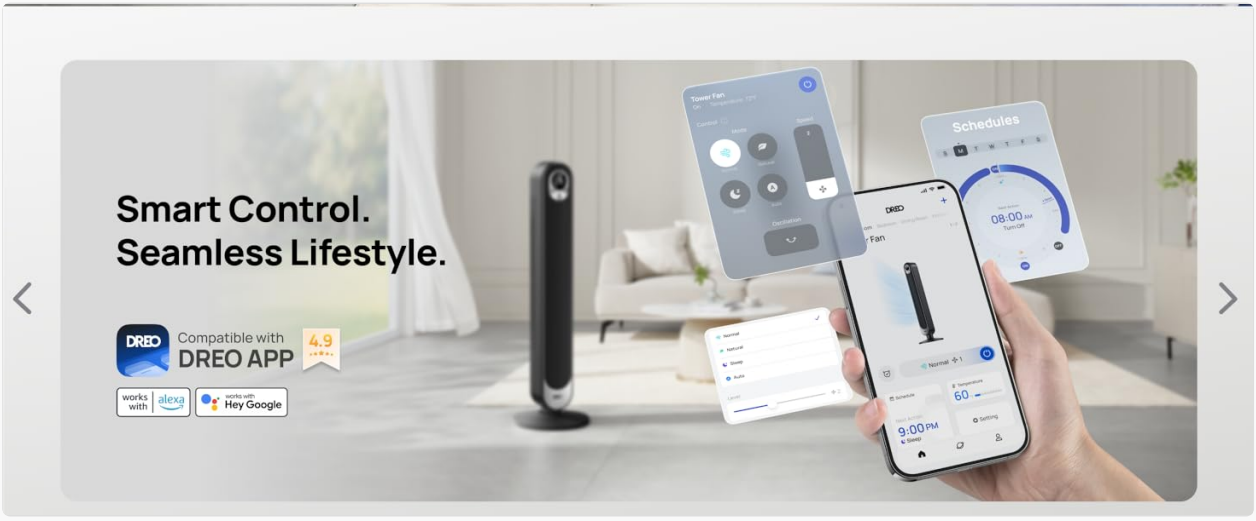


Image: Close-up of the fan rotor being cleaned under running water, highlighting the ease of maintenance.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Power button not pressed; Remote battery depleted.	Check power cord connection; Press power button on fan or remote; Replace remote battery.
Weak airflow.	Air inlets/outlets blocked; Fan speed too low.	Clean air inlets/outlets; Increase fan speed.
Fan is noisy.	Fan not on a level surface; Internal components dirty.	Place fan on a flat, stable surface; Clean the fan rotor and grilles.
Remote control not working.	Battery depleted; Obstruction between remote and fan; Remote not pointed at receiver.	Replace remote battery; Remove obstructions; Point remote directly at the fan's receiver.

Specifications

Feature	Detail
Brand	Dreo
Model Name	DR-HTF001
Color	White
Dimensions (D x W x H)	13"D x 13"W x 41.73"H
Item Weight	9.8 Pounds
Power Source	AC (120V)
Wattage	45 watts
Noise Level	34 dB (as low as 28dB in Sleep Mode)
Air Flow Capacity	1270 Cubic Feet Per Minute
Velocity	Up to 24ft/s
Oscillation	900 Electric Oscillating
Speeds	6
Modes	Normal, Natural, Sleep, Auto
Timer	12-Hour
Control Method	Remote, Touch Panel
Certifications	ETL

Warranty & Support

Dreo products come with a standard warranty. For detailed warranty information, product registration, or technical support, please visit the official Dreo website or contact their customer service.
Official Website: www.dreo.com
For further assistance, you may also refer to the contact information provided in the original product packaging.

© 2025 Dreo. All rights reserved.