Hotpoint NSWM 846 GG UK

Hotpoint Anti-stain NSWM 846 GG UK 8 kg Washing Machine User Manual

Model: NSWM 846 GG UK | Brand: Hotpoint

1. Introduction

Thank you for choosing the Hotpoint Anti-stain NSWM 846 GG UK 8 kg Washing Machine. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.



Figure 1.1: Front view of the Hotpoint NSWM 846 GG UK Washing Machine.

This washing machine is designed to provide excellent cleaning performance with features like Anti-stain technology and Steam Hygiene, ensuring your clothes are not only clean but also hygienically treated. Its 8 kg capacity is suitable for medium to large households.

2. Safety Information

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the appliance is properly earthed.
- Do not allow children to operate or play with the washing machine.
- Keep packaging materials out of reach of children.
- Do not install the appliance in areas exposed to extreme temperatures or direct sunlight.
- Never force the door open during operation.
- Unplug the appliance before cleaning or maintenance.
- Do not wash items that have been soiled with flammable substances.
- In case of malfunction, do not attempt to repair the appliance yourself. Contact qualified service personnel.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials. Check for any transport damage. Report any damage immediately to your retailer.

3.2 Placement

Place the washing machine on a flat, stable surface. Ensure there is adequate space around the appliance for ventilation and access.



Figure 3.1: Side view of the washing machine, illustrating its compact design.

3.3 Dimensions

Refer to the diagram below for precise dimensions to ensure proper fitting in your designated space.

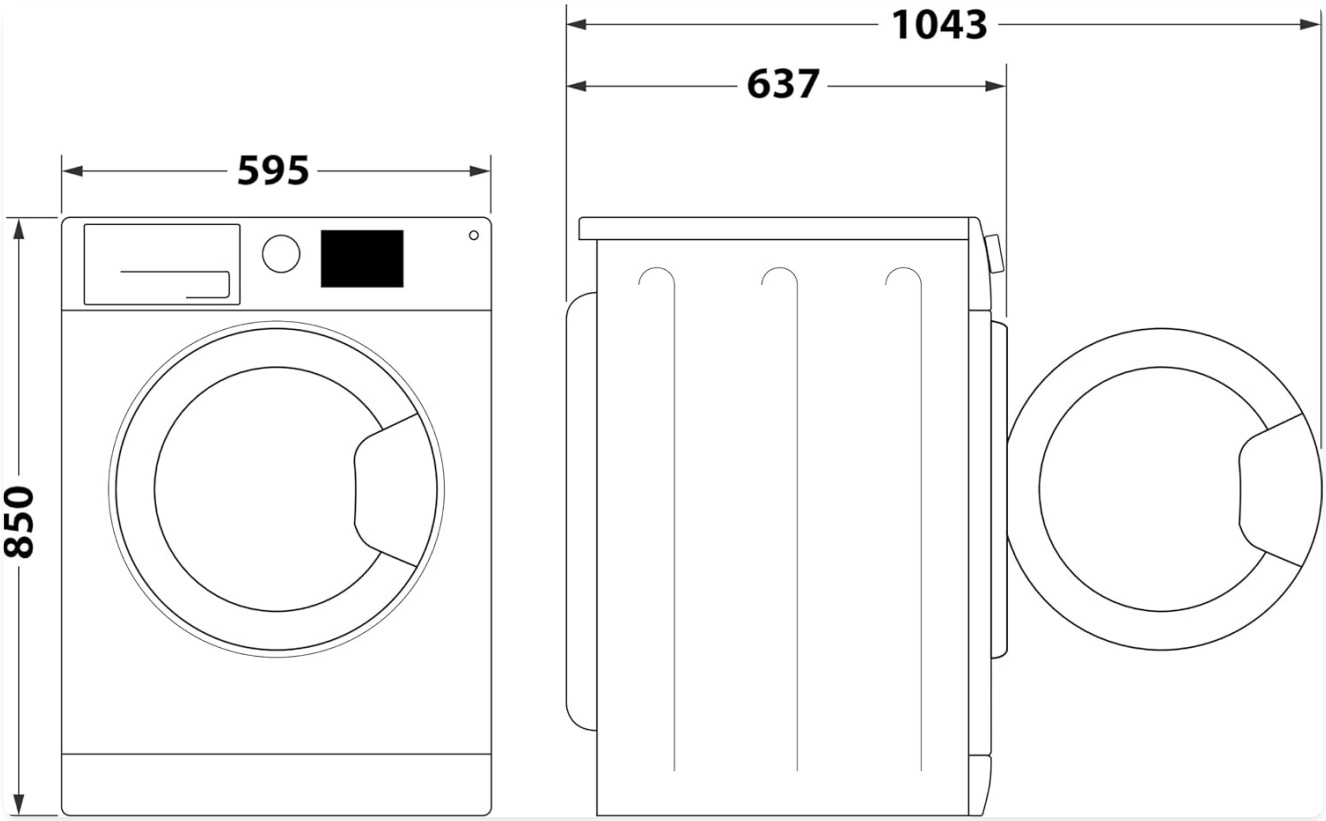


Figure 3.2: Product Dimensions (Height x Width x Depth: 85 cm x 59.5 cm x 60.5 cm).

3.4 Water and Electrical Connections

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Plug the power cord into a grounded electrical outlet.



Figure 3.3: Rear view with connection points.

3.5 Leveling

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. This prevents excessive vibration and noise during operation.

3.6 First Use

Before washing clothes for the first time, run a short cycle (e.g., Rinse & Spin) without laundry and detergent to clean the drum and remove any manufacturing residues.

4. Operating Instructions

4.1 Control Panel Overview

Familiarize yourself with the control panel, which includes the program selector knob, display, and function buttons.



Figure 4.1: Control Panel.

4.2 Loading Laundry

Open the washing machine door and load your laundry. Do not overload the drum to ensure effective washing and rinsing. The machine has an 8 kg capacity.



Figure 4.2: Open door and drum interior.

4.3 Adding Detergent

Pull out the detergent dispenser drawer and add the appropriate amount of detergent and fabric softener to the designated compartments.



Figure 4.3: Detergent dispenser drawer.

4.4 Selecting a Program

Turn the program selector knob to choose the desired washing program. Available programs include:

- **Anti Stain 40°:** For heavily soiled garments with stubborn stains.
- **Full Load 45 min:** A quick cycle for a full load.
- **30 min:** A short wash cycle for lightly soiled items.
- **White:** For white cottons and linens.
- **Duvet:** Specific program for duvets and padded items.
- **Baby:** Gentle wash for baby clothes.
- **Mixed:** For mixed cotton and synthetic fabrics.
- **Eco 40-60:** Energy-efficient program for normally soiled cotton, linen, or mixed fiber items washable at 40°C or 60°C.
- **Cotton:** Standard program for cotton items.
- **Synthetics:** For synthetic fabrics.
- **Delicates:** Gentle wash for delicate items.
- **Wool:** Specific program for wool garments.
- **Anti Allergy:** Helps remove major allergens.
- **Spin & Drain:** For spinning and draining water.
- **Rinse & Spin:** For rinsing and spinning.

4.5 Adjusting Settings

After selecting a program, you can adjust settings using the function buttons:

- **Temp:** Adjust the washing temperature.
- **Spin:** Modify the spin speed.
- **Delay:** Set a delay start time for the cycle.
- **Extra Touch:** Activates additional options.

- **Rapid Option:** Reduces the cycle duration.
- **Steam Hygiene:** Adds a steam phase to remove bacteria and allergens.
- **Key Lock:** Locks the control panel to prevent accidental changes.
- **Extra Rinse:** Adds an extra rinse cycle.

4.6 Starting a Cycle

Press the Start/Pause button to begin the selected washing cycle. The display will show the remaining time.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Detergent Dispenser


Periodically remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

5.2 Cleaning the Filter

Locate the filter at the bottom front of the machine. Open the cover, drain any residual water, and unscrew the filter. Clean it thoroughly and reinsert.

5.3 Cleaning the Drum

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) regularly to keep the drum clean and free from odors.

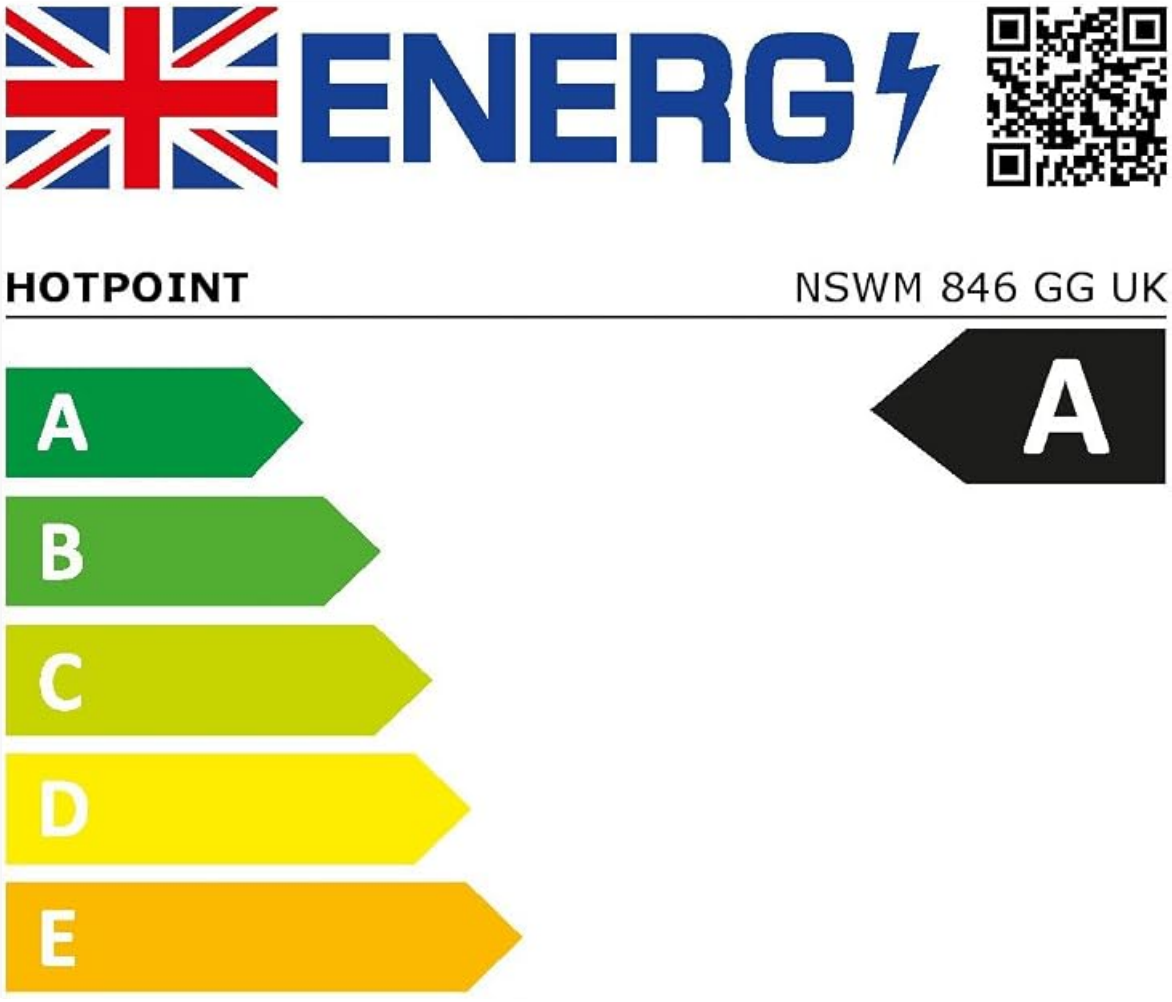

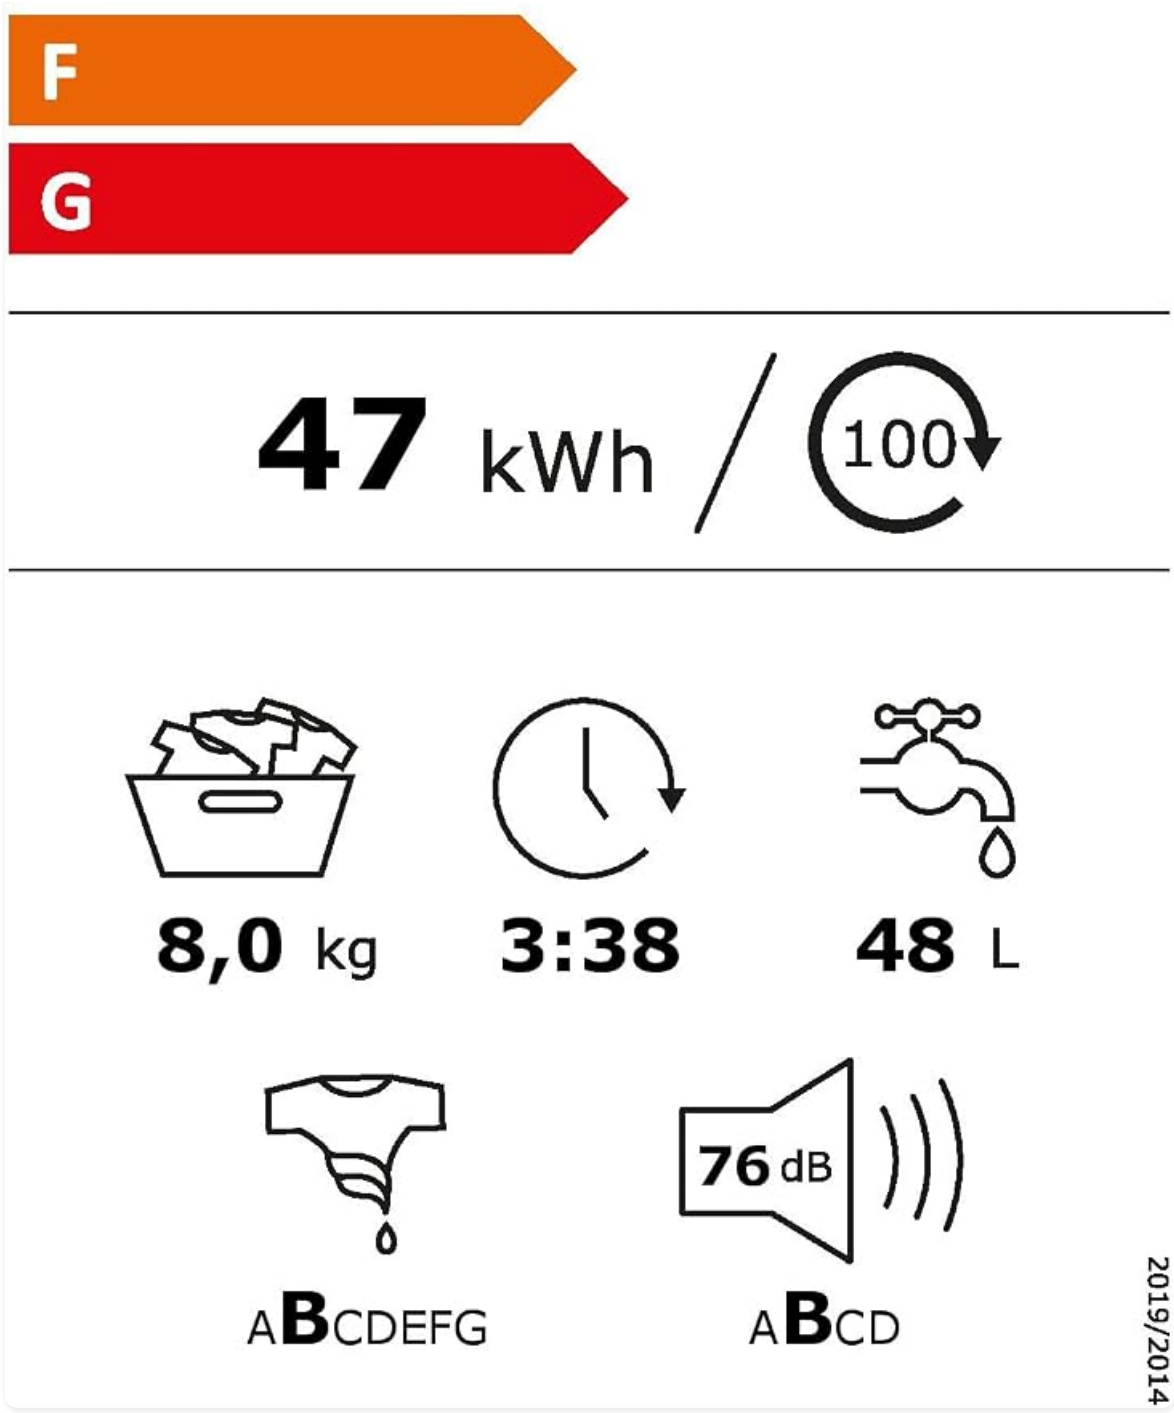


Figure 5.1: Washing machine drum interior.

5.4 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.5 Winter Care

If the machine is to be left in an unheated area during winter, ensure all water is drained from the hoses and pump to prevent freezing and damage.

6. Troubleshooting

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected, delay start active.	Check power connection, ensure door is latched, select a program, cancel delay start.
Water not filling	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check water supply.
Machine not draining	Drain hose kinked or blocked, filter clogged.	Straighten or clear drain hose, clean the filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust feet to level machine, ensure transport bolts are removed, redistribute laundry.
Poor washing results	Overloading, insufficient detergent, incorrect program selection.	Reduce load size, use correct detergent amount, select appropriate program.

7. Specifications

Brand: Hotpoint

Model: NSWM 846 GG UK

Product Dimensions: 60.5 x 59.5 x 85 cm (Depth x Width x Height)

Item Weight: 38 kg

Installation Type: Freestanding

Control Console: Push Button

Number of Standard Cycles: 16

Finish Type: Graphite

Recommended Uses: Residential

Operation Mode: Fully Automatic

ASIN: B0D54HG7YT

7.1 Energy Efficiency

This appliance is designed for energy efficiency. Refer to the energy label for detailed consumption information.

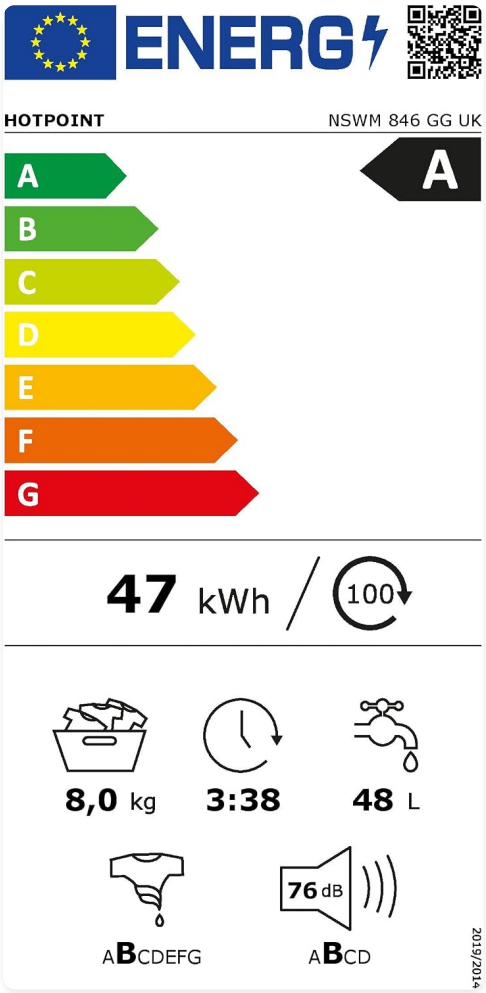


Figure 7.1: Energy Label. For more details, visit eprel.ec.europa.eu/qr/1948134.

8. Warranty and Support

Your Hotpoint washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Hotpoint customer support through their official website or the contact information provided in your warranty documentation.

For further information and support, visit the official Hotpoint website:www.hotpoint.co.uk

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question