Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PERFASCIN RMT-25

PERFASCIN RMT-25 Replacement Remote Control User Manual

For Westinghouse LCD LED TVs

1. Introduction

This manual provides comprehensive instructions for the PERFASCIN RMT-25 replacement remote control. This remote is designed to function as a direct replacement for your original Westinghouse LCD LED TV remote, requiring no programming for immediate use.

Compatible TV Models:

- DWM40F1D1
- EW40F1G1
- DWM40
- DWM40F1G1
- DWM40F2G1
- EU40F1G1
- CW50T9XW
- DW32H3D1
- DWM32H3D1

This list includes common compatible models. The remote may also be compatible with other Westinghouse LCD LED TV models not explicitly listed.

2. Setup

Battery Installation

The PERFASCIN RMT-25 remote control requires two AAA 1.5V batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.


XYC-C07
AAA 1.5V
AAA 1.5V



Image: Back of the remote control with the battery compartment open, showing AAA battery placement.

Once batteries are installed, the remote is ready for use with compatible Westinghouse LCD LED TVs without any additional programming.

3. Operating Instructions

The PERFASCIN RMT-25 remote control provides full functionality for your Westinghouse LCD LED TV. Below is an overview of the main buttons and their functions.

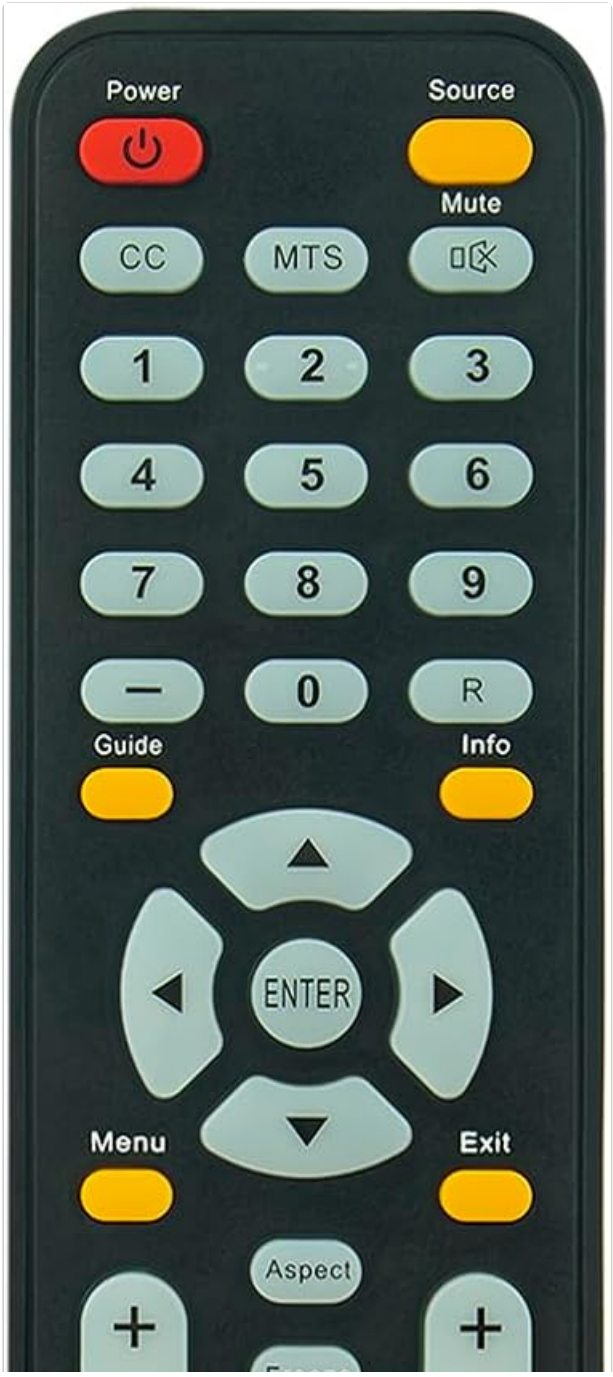




Image: Front view of the RMT-25 remote control, displaying all buttons.

Button Functions:

- **Power (Red Button):** Turns the TV on or off.
- **Source:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Mute:** Mutes or unmutes the TV audio.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **Number Buttons (0-9):** Directly enter channel numbers.
- **R (Recall):** Returns to the previously viewed channel.
- **Guide:** Displays the electronic program guide (if available).
- **Info:** Displays current program information.
- **Navigation Arrows (Up, Down, Left, Right):** Navigate menus and selections.
- **ENTER:** Confirms selections in menus.
- **Menu:** Opens the TV's main menu.
- **Exit:** Closes menus or on-screen displays.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **Aspect:** Changes the screen aspect ratio.
- **Freeze:** Pauses the current image on screen.
- **Sleep:** Sets a sleep timer for the TV.
- **Fav** / **Add/Del** / **Fav-** / **Fav+:** Buttons for managing favorite channels.

- **Picture:** Accesses picture settings.
- **Sound:** Accesses sound settings.
- **TV:** Switches to TV input mode.
- **USB:** Switches to USB input mode (if supported by TV).

4. Maintenance

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

5. Troubleshooting

If you experience issues with your PERFASCIN RMT-25 remote control, please refer to the following common solutions:

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Point the remote directly at the TV.
- **Specific functions not working:**
  - Verify that your TV model is listed as compatible. While the remote is broadly compatible, some specific TV models might have unique functions not directly mapped.
  - If the remote was recently dropped or damaged, internal components might be affected.

If troubleshooting steps do not resolve the issue, or if you believe the remote control is damaged or defective, please contact customer support for assistance.

6. Specifications

Feature	Detail
Model Number	RMT-25
Brand	PERFASCIN
Compatible Devices	Westinghouse LCD LED Televisions

Feature	Detail
Power Source	2 x AAA 1.5V Batteries (not included)
Product Dimensions	6 x 3 x 0.5 inches (approximately 15.2 x 7.6 x 1.3 cm)
Item Weight	2 ounces (approximately 56.7 grams)
Color	Black
Special Feature	Ergonomic design





Image: Remote control with labeled dimensions.

7. Support

For any questions, concerns, or issues regarding your PERFASCIN RMT-25 replacement remote control, please contact our customer support. We are committed to providing satisfactory solutions.
Please have your product model (RMT-25) and a description of the issue ready when contacting support to ensure efficient assistance.

© 2024 PERFASCIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5HHPSJ3

More documents and user manuals: **https://manuals.plus/**