Nokia

Nokia 235 4G Instruction Manual

All-New Keypad Phone with Dual SIM, Scan & Pay UPI, Rear Camera, Wireless FM Radio, MP3 Player, Bluetooth & USB Type C

1. Setup Guide

This section provides instructions for the initial setup of your Nokia 235 4G phone.

1.1 What's in the Box

Upon unboxing your Nokia 235 4G, you should find the following items:

- Handset
- Battery
- Charger (Type C)
- Quick Start Guide



Image: Front and back view of the Nokia 235 4G phone. The phone is black with a keypad and a display screen on the front, and a camera and Nokia branding on the back.

1.2 Inserting the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. Insert your Dual SIM cards into the designated slots. Ensure they are correctly oriented.
3. Insert the battery into its compartment, aligning the gold contacts.
4. Replace the back cover until it clicks securely into place.

1.3 Charging the Device

1. Connect the USB Type-C charger cable to the charging port on your phone.
2. Plug the other end of the charger into a power outlet.
3. Allow the phone to charge fully before first use. The battery indicator on the screen will show charging progress.

2. Operating Instructions

Learn how to use the key features of your Nokia 235 4G phone.

2.1 Basic Functions

- **Power On/Off:** Press and hold the Power key until the phone vibrates and the screen lights up/shuts down.
- **Making Calls:** Enter the phone number using the keypad and press the Call key.
- **Sending Messages:** Navigate to the Messaging application, compose your message, and send it to the desired contact.
- **Navigation:** Use the directional keys and the center select button on the keypad to navigate through menus and options.

2.2 Entertainment and Connectivity

Your Nokia 235 4G comes with several features to keep you connected and entertained.

- **Wireless FM Radio:** Tune into your favorite radio stations without needing a headset.
- **MP3 Player:** Enjoy your music collection. The phone supports MP3 playback.
- **Bluetooth:** Connect to Bluetooth-enabled devices like headsets or speakers for wireless audio.
- **Cloud Apps:** Access pre-installed Cloud Apps including YouTube and YouTube Shorts for video content, as well as news and games.
- **Snake Game:** Revisit the classic Snake game for entertainment.

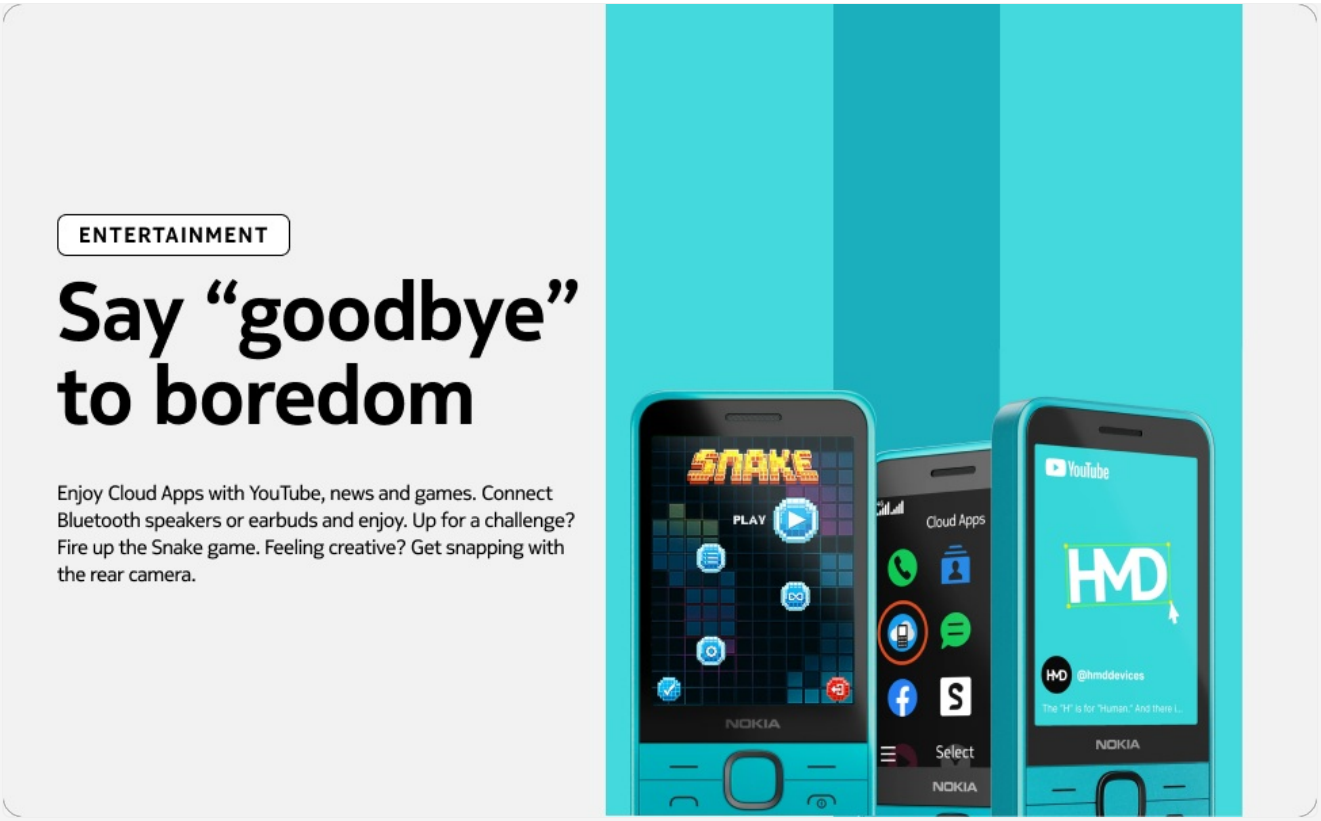


Image: The Nokia 235 4G display showcasing the classic Snake game, a menu of Cloud Apps, and the YouTube interface, highlighting the phone's entertainment capabilities.

2.3 Camera Functionality

Capture moments with the rear camera.

- **Rear Camera:** The phone features a rear camera for taking photos.
- **Viewing Photos:** Captured memories can be viewed on the phone's 2.8" display.

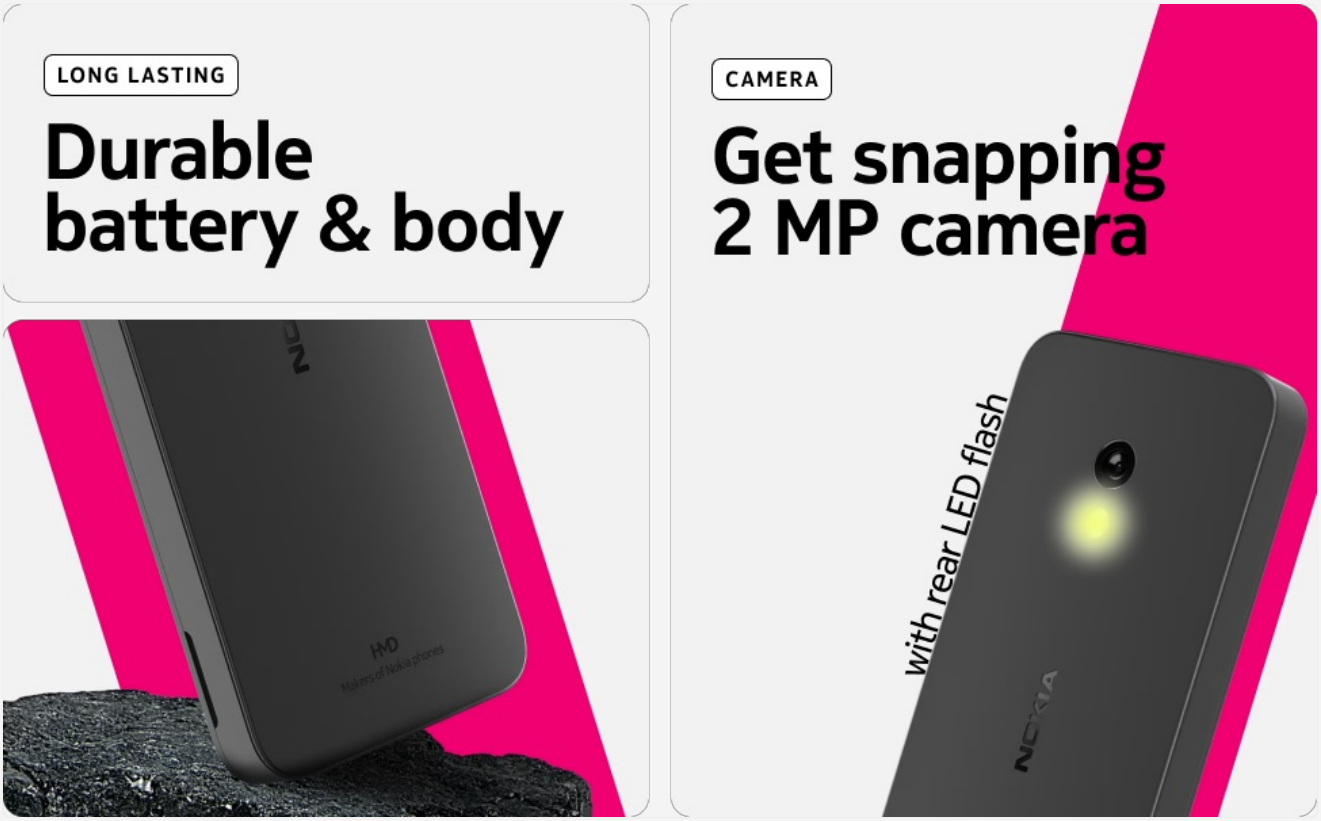


Image: A close-up view of the rear of the Nokia 235 4G, highlighting its 2 MP camera and LED flash, designed for capturing photos.

2.4 Scan & Pay UPI

The Nokia 235 4G supports built-in UPI for easy money transactions.

- **UPI Integration:** Send and receive money conveniently using the integrated UPI feature with support for scan & pay.



Image: A graphic summarizing the key features of the Nokia 235 4G, including 4G connectivity, Dual SIM support, a 2.8-inch display, YouTube, Scan & Pay UPI, Rear Camera, MP3 Player, Wireless FM, Bluetooth 5.0, and USB Type-C.

2.5 Product Overview Video

Your browser does not support the video tag.

Video: An official product video providing an overview of the Nokia 235 4G, highlighting its features such as Dual SIM, Scan & Pay UPI, Rear Camera, Wireless FM Radio, MP3 Player, Bluetooth, and USB Type-C connectivity.

3. Maintenance and Care

Proper care will extend the life of your Nokia 235 4G phone.

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid overcharging and completely draining the battery frequently.
- **Protection:** Consider using a protective case and screen protector to prevent scratches and damage.

4. Troubleshooting

This section addresses common issues you might encounter with your Nokia 235 4G and provides potential solutions.

4.1 Common Issues and Solutions

Issue	Possible Cause / Solution
Phone not turning on	Ensure the battery is properly inserted and charged. Connect the charger and try again.
Short battery life	Reduce screen brightness, close unused applications, and limit background data usage. Ensure the battery is fully charged.
Slow charging	Use the original Nokia charger and cable. Ensure the charging port is clean and free of debris.
Unresponsive keypad	Restart the phone. Ensure no physical obstruction is affecting the keys. If the issue persists, contact support.
Poor call quality	Check network signal strength. Move to an area with better reception. Ensure the earpiece/microphone is not blocked.
Phone restarting automatically	This could indicate a software issue or a faulty battery. Try removing and reinserting the battery. If the problem continues, seek professional assistance.

5. Product Specifications

Detailed technical specifications for the Nokia 235 4G.

Feature	Detail
Brand	Nokia
Operating System	S30+
Product Dimensions	6 x 7.1 x 15.5 cm
Item Weight	240 g
Batteries	1 Lithium Ion battery (included)
Item Model Number	Nokia 235
Wireless Communication Technologies	Bluetooth
Connectivity Technologies	USB Type-C
GPS	AGPS

Feature	Detail
Special Features	MP3 Player, Wireless FM Radio, Scan & Pay UPI, YouTube, YouTube Shorts, Snake Game
Display Features	2.8" Display
Device Interface - Primary	Keypad
Camera Features	Rear Camera
Audio Jack	3.5 mm
Form Factor	Bar
Color	Black (also available in Blue, Purple)
Battery Power Rating	1450 mAh
Phone Talk Time	19 Hours
RAM Memory Installed Size	32 MB
CPU Model	Snapdragon
CPU Speed	1 GHz
Country of Origin	India

6. Warranty and Support

Information regarding product warranty and how to obtain support.

6.1 Product Warranty

Your Nokia 235 4G comes with a standard brand warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

6.2 Manufacturer Information

This product is manufactured by or on behalf of:

HMD Mobile India Private Limited
Pioneer Urban Square Complex, No 510 5th Floor, Tower C,
Golf Course Extension Road, Sector 62, Gurgaon, Haryana, 122102, India

6.3 Customer Support

For any technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Nokia customer support. You can find contact details on the official Nokia website or through the Quick Start Guide provided with your phone.
For more information, you may also visit the officialNokia Store on Amazon.

© 2024 Nokia. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question