Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DOOGEE T30 MAX

DOOGEE T30 MAX Tablet User Manual

Model: T30 MAX

Introduction

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your DOOGEE T30 MAX Android 14 Tablet. Please read this manual carefully before using your device to ensure optimal performance and longevity.



Figure 1: Front and back view of the DOOGEE T30 MAX Tablet, highlighting its sleek design and rear camera module.



Figure 2: An overview of the DOOGEE T30 MAX Tablet's key features, including screen size, processor, memory, battery, and camera specifications.

1. Setup

1.1 Package Contents

Ensure all items are present in the package:

- DOOGEE T30 MAX Tablet
- 33W PD Fast Charger
- USB-C Cable
- 128GB Micro SD Card
- User Manual (this document)
- SIM Ejector Tool (if applicable)

1.2 Initial Charging

Before first use, fully charge the tablet using the provided 33W PD Fast Charger and USB-C cable. The tablet features a 10800mAh large battery.



Figure 3: Illustration of the 10800mAh large battery and 33W fast charging capability of the DOOGEE T30 MAX Tablet.

1.3 Powering On/Off

- **To Power On:** Press and hold the Power button until the DOOGEE logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear, then select "Power off".
- **To Restart:** Press and hold the Power button until the power options appear, then select "Restart".

1.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.

2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, password, fingerprint, or face unlock).

1.5 Inserting SIM Card and Micro SD Card

Locate the SIM/Micro SD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Insert your Nano-SIM card(s) and/or the 128GB Micro SD card into the designated slots. Ensure the tray is fully reinserted.
The tablet supports storage expansion up to 2TB via Micro SD card.

2. Operating Your Tablet

2.1 Display and Visuals

The DOOGEE T30 MAX features a 12.4-inch display with a maximum resolution of 1280x720 pixels. It also boasts TUV SUD Eye Protect Grade Screen certification for reduced eye strain.



Figure 4: The DOOGEE T30 MAX Tablet supports Widevine L1, enabling high-definition streaming from platforms like Disney+, Hulu, HBO Max, and Amazon Prime Video.

2.2 Performance and Storage

Powered by a MediaTek Helio G99 Octa-Core processor, the tablet offers smooth performance for various tasks. It comes with 20GB of RAM (8GB physical + 12GB virtual) and 512GB of internal storage (ROM), which can be expanded up to 2TB using a Micro SD card.



Figure 5: Visual representation of the 512GB ROM and the capability to expand storage up to 2TB on the DOOGEE T30 MAX Tablet.

2.3 Camera Features

Capture moments with the tablet's camera system:

- **Rear Camera:** 50MP + 2MP AI Dual Camera
- **Front Camera:** 20MP



Figure 6: Overview of the 50MP+2MP AI dual rear camera and 20MP front camera, demonstrating their ability to capture various scenes.

2.4 Audio and Multimedia

Experience immersive sound with the Quad Hi-Res Stereo Speakers. The tablet supports various audio and video formats for your multimedia needs.

2.5 Connectivity

The DOOGEE T30 MAX offers robust connectivity options:

- **Wi-Fi:** 2.4G/5G 802.11ac for fast internet access.
- **Bluetooth:** Bluetooth 5.0 for connecting wireless accessories.
- **Cellular:** 4G LTE (TDD+FDD) for mobile data and calls (with compatible SIM card).
- **Navigation:** 4-in-1 GPS for accurate location services.

2.6 Security Features

Secure your device and data using the integrated security options:

- **Side Fingerprint Sensor:** Unlock your tablet quickly and securely with a touch.
- **Face Unlock:** Use facial recognition for convenient access.

2.7 Android 14 Operating System

The tablet runs on Android 14, offering an enhanced user experience with smarter AI, stronger security features, improved privacy controls, and richer multitasking capabilities.



Figure 7: Depiction of the Android 14 operating system on the DOOGEE T30 MAX, highlighting its AI, security, privacy, and multitasking benefits.

3. Maintenance

3.1 Cleaning Your Tablet

To clean the screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.
For the tablet body, wipe with a soft, dry cloth. Keep the charging port and other openings free of dust and debris.

3.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for updates.

3.3 Battery Care

To maximize battery life and longevity:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the original charger and cable.
- Unplug the charger once the battery is full.

3.4 Storage Management

Periodically review your tablet's storage to free up space. You can:

- Uninstall unused apps.
- Delete unnecessary files and photos.
- Move large files to the Micro SD card.
- Clear cache data for apps.

4. Troubleshooting

This section addresses common issues you might encounter with your DOOGEE T30 MAX Tablet.

4.1 Tablet Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to perform a forced restart.

4.2 Slow Performance or Freezing

- Close unused applications running in the background.
- Clear app cache: Go to **Settings > Apps > [App Name] > Storage > Clear cache**
- Restart the tablet.
- Ensure sufficient storage space is available.

4.3 Wi-Fi or Bluetooth Connectivity Issues

- Toggle Wi-Fi/Bluetooth off and on.
- Restart your Wi-Fi router or Bluetooth device.
- Forget the network/device and reconnect.

4.4 Charging Issues

- Ensure the charger and cable are securely connected to both the tablet and the power outlet.
- Try a different power outlet.

- Inspect the charging port for any debris or damage.
- Use only the original DOOGEE 33W PD Fast Charger and cable.

4.5 Factory Data Reset (Last Resort)

If other troubleshooting steps do not resolve the issue, you may need to perform a factory data reset.**This will erase all data on your tablet. Back up important data before proceeding.**
To perform a factory reset: Go to**Settings > System > Reset options > Erase all data (factory reset)**.

5. Specifications

Feature	Detail
Brand	DOOGEE
Model Name	T30 MAX
Operating System	Android 14
Screen Size	12.4 inches
Max Screen Resolution	1280x720 pixels
Processor Brand	MediaTek
Number of Processors	8 (Octa-Core)
Computer Memory Type	DDR3 SDRAM
Flash Memory (RAM)	20 GB
Internal Storage (ROM)	512 GB
Expandable Storage	Up to 2TB via Micro SD card
Wireless Type	802.11ac (2.4G/5G WiFi)
Bluetooth	Bluetooth 5.0
Cellular Connectivity	4G LTE (TDD+FDD)
GPS	4-in-1 GPS
Rear Camera	50MP + 2MP AI Dual Camera
Front Camera	20MP
Battery Capacity	10800mAh
Charging	33W PD Fast Charger
Item Weight	3.84 ounces
Product Dimensions (LxWxH)	11.2 x 7.2 x 0.31 inches

6. Warranty and Support

DOOGEE is committed to providing high-quality products and excellent customer service.

- **30-Day Money Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **2-Year Limited Warranty:** Your DOOGEE T30 MAX Tablet is covered by a 2-year limited warranty against manufacturing defects. Please retain your proof of purchase.
- **24/7 Online Support:** For any questions or assistance, please contact our customer support team available 24/7. Visit the official DOOGEE website for contact information.

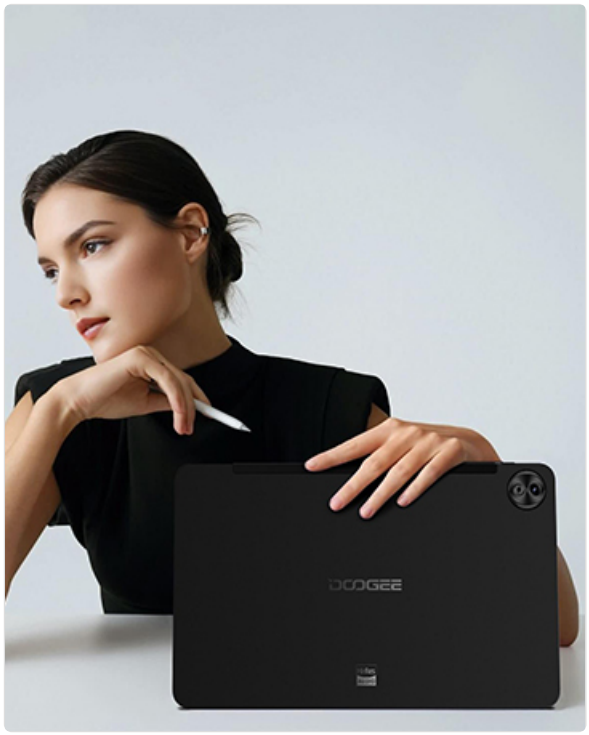


Figure 8: Information regarding DOOGEE's customer service, including money-back guarantee, limited warranty, and online support.

© 2024 DOOGEE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5HQ92HD

More documents and user manuals: **https://manuals.plus/**