Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic P-US-P13

Proscenic P13 Cordless Vacuum Cleaner User Manual

Model: P-US-P13 | Brand: Proscenic

Introduction

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Proscenic P13 Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Proscenic P13 Cordless Vacuum Cleaner and its included components.

Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow basic precautions, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store indoors.
- Do not immerse the appliance in water or other liquids.
- Use only the charger specified by the manufacturer.

Included Components

Your Proscenic P13 Cordless Vacuum Cleaner package includes the following items:



Image: A visual representation of the Proscenic P13 Cordless Vacuum Cleaner's main body and accessories.

1. Main Motor (includes Dust Cup)
2. Floor Brush
3. Telescopic Tube
4. Air Outlet HEPA Filter
5. User Manual
6. Long Crevice Nozzle
7. 2-in-1 Dusting Brush
8. Wall Mount with Screws
9. Power Adaptor
10. Battery
11. Air Inlet HEPA Filters (2 included)
12. Cleaning Gadget

Setup and Assembly

1. Assembling the Vacuum

The Proscenic P13 can be assembled in various configurations for different cleaning needs:

- **Stick Vacuum Configuration:** Attach the telescopic tube to the main motor unit, then attach the floor brush to the other end of the telescopic tube. This configuration is ideal for floor and carpet cleaning.
- **Handheld Vacuum Configuration:** For handheld use, attach desired accessories (crevice tool or 2-in-1 dusting brush) directly to the main motor unit. This is suitable for cleaning furniture, car interiors, or keyboards.
- **Extended Handheld Configuration:** For high areas like ceilings, attach the telescopic tube to the main motor unit, then attach a smaller accessory to the end of the telescopic tube.



Image: The Proscenic P13 Cordless Vacuum Cleaner shown in its full stick configuration and as a compact handheld unit with attachments.

2. Charging the Battery

The P13 features a detachable battery for flexible charging. Ensure the battery is fully charged before first use.

1. To charge the battery while attached to the vacuum, connect the power adaptor to the charging port on the main motor unit and plug it into a wall outlet.
2. To charge the battery separately, detach the battery from the main motor unit and connect the power adaptor directly to the battery's charging port.

Image: The detachable battery unit being removed from the main vacuum body, illustrating flexible charging options.

A full charge provides up to 50 minutes of runtime, depending on the suction mode used.

Operating Instructions

1. Power On/Off and Suction Control

Press the power button on the main motor unit to turn the vacuum on or off. The P13 offers 4 suction speeds. Use the mode switch on the LED display to adjust the suction power according to your cleaning needs.



Image: The smart LED control panel displaying suction level, remaining runtime, and alerts for dust full or brush stuck.

2. LED Touch Display

The smart LED control panel provides real-time information:

- **Suction Level:** Indicates the current power setting.
- **Remaining Runtime:** Shows the estimated battery life.
- **Dust Full Alarm:** Alerts when the dust cup needs emptying.
- **Floor Brush Clogged:** Indicates an obstruction in the floor brush.
- **Suction Obstruction Warning:** Alerts to blockages in the air path.

3. Vertex Light (Green LED Headlights)

The enhanced green detection headlights on the floor brush illuminate tiny dust particles that are often invisible to the

naked eye, ensuring thorough cleaning.

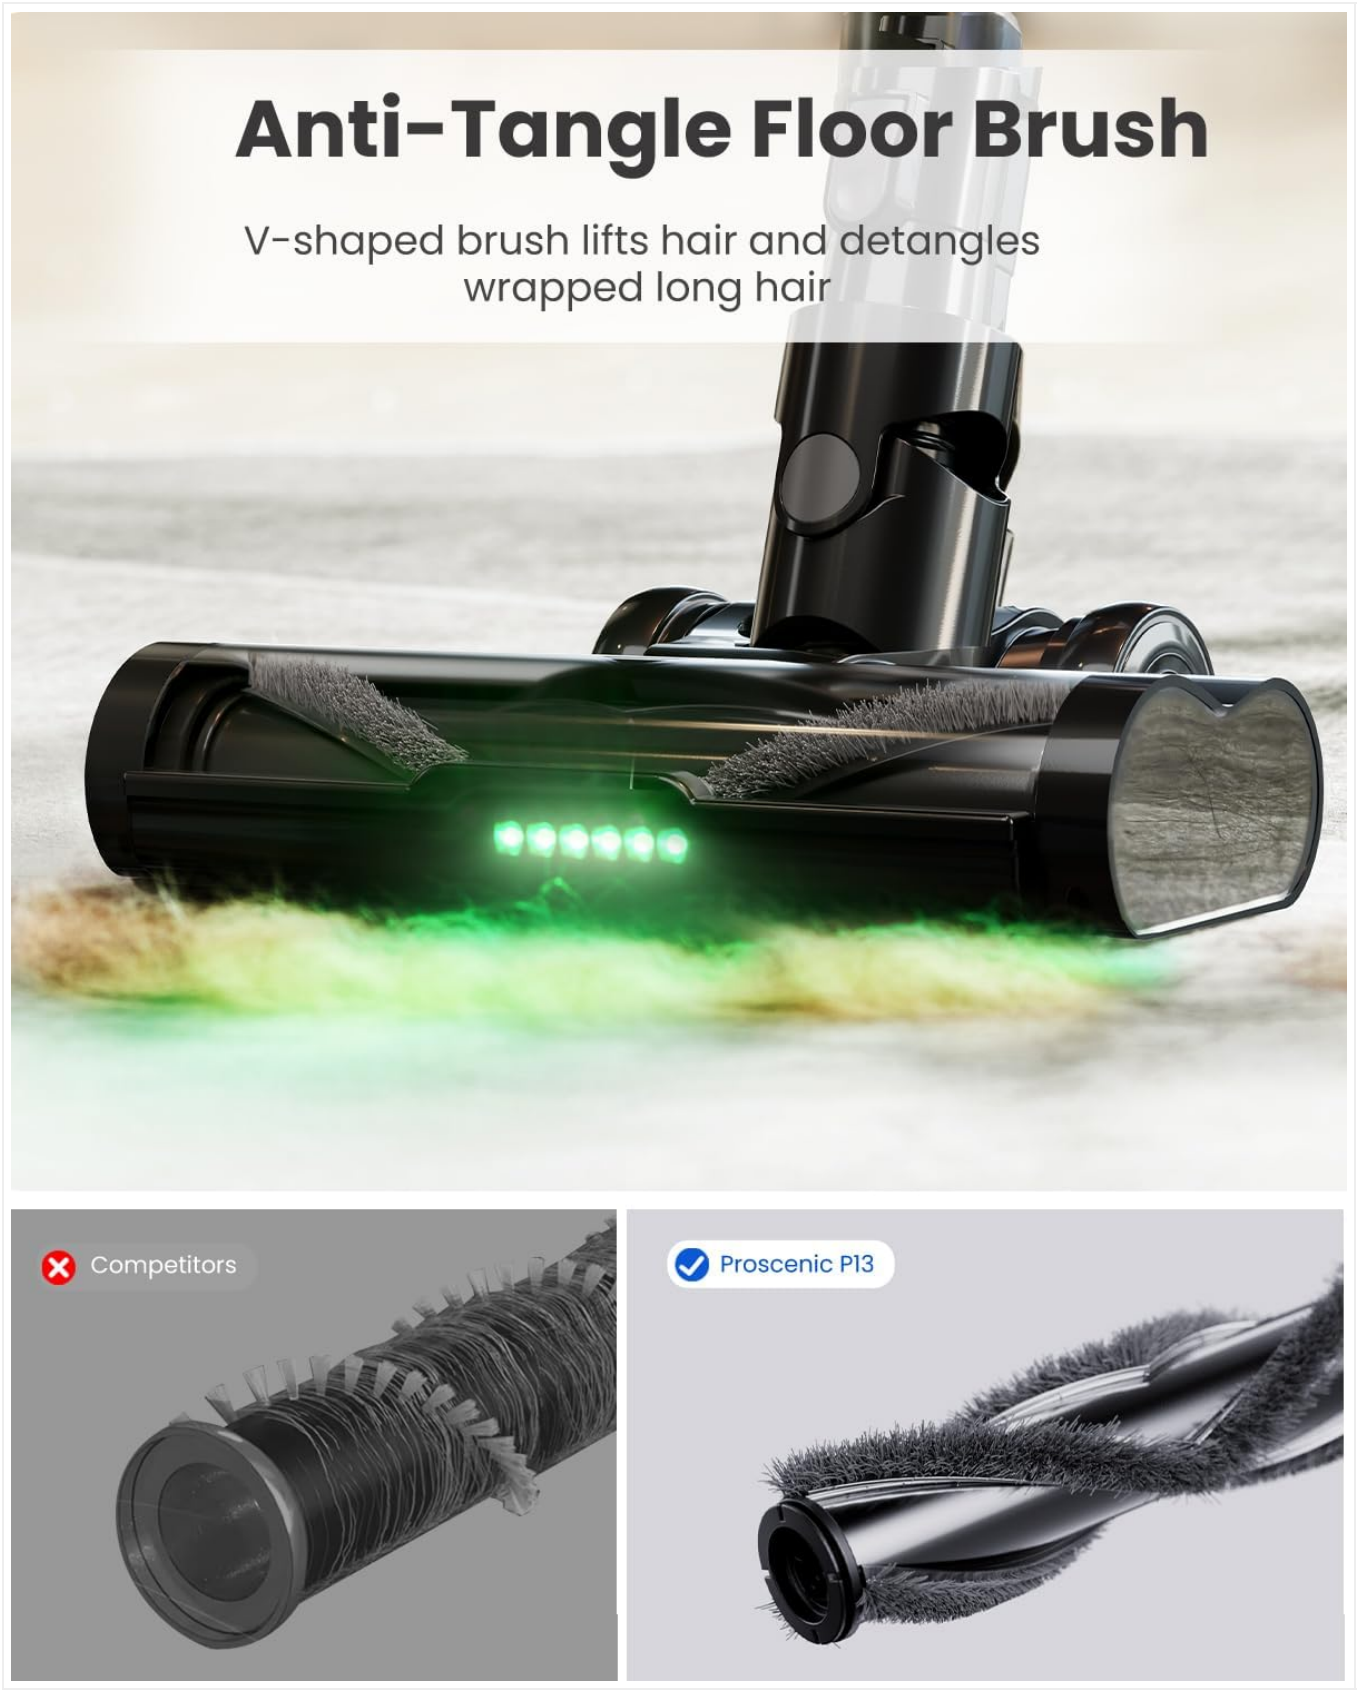


Image: The green LED headlights revealing dust on a hard floor, demonstrating their effectiveness.

4. Anti-Tangle Floor Brush

The V-shaped guiding bristle design of the floor brush, combined with an internal comb, efficiently collects hair without tangling, reducing maintenance for pet owners.

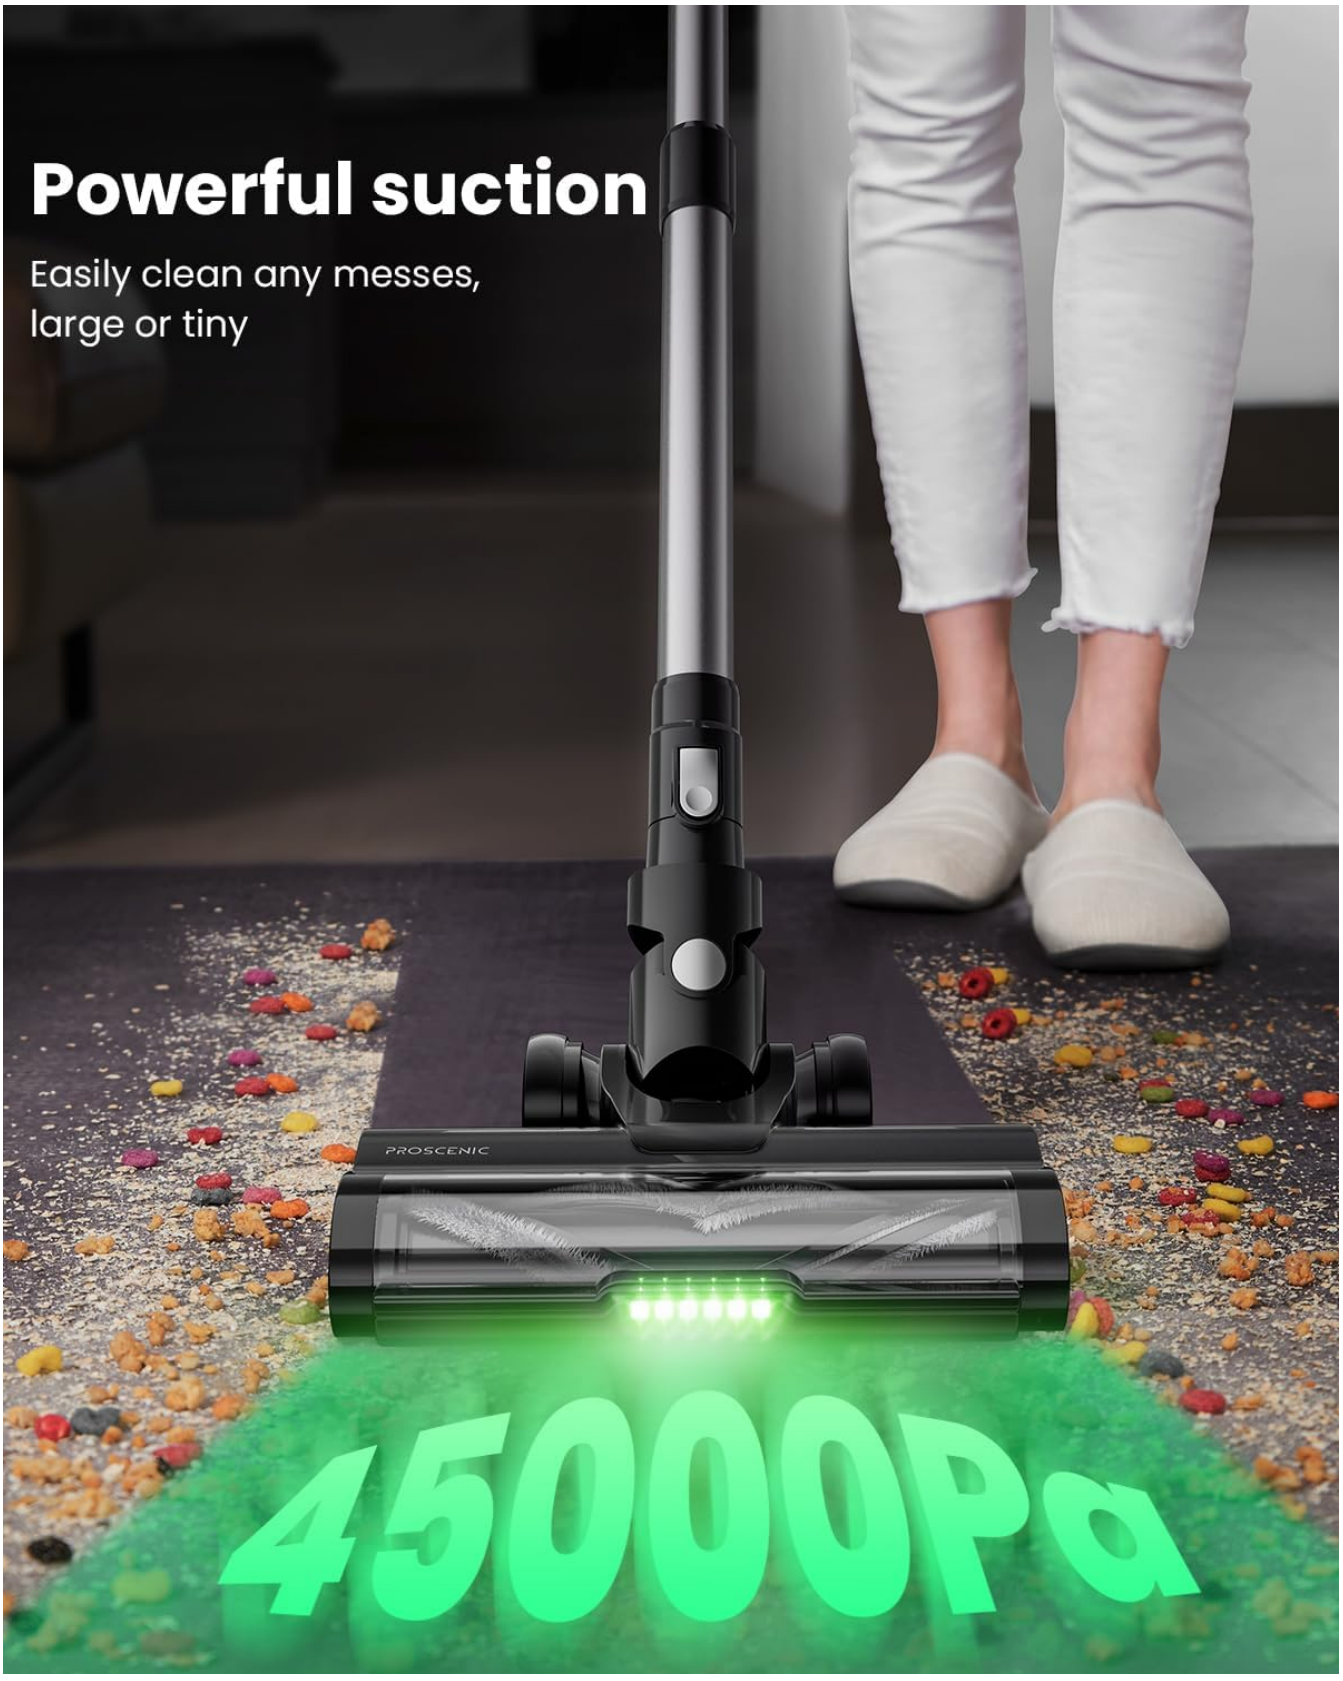


Image: A close-up of the anti-tangle floor brush, highlighting its V-shaped bristle design for effective hair collection.

Maintenance

1. Emptying the Dust Cup

The 1.2L dust cup should be emptied regularly to maintain optimal suction performance. A single button press releases the contents.

1. Ensure the vacuum is turned off.

2. Hold the main motor unit over a trash bin.
3. Press the dust cup release button to open the bottom flap and empty the debris.
4. Close the dust cup flap securely until it clicks.



Image: A user demonstrating the one-touch dust cup emptying feature of the Proscenic P13.

2. Cleaning Filters

Regular cleaning of the HEPA and foam filters is crucial for maintaining suction power and air quality. The filters are washable.

1. Twist and pull to remove the filter assembly from the dust cup.
2. Separate the HEPA filter and foam filter.
3. Rinse both filters under cold running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or other heating methods.



Image: A user cleaning the washable HEPA filter under running water.

3. Cleaning the Roller Brush

Periodically check the roller brush for tangled hair or debris. The anti-tangle design minimizes this, but occasional cleaning may still be required.

1. Turn off the vacuum and detach the floor brush.
2. Locate the release tab or screw on the side of the brush head and open it to remove the roller brush.
3. Use the included cleaning gadget or scissors to cut and remove any tangled hair or fibers.

4. Reinsert the roller brush and secure the cover.

Troubleshooting

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Reduced suction power.	Dust cup is full, filters are clogged, or there is an obstruction.	Empty dust cup. Clean or replace filters. Check for blockages in the floor brush, telescopic tube, or main unit.
Floor brush stops rotating.	Hair or debris tangled in the roller brush, or brush motor is obstructed.	Turn off the vacuum. Remove and clean the roller brush. Check for any obstructions in the brush head.
Battery runtime is shorter than expected.	Using high suction mode frequently, or battery degradation.	Use lower suction modes for lighter cleaning. Ensure battery is fully charged. If battery life significantly decreases, consider replacing the battery.
LED display shows an error message.	Specific error (e.g., "Dust Full", "Brush Clogged", "Suction Obstruction").	Refer to the LED display section for specific alerts and follow the recommended actions (empty dust cup, clean brush, clear obstruction).

Product Specifications

Feature	Detail
Brand	Proscenic
Model Name	P-US-P13
Special Features	45Kpa strong suction, Large LED touch screen, 2-in-1 floor brush, Anti-tangle roller brush, Green LED headlights, Up to 50 minutes runtime, Detachable battery
Filter Type	Foam, HEPA Filter
Is Cordless?	Yes
Dust Cup Capacity	1200 Milliliters (1.2L)
Wattage	400 watts
Form Factor	Stick, Handheld
Color	Black
Product Dimensions	9.1"L x 5"W x 14"H
Noise Level	78 dB

Feature	Detail
Battery Life	Up to 50 minutes
Number of Speeds	4
Item Weight	6.8 pounds
Batteries Required	1 Lithium Ion battery (included)

Warranty and Support

Warranty Information

The Proscenic P13 Cordless Vacuum Cleaner comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.
The warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear.

Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Proscenic customer support. You can find more information and contact details on the official Proscenic website or their Amazon Brand Store:
Visit the Proscenic Store on Amazon

© 2025 Proscenic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5LFG677

More documents and user manuals: **https://manuals.plus/**