Bell+Howell 6254

Bell+Howell Elegant Cordless Table Lamp Instruction Manual

Model: 6254

Introduction

Thank you for choosing the Bell+Howell Elegant Cordless Table Lamp. This LED wireless lamp is designed for convenience and versatility, featuring touch activation, three light color modes, and dimmable brightness. Its rechargeable and portable design makes it suitable for various indoor settings. This manual provides essential information for the safe and effective use of your lamp.

Safety Instructions

- Read all instructions before using the lamp.
- Keep the lamp away from water or other liquids. This product is not waterproof and is intended for indoor use only.
- Do not attempt to disassemble, repair, or modify the lamp. Refer all servicing to qualified personnel.
- Use only the provided charging cable or a compatible USB-C cable with a suitable power adapter (not included) for charging.
- Keep the lamp out of reach of children and pets.
- Avoid direct eye exposure to the LED light for extended periods.

Package Contents

Verify that all items are present in your package:

- 2 x Bell+Howell Elegant Cordless Table Lamps
- 2 x USB-C Charging Cables

Product Overview

The Bell+Howell Elegant Cordless Table Lamp offers versatile lighting with a sleek design. It features a touch-sensitive top for control and a durable metal base.



Image: The Bell+Howell Elegant Cordless Table Lamp showcasing its three distinct light color options.

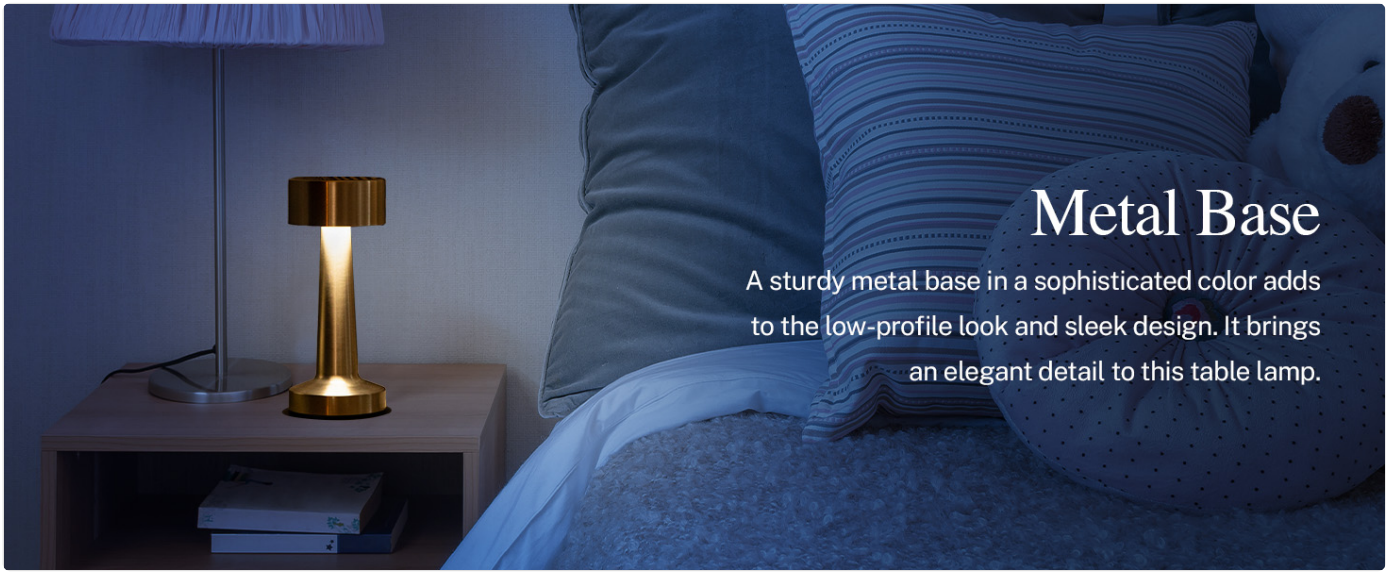


Image: The lamp's sturdy metal base, contributing to its elegant design.



Image: The lamp's lightweight and portable nature, along with its USB-C charging cable.

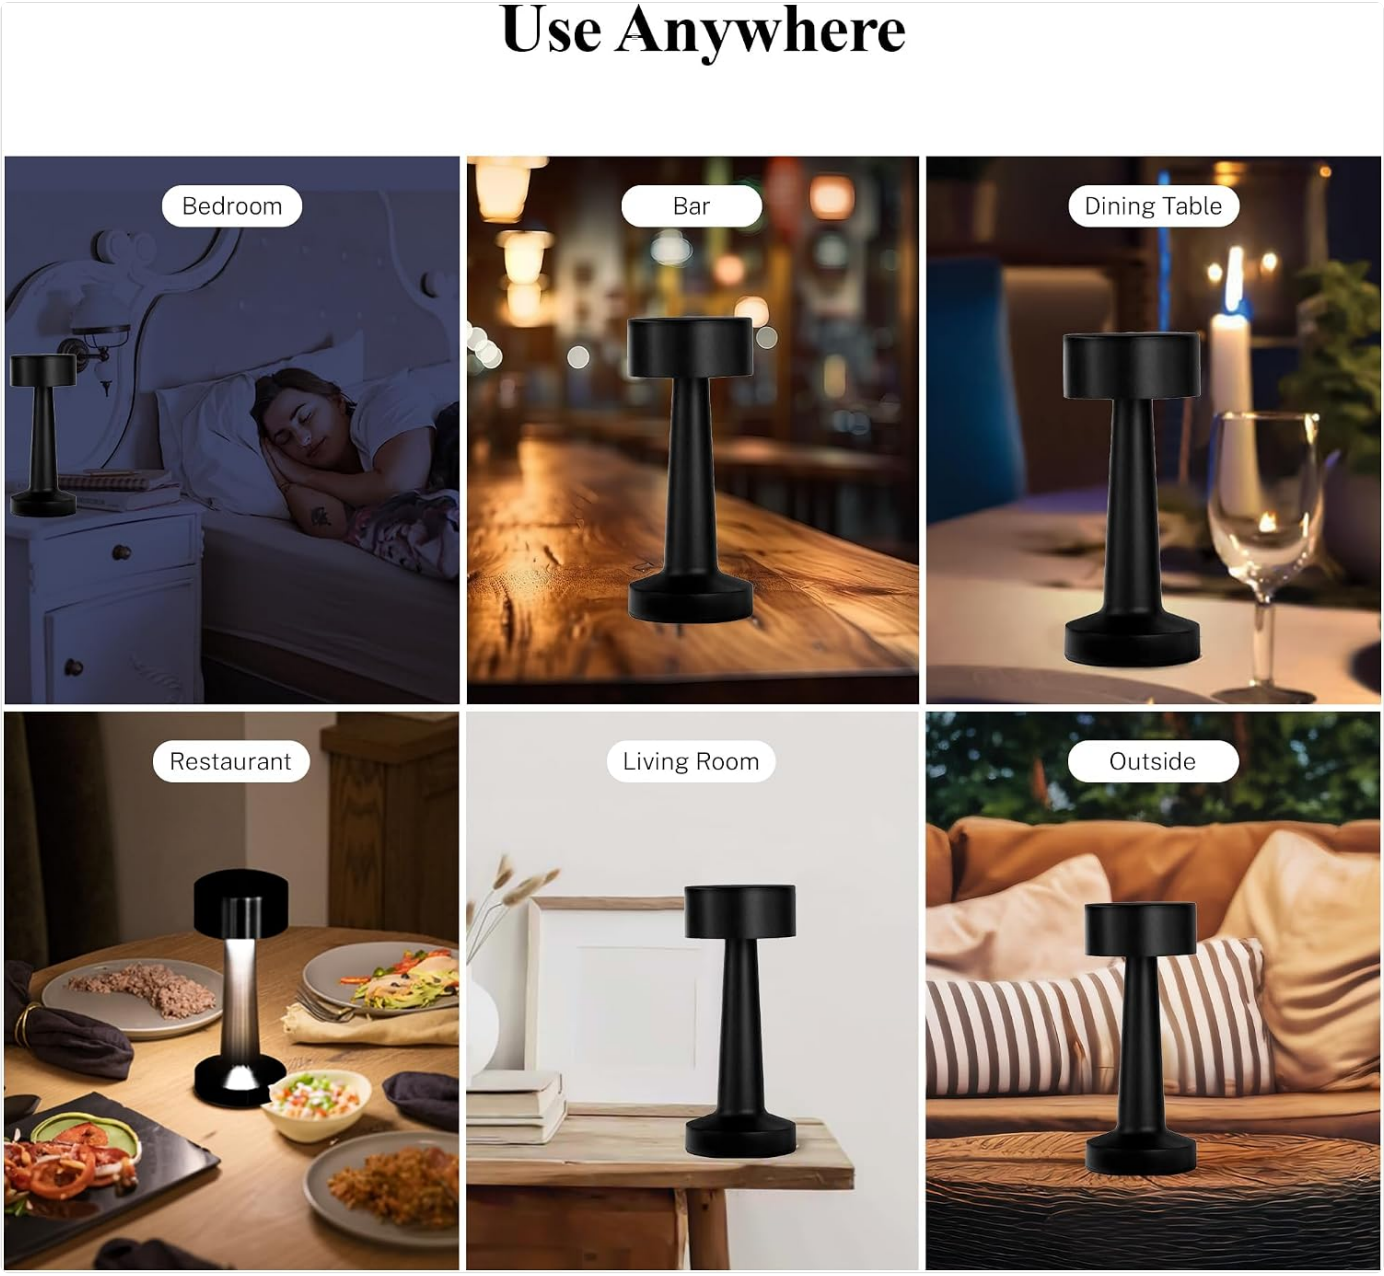


Image: Examples of the lamp's versatile use in different environments.

Setup

Initial Charging

1. Unpack the lamp and charging cable from the packaging.
2. Connect the USB-C end of the charging cable to the charging port located on the base of the lamp.
3. Connect the USB-A end of the charging cable to a compatible USB power adapter (not included) or a powered USB port.
4. Allow the lamp to fully charge before its first use. A full charge typically takes approximately 3-4 hours. The charging indicator light (if present, refer to product for exact location) will change color or turn off when fully charged.

Placement

Place the lamp on a stable, flat surface. Ensure it is not near any heat sources or in direct sunlight for prolonged periods. As it is cordless, you have the flexibility to place it anywhere indoors where light is needed.

Operation

Power On/Off

The lamp features effortless touch activation. To turn the lamp **on** or **off**, simply tap the touch-sensitive area on the top of the lamp.



Image: Illustrates the touch activation feature for powering the lamp on or off.

Adjusting Light Modes

The lamp offers three distinct lighting modes to suit your preference. To cycle through the modes (Warm, White, Daylight), tap the touch-sensitive area on the top of the lamp repeatedly after turning it on.

- **Warm Light:** Ideal for creating a cozy or intimate atmosphere.
- **White Light:** Provides bright illumination for tasks or general lighting.
- **Natural Daylight:** Mimics natural outdoor light for a balanced ambiance.



Image: Visual representation of the three available light settings.

Dimming Brightness

To adjust the brightness, tap and **hold** your finger on the touch-sensitive area on the top of the lamp. The brightness will gradually increase or decrease. Release your finger when the desired brightness level is reached.

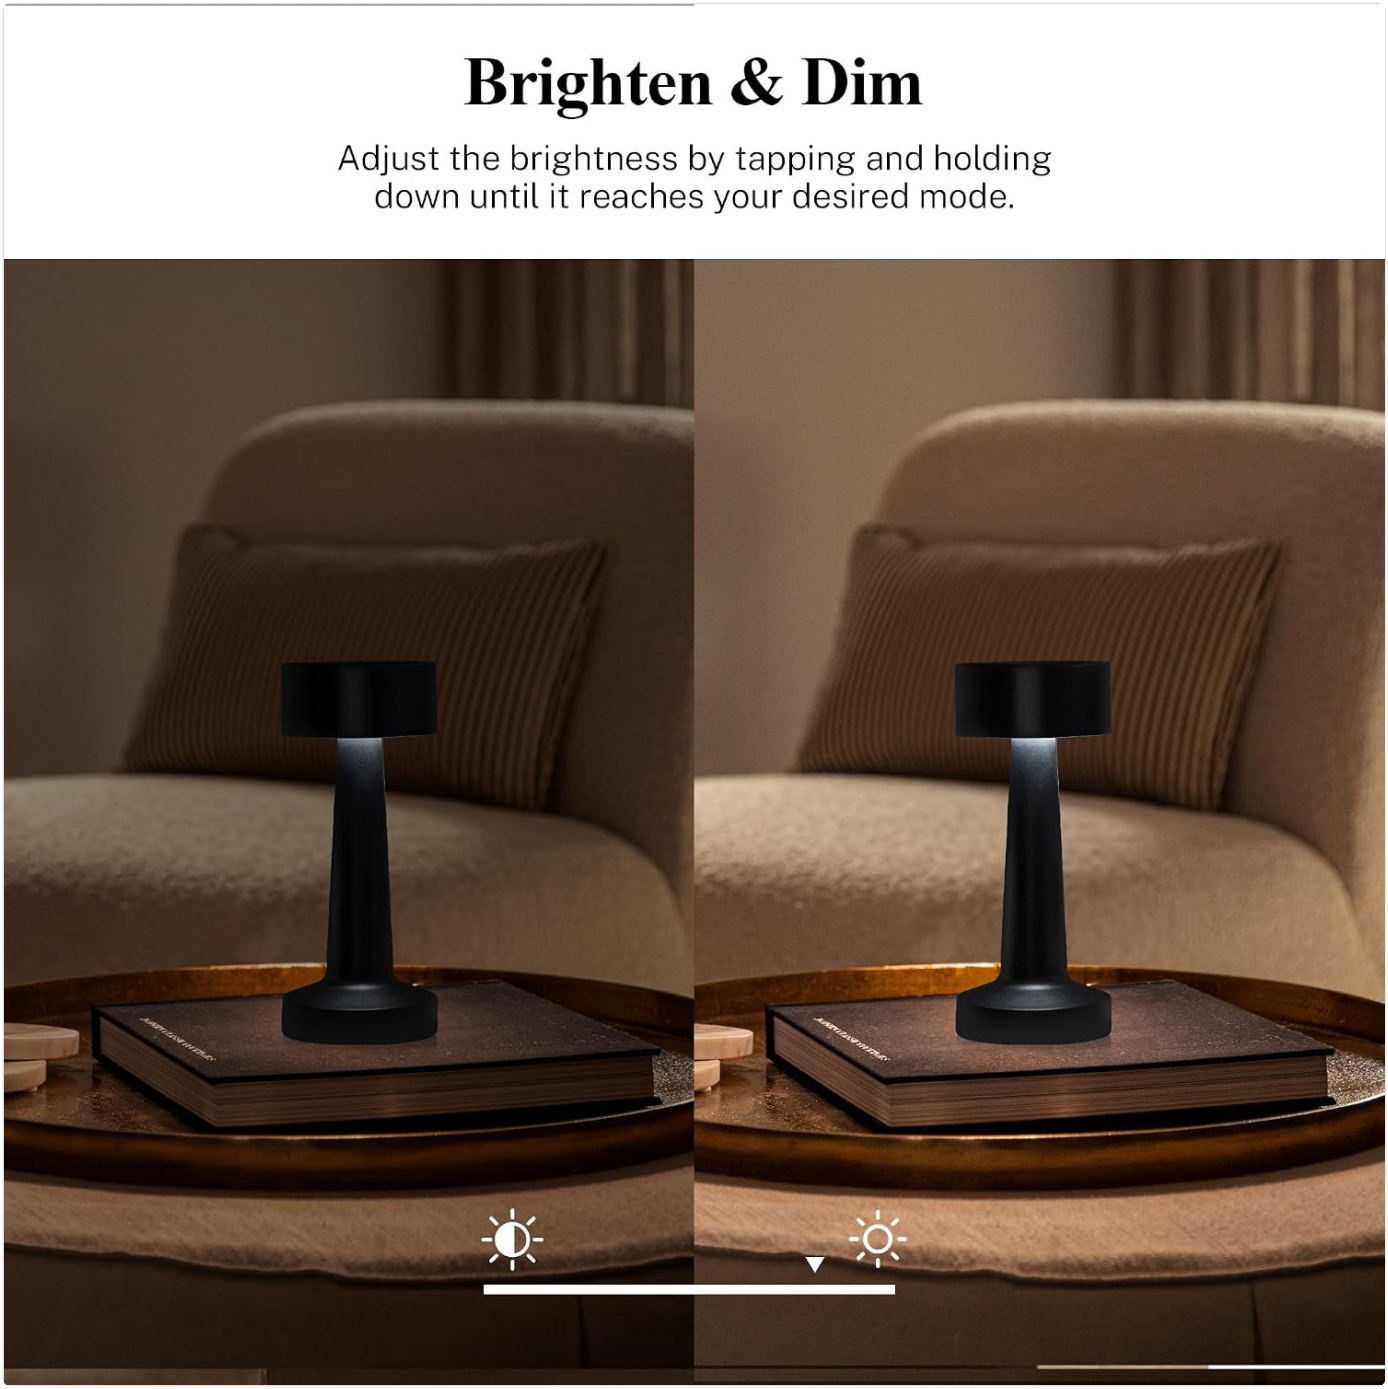


Image: The lamp's dimmable feature, allowing adjustment of light intensity.

Charging

The Bell+Howell Elegant Cordless Table Lamp is equipped with a rechargeable battery for portable use. When the light dims or does not turn on, it indicates that the battery needs recharging.

1. Locate the USB-C charging port on the base of the lamp.
2. Insert the provided USB-C cable into the lamp's charging port.
3. Connect the other end of the USB-C cable to a standard USB power source (e.g., wall adapter, computer USB port, power bank).
4. The lamp will begin charging. The charging indicator light will provide feedback on the charging status (e.g., red for charging, green for fully charged).
5. Disconnect the charging cable once the lamp is fully charged to preserve battery life.

Maintenance

Proper care ensures the longevity of your Bell+Howell Elegant Cordless Table Lamp.

- **Cleaning:** Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
- **Storage:** If storing the lamp for an extended period, ensure it is fully charged and store it in a cool, dry place. Recharge the lamp every few months to maintain battery health.
- **Battery Care:** Avoid completely draining the battery frequently. Recharge the lamp when the light output noticeably decreases.

Troubleshooting

If you encounter issues with your lamp, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp fully.
Lamp does not turn on.	Touch sensor not responding.	Ensure your finger is making full contact with the touch-sensitive area.
Lamp is not charging.	Charging cable or power source issue.	Check if the USB-C cable is securely connected. Try a different USB power source or cable.
Light output is dim or flickering.	Low battery.	Recharge the lamp.

Specifications

Feature	Detail
Brand	Bell+Howell
Model Number	6254
Product Dimensions	9"D x 4"W x 4"H
Item Weight	2.25 pounds (for 2-pack)
Finish Type	Matte/Glossy Black
Base Material	Acrylonitrile Butadiene Styrene
Shade Material	Acrylonitrile Butadiene Styrene
Light Source Type	LED
Power Source	Rechargeable Battery
Control Method	Touch

Feature	Detail
Special Features	Cordless, Dimmable Brightness, 3 Light Colors
Indoor/Outdoor Usage	Indoor
Included Components	2x Table Lamps, 2x USB-C Charging Cables
Manufacturer	E Mishan & Sons
UPC	080313062544

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or contact Bell+Howell directly through their official website or customer service channels. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question