JELLYPIG B0D5QT63ND

JELLYPIG Cordless Vacuum Cleaner User Manual

Model: B0D5QT63ND

1. Introduction

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your JELLYPIG Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

- Store the appliance indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.

3. Package Contents

Verify that all items are included in your package:

- Cordless Vacuum Cleaner (Main Unit)
- 2-in-1 Dusting Brush
- Long Crevice Nozzle
- Hair Cleaning Tool
- Wall Mount Plate
- HEPA Filter (pre-installed or spare)
- Power Adapter
- Manual Instructions (this document)



Figure 3.1: Main unit and accessories including dusting brush, crevice tool, hair cleaning tool, wall mount, and filters.

4. Product Features

- **Powerful Suction:** Equipped with a 550W advanced brushless motor, providing up to 45Kpa strong suction for effective cleaning of fine dust and stubborn particles on various surfaces, including deep carpet fibers.



Figure 4.1: Demonstrating the 45Kpa powerful suction capability.

- **Extended Runtime:** Features an 8*2500mAh high-capacity battery, offering up to 55 minutes of continuous runtime, suitable for large cleaning tasks.



Figure 4.2: The high-capacity battery providing extended runtime.

- **Anti-Tangle V-shaped Floor Brush:** Designed with a unique V-shaped brush and internal comb structure to prevent hair tangling around the brush head, reducing the need for frequent manual cleaning.

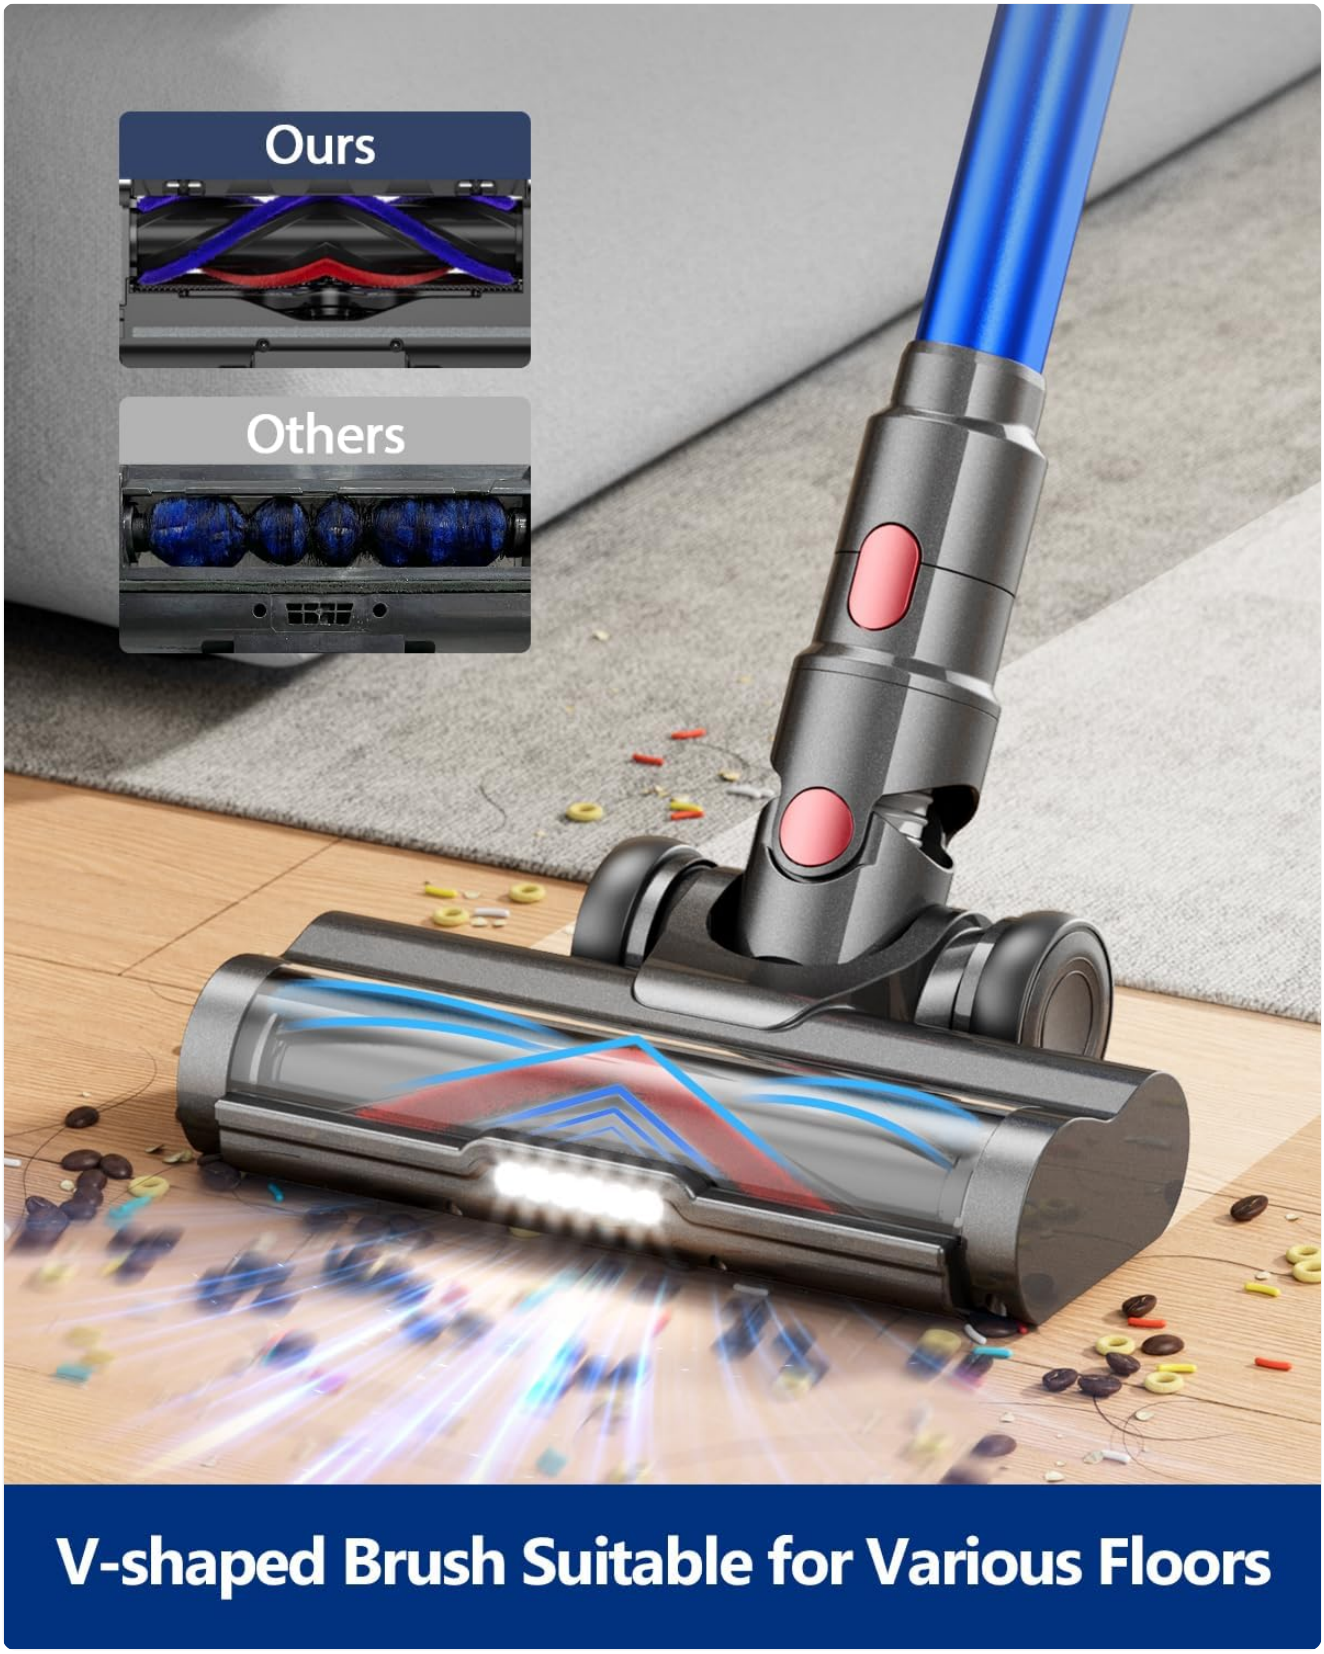


Figure 4.3: The V-shaped brush design for anti-tangle performance.

- **Smart LED Touch Screen & LED Light:** An intuitive LED touch screen displays real-time status, including remaining power and brush clogging reminders. It also allows for easy switching between cleaning modes. The integrated LED headlight illuminates dark areas, revealing hidden dust.



Figure 4.4: The smart LED touch screen interface.

- **Large Capacity Dust Cup:** Features a 1.5L dust cup, minimizing the frequency of emptying during cleaning tasks. The one-touch dust removal function ensures hygienic disposal.



Figure 4.5: Easy one-button dust cup emptying.

5. Setup and Assembly

5.1 Assembly

1. **Attach the Extension Wand:** Align the main unit (motor and dust cup) with the top end of the extension wand and push until it clicks into place.
2. **Attach the Floor Brush:** Align the floor brush with the bottom end of the extension wand and push until it clicks into place.

3. **Install Wall Mount:** Choose a suitable location near a power outlet. Secure the wall mount plate to the wall using the provided screws and anchors. Ensure it is at a height that allows the vacuum to hang freely.



Figure 5.1: Assembled vacuum cleaner on wall mount.

5.2 Charging the Battery

Before first use, fully charge the vacuum cleaner for approximately 3.5 hours.

- Connect the power adapter to the charging port on the main unit.
- Plug the power adapter into a wall outlet.
- The LED display will indicate charging status. Once fully charged, the display will show 100%.

- The battery can also be removed and charged separately.

6. Operating Instructions

6.1 Power On/Off

- To turn on, press the power button located on the handle.
- To turn off, press the power button again.

6.2 Adjusting Suction Modes

The vacuum cleaner features multiple suction modes (Min, Mid, Max) to suit different cleaning needs. These can be adjusted via the LED touch screen.

- Touch the "UP" button on the LED screen to cycle through the suction modes (Min, Mid, Max).
- The current mode will be displayed on the screen.

6.3 Using Attachments

The vacuum cleaner can be converted into a handheld unit by detaching the extension wand and floor brush. Attach the desired accessory directly to the main unit.

- **2-in-1 Dusting Brush:** Ideal for cleaning delicate surfaces, furniture, keyboards, and car interiors.
- **Long Crevice Nozzle:** Perfect for reaching tight spaces, corners, and crevices in upholstery or car seats.



Figure 6.1: Versatile use with included attachments.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Cup

- When the dust cup is full, or suction power decreases, it's time to empty it.
- Position the dust cup over a trash bin.
- Press the one-touch release button on the dust cup to open the bottom flap and release debris.
- Close the flap securely after emptying.

7.2 Cleaning the Filters

The HEPA filter and other filter components should be cleaned regularly to maintain suction power.

1. Twist and pull to remove the dust cup from the main unit.
2. Remove the HEPA filter and other internal filter components.
3. Tap the filters gently over a trash can to remove loose dust.
4. Rinse the filters under running water until the water runs clear. Do not use detergent.
5. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating devices.
6. Reassemble the filters and dust cup once completely dry.

7.3 Cleaning the Brush Head

Periodically check the V-shaped brush head for tangled hair or debris.

1. Turn off the vacuum cleaner.
2. Press the release button on the side of the floor brush to remove the brush roller.
3. Use the provided hair cleaning tool or scissors to cut and remove any tangled hair or fibers.
4. The brush roller can be rinsed with water if necessary. Ensure it is completely dry before reinserting.
5. Reinsert the brush roller until it clicks into place.

8. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully (approx. 3.5 hours).
	Battery not properly installed.	Ensure the battery pack is securely inserted.
Low suction power.	Dust cup is full.	Empty the dust cup.
	Filters are clogged.	Clean and dry the HEPA and other filters.
	Brush head or wand is blocked.	Check for blockages in the brush head, extension wand, or main unit intake. Remove any obstructions.
Brush roller not spinning.	Hair or debris tangled in brush.	Remove and clean the brush roller.
	Brush roller not properly installed.	Ensure the brush roller is securely reinserted.
LED screen shows error/warning.	Brush clogging reminder / Low battery.	Refer to the LED screen indicators (e.g., brush icon for clogging, battery icon for low power) and take appropriate action (clean brush, charge battery).

9. Specifications

Feature	Detail
Brand	JELLYPIG
Model	B0D5QT63ND
Motor Power	550W Brushless Motor
Suction Power	Up to 45Kpa
Battery Capacity	8 x 2500mAh Lithium Ion
Max Runtime	Up to 55 minutes
Charging Time	3.5 Hours
Dust Cup Capacity	1.5 Liters

Feature	Detail
Filter Type	HEPA Filter (Washable)
Noise Level	65 dB
Product Dimensions (L x W x H)	11" x 4.72" x 47.24"
Item Weight	6 pounds
Control Method	Touchpad Control

10. Warranty and Support

JELLYPIG provides comprehensive support for its products.

- **Return Service:** Enjoy a 2-year return service from the date of purchase.
- **Customer Service:** 7*24 hours service is available for any inquiries or assistance you may need. Please refer to your purchase documentation or the product packaging for specific contact details.

© 2024 JELLYPIG. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my JELLYPIG B0D5QT63ND Cordless Vacuum keep shutting off with a blinking HEPA filter light even after cleaning?

If your JELLYPIG B0D5QT63ND vacuum continues to shut off with a blinking HEPA filter light after cleaning, it usually indicates a persistent airflow restriction or a sensor error. Please check the following steps:Deep Clean...

Read full answer