Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TECURS KB096

TECURS Bluetooth Wireless Keyboard User Manual

Model: KB096 | Brand: TECURS

1. Introduction

Thank you for choosing the TECURS Bluetooth Wireless Keyboard. This full-size keyboard is designed for multi-device compatibility, offering both 2.4GHz wireless and three independent Bluetooth channels. Its ergonomic design and multimedia shortcuts enhance productivity and comfort across various operating systems, including Windows and Mac OS.

This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your keyboard.



Image 1.1: The TECURS Bluetooth Wireless Keyboard and its USB receiver.

2. Package Contents

Please check the package to ensure all items are present:

- 1x TECURS Wireless Keyboard
- 1x USB Receiver
- 1x User Manual

3. Specifications

Feature	Detail
Model	KB096
Connectivity Technology	2.4G Wireless, Bluetooth (3 Channels)
Number of Keys	110
Compatible Devices	Laptop, PC (Windows, Mac OS, iPad, iPhone)
Special Features	Ergonomic Design, Multimedia Shortcuts
Power Source	Battery Powered (2x AAA batteries, not included)
Product Dimensions	430 x 121 x 22 mm
Weight	730 g

4. Setup Guide

4.1 Battery Installation

The keyboard requires 2 AAA batteries (not included). Please purchase them separately.

1. Locate the battery compartment on the top edge of the keyboard.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image 4.1: Battery compartment for 2 AAA batteries.

4.2 Connecting via 2.4G Wireless

For 2.4G wireless connection, use the included USB receiver.

1. Locate the USB receiver, typically stored within the battery compartment or a dedicated slot on the keyboard.
2. Plug the USB receiver into an available USB port on your computer (PC, laptop, desktop).
3. On the keyboard, slide the power switch (located on the top edge) to the '2.4G' position.
4. The keyboard should automatically connect to your device.

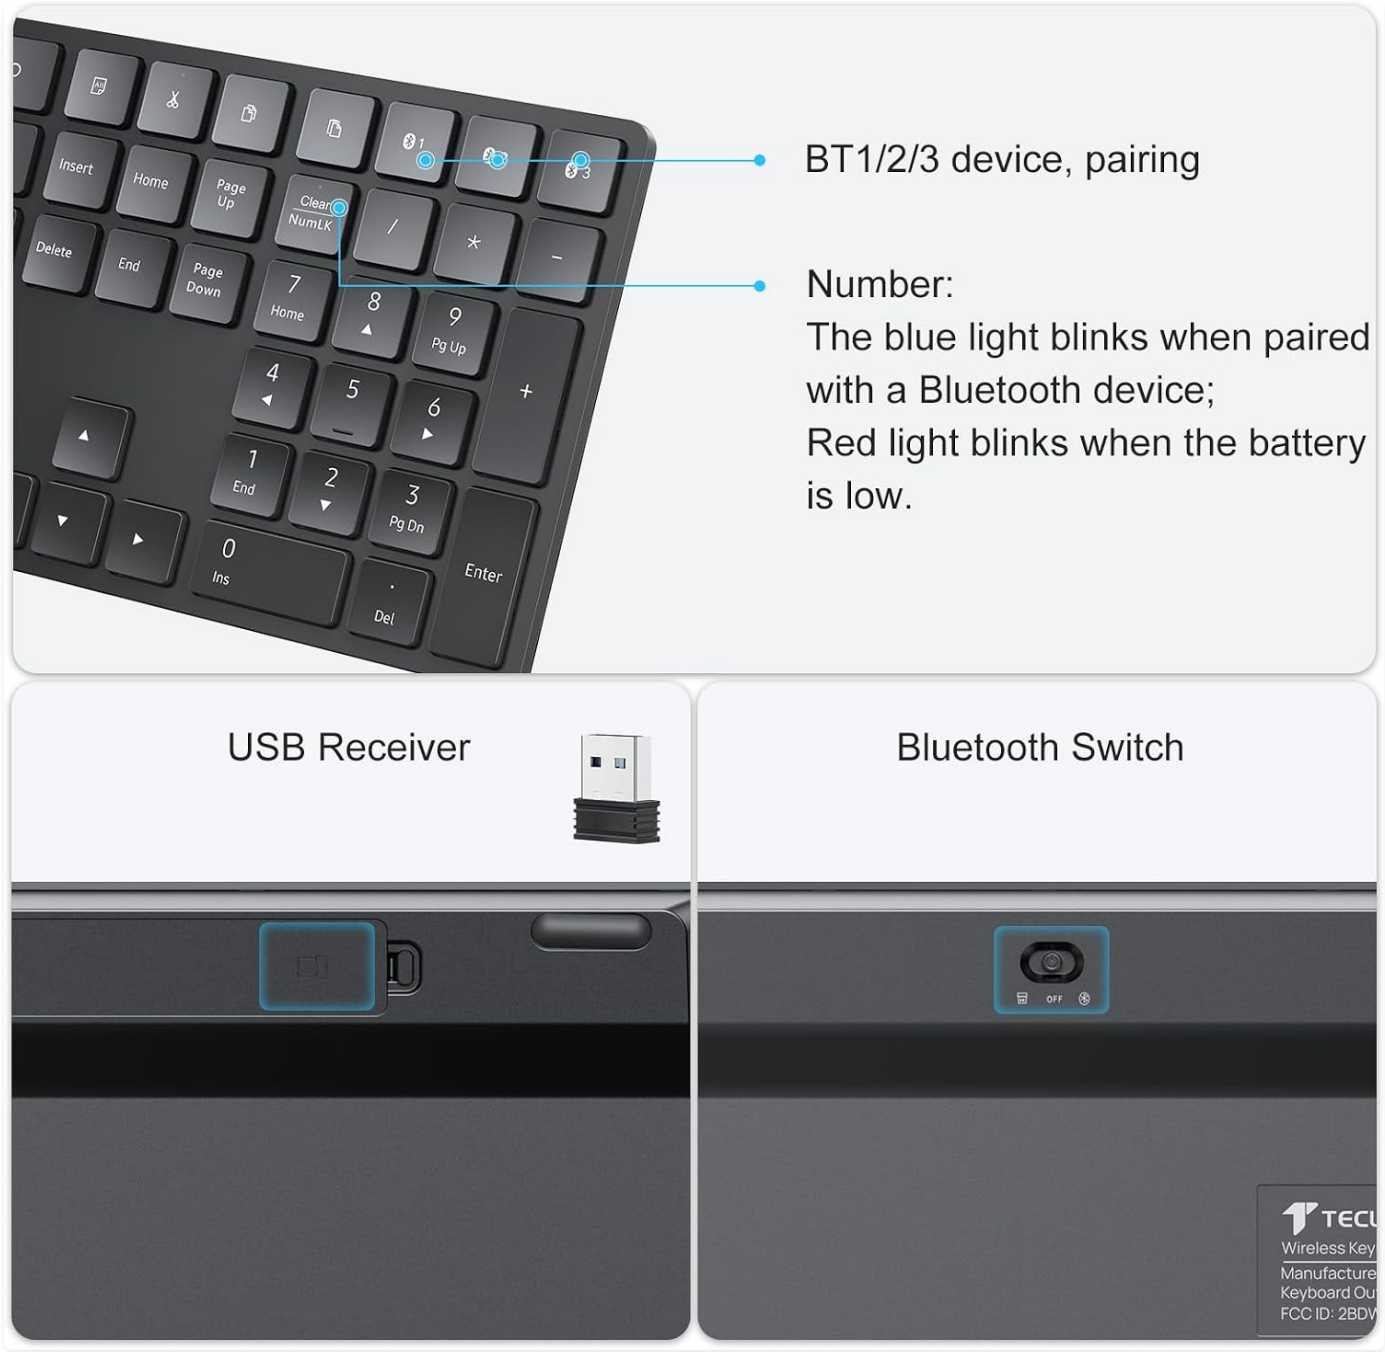


Image 4.2: USB receiver slot and Bluetooth/2.4G switch.

4.3 Connecting via Bluetooth (BT1/BT2/BT3)

The keyboard supports up to three Bluetooth devices.

1. On the keyboard, slide the power switch to the 'Bluetooth' position.
2. Press the **Fn** key simultaneously with one of the Bluetooth channel keys (**BT1**, **BT2**, or **BT3**) to select a channel.
3. Press and hold the selected Bluetooth channel key (**BT1**, **BT2**, or **BT3**) for three seconds until the blue indicator light blinks rapidly. This indicates pairing mode.
4. On your device (e.g., laptop, tablet, smartphone), enable Bluetooth and search for available devices.
5. Select "BT3.0 Keyboard" or "BT5.0 Keyboard" from the list of found devices to connect.
6. Once connected, the blue indicator light will stop blinking and remain solid for a few seconds before turning off.



Image 4.3: Step-by-step guide for Bluetooth connection.

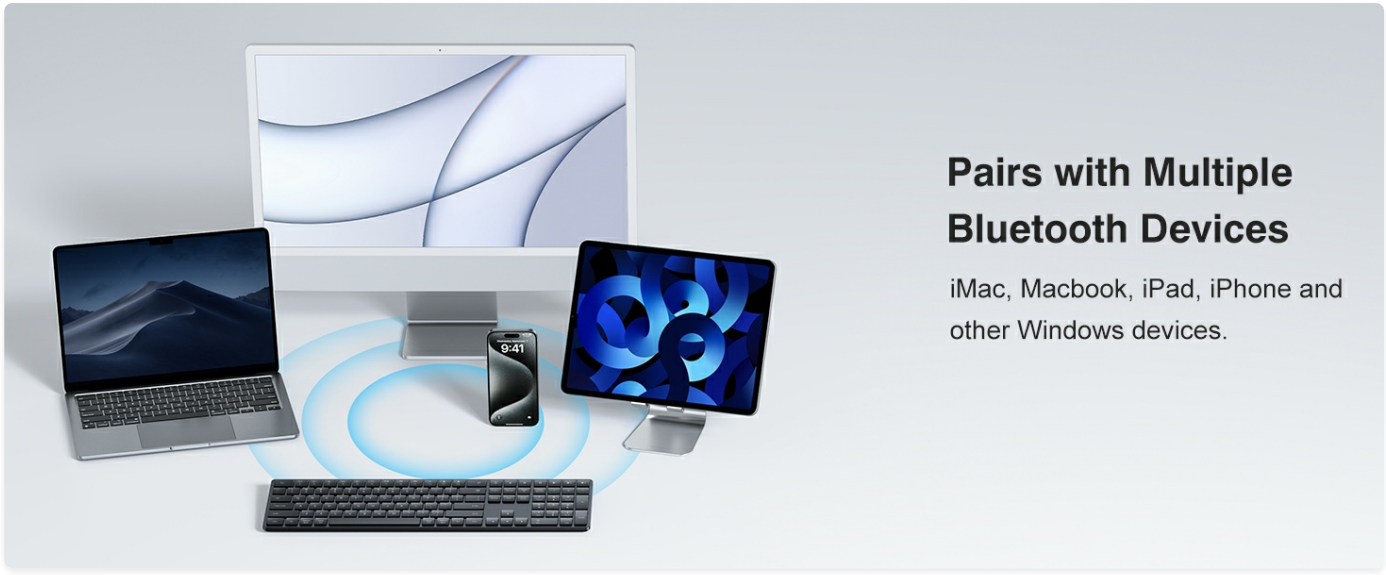


Image 4.4: The keyboard can pair with multiple Bluetooth devices.

5. Operating Instructions

5.1 Switching Between Devices

To switch between connected devices:

- For 2.4G wireless, ensure the power switch is in the '2.4G' position.
- For Bluetooth devices, ensure the power switch is in the 'Bluetooth' position. Then, press**Fn + BT1**, **Fn + BT2**, or **Fn + BT3** to switch to the desired paired device.

5.2 Multimedia Shortcuts

The keyboard features 18 special multimedia shortcuts accessible by pressing the**Fn** key in combination with the F-keys (F1-F12) and other designated keys. These shortcuts provide quick access to common functions.

Key Combination	Function
Fn + F1	Brightness +
Fn + F2	Brightness -
Fn + F3	Mute
Fn + F4	Volume +
Fn + F5	Volume -
Fn + F6	Screenshot
Fn + F7	Play/Pause
Fn + F8	Previous Track
Fn + F9	Next Track
Fn + F10	App Switch
Fn + F11	Screen Lock
Fn + F12	FN Lock
Fn + Search Icon	Search
Fn + Select All Icon	Select All
Fn + Cut Icon	Cut
Fn + Copy Icon	Copy
Fn + Paste Icon	Paste

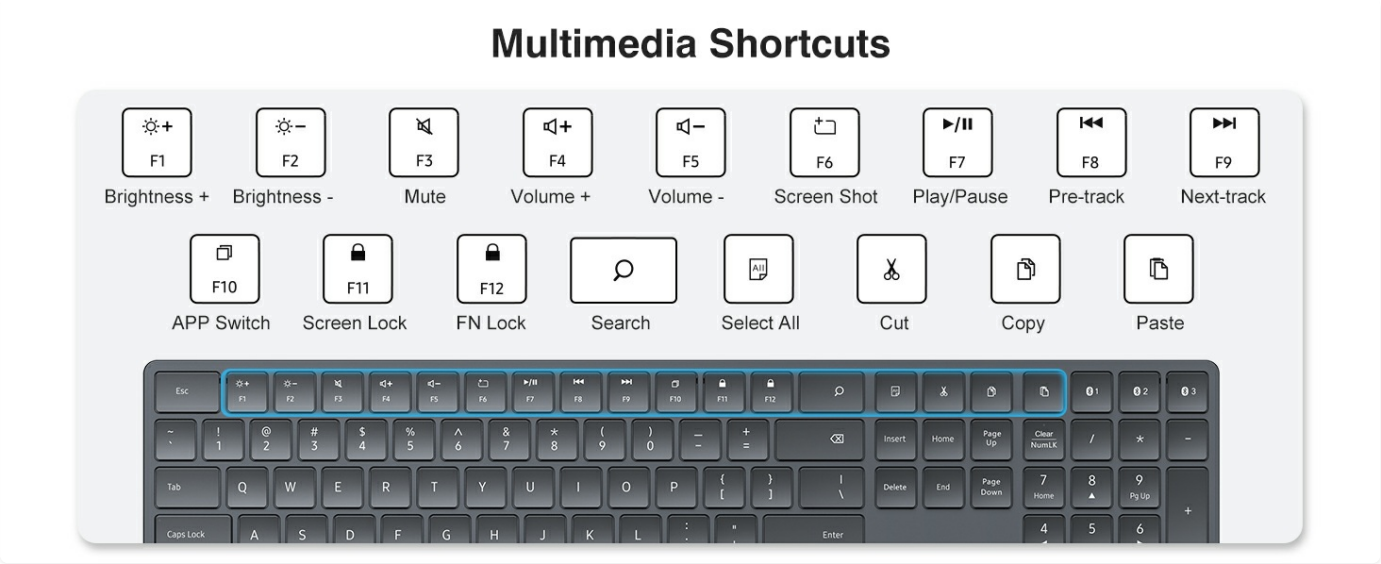


Image 5.1: Multimedia shortcuts for enhanced productivity.

5.3 Ergonomic Design

The TECURS keyboard features scissor-type switches for a quiet and comfortable typing experience. It also incorporates an ergonomic tilt of 8 degrees on the back, designed to reduce typing fatigue during extended use.



Image 5.2: Detail of the scissor switch design.



Image 5.3: Ergonomic typing angle and non-slip pads for stability.

6. Maintenance

To ensure the longevity and optimal performance of your keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface of the keyboard. Avoid excessive moisture. Do not spray cleaners directly onto the keyboard.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keys.
- **Storage:** When not in use for extended periods, store the keyboard in a dry, cool place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator (red light) appears to avoid performance issues.

7. Troubleshooting

If you encounter issues with your TECURS keyboard, please refer to the following common problems and solutions:

7.1 Keyboard Not Connecting / Disconnecting Frequently

- **Check Power:** Ensure the keyboard is powered on and the switch is set to the correct mode (2.4G or Bluetooth).
- **Batteries:** Replace the AAA batteries if they are low or depleted. The red indicator light will blink when the battery is low.
- **USB Receiver (2.4G Mode):** Ensure the USB receiver is securely plugged into a working USB port on your device. Try a different USB port.
- **Bluetooth Pairing:** For Bluetooth, ensure the keyboard is in pairing mode (blue light blinking rapidly) and your device's Bluetooth is enabled and searching. Re-pair the keyboard if necessary.
- **Interference:** Move the keyboard closer to your device and away from other wireless devices that might cause interference (e.g., Wi-Fi routers, other Bluetooth devices).
- **Device Compatibility:** Verify your device's operating system and Bluetooth version are compatible with the keyboard.

7.2 Keys Not Responding or Sticky Keys

- **Clean Keys:** Dust or debris under the keys can cause issues. Use compressed air to clean around and under the affected keys.
- **Restart:** Turn off the keyboard, remove batteries, wait a few seconds, then reinsert batteries and turn it back on.
- **Test on Another Device:** If possible, test the keyboard on another computer or device to determine if the issue is with the keyboard or the original device.

7.3 Multimedia Keys Not Working

- **Fn Key:** Ensure you are pressing the **Fn** key simultaneously with the desired multimedia key.
- **Operating System Settings:** Some operating systems may require specific driver updates or settings adjustments for full multimedia key functionality. Check your device's settings.

8. Warranty and Support

TECURS products are manufactured to high quality standards. For specific warranty details, please refer to the warranty card included with your purchase or contact TECURS customer support directly.

If you require further assistance or have questions not covered in this manual, please contact TECURS customer support through the contact information provided on the product packaging or the official TECURS website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question