Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TrendGear MK-3

TrendGear MK-3 2-in-1 Heater Fan Combo Instruction Manual

Model: MK-3 | Brand: TrendGear

Important Safety Instructions

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Do Not Cover:** To avoid overheating, do not cover the heater.
- **Keep Clear:** Maintain a minimum distance of 3 feet (0.9 meters) from the front of the heater and at least 1 foot (0.3 meters) from the sides and rear to any combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains.
- **Electrical Cords:** Keep electrical cords away from high temperature areas.
- **Tip-Over Protection:** The appliance is equipped with a tip-over switch that automatically shuts off the unit if it is knocked over. Ensure the unit is placed on a stable, flat surface. (Note: Overturn protection may be insensitive on soft surfaces such as carpets; avoid placing on such surfaces.)
- **Overheat Protection:** The appliance features an overheat protection system that automatically shuts off the unit if it overheats.
- **Indoor Use Only:** This appliance is designed for indoor use only.



Image: Caution label on the bottom of the heater fan, highlighting safety warnings.

Product Overview

The TrendGear MK-3 is a versatile 2-in-1 appliance designed to provide both heating and cooling comfort. It features multiple modes, oscillation, and safety mechanisms for reliable operation.

Key Features

- **3 Modes for All Year Round:** Offers low (750W) and high (1500W) heat settings, plus a cool fan setting.
- **55° Auto Oscillating:** Smoothly swings 55 degrees left to right for wide air distribution.
- **Compact and Portable:** Dimensions of 8.18"D x 10.23"W x 13.89"H and a weight of 4.62 pounds for easy movement.
- **Easy to Control:** Features an intuitive control panel and a multi-function remote control.
- **Safe & Reliable:** Includes tip-over and overheat protection for enhanced safety.



Image: The 2-in-1 function of the TrendGear MK-3, illustrating both heat and cool modes.

Setup

Unpacking

- Carefully remove the heater fan from its packaging.
- Remove all protective materials and ensure no parts are missing or damaged.
- Retain the packaging for future storage or transport.

Placement

- Place the heater fan on a firm, level surface.
- Ensure the unit is at least 3 feet (0.9 meters) away from walls, furniture, and other objects.
- Do not place the unit on soft surfaces like carpets where the tip-over switch might not function correctly.
- Ensure the power cord is not obstructed or placed under the unit.



Image: The compact dimensions of the TrendGear MK-3, suitable for tabletop placement.

Operating Instructions

Control Panel and Remote

The TrendGear MK-3 can be operated using the touch buttons on the unit's base or with the included remote control. The control panel features indicators for fan speed, heat settings, and temperature.



Image: The control panel and remote control for setting temperature and modes.

Power On/Off

- Plug the power cord into a standard 120V AC electrical outlet.
- Press the **Power button** ( ) on the control panel or remote to turn the unit on or off.

Selecting Modes (Heat/Fan)

- Press the **Mode button** ( ) to cycle through the available modes: Low Heat (750W), High Heat (1500W), and Cool Fan.
- The corresponding indicator lights on the control panel will illuminate to show the selected mode.

Adjusting Temperature (Heat Mode Only)

- In heat mode, press the **Temperature button** ( ) to select your desired temperature (70°F, 75°F, 80°F, 85°F).
- The unit's thermostat will automatically maintain the set temperature, turning the heating element on and off as needed.

Oscillation Function

- Press the **Oscillation button** ( ) to activate the 55° auto-oscillating feature.
- Press the button again to stop the oscillation.

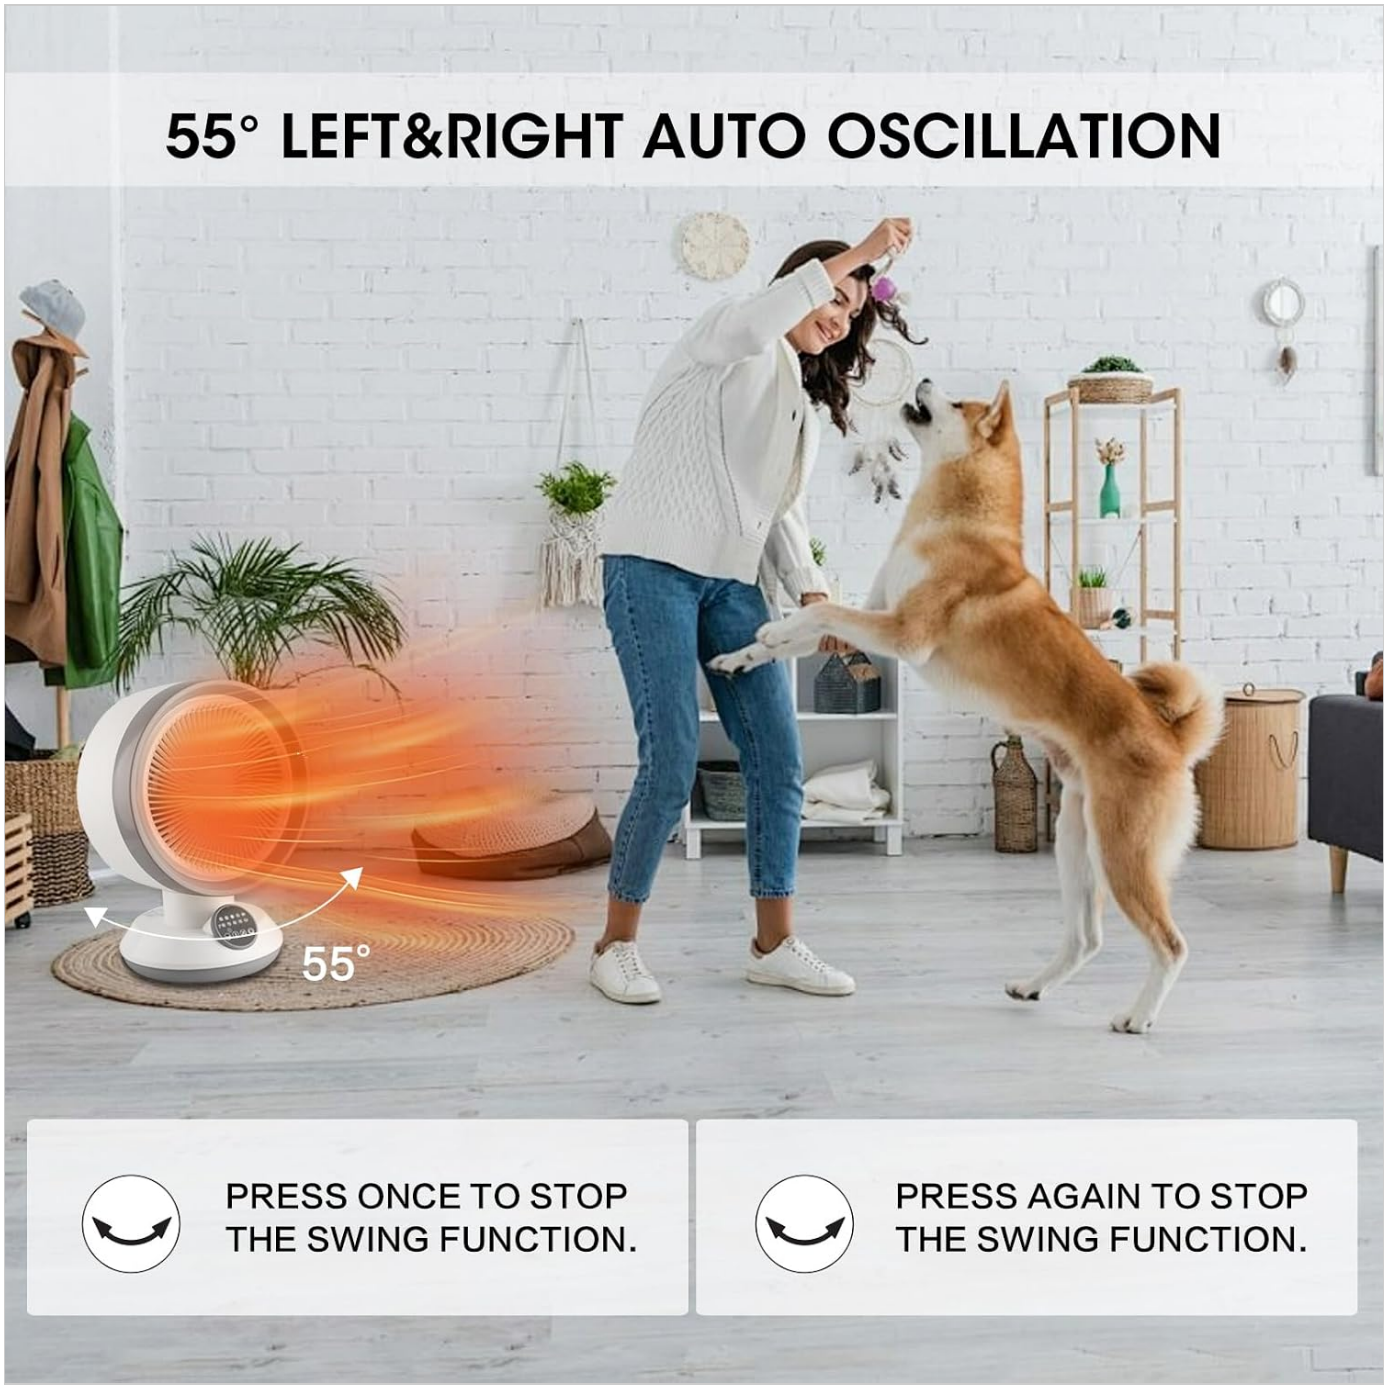


Image: The 55° auto oscillation feature, distributing air across a wider area.

Maintenance

Cleaning

- Always unplug the unit and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.
- Do not immerse the unit in water or allow water to drip into the interior.

Storage

- When not in use, store the appliance in a cool, dry place.
- It is recommended to store the unit in its original packaging to protect it from dust and damage.

Troubleshooting

If you experience issues with your TrendGear MK-3, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on.	No power, unit is unplugged, or power button not pressed.	Ensure the unit is securely plugged into a working outlet. Press the power button.
Unit shuts off unexpectedly.	Tip-over protection activated or Overheat protection activated.	Place the unit on a stable, flat surface. Check for obstructions around the air intake/exhaust. Allow unit to cool down before restarting.
No heat output.	Unit is in fan-only mode or temperature setting is too low.	Select a heat mode (Low or High). Increase the desired temperature setting.
Oscillation not working.	Oscillation function is not activated.	Press the oscillation button to activate the feature.

Specifications

Feature	Value
Brand	TrendGear
Model Number	MK-3
Power Source	Corded Electric
Heat Output	1500 Watts (High), 750 Watts (Low)
Voltage	120 Volts (AC)
Number of Speeds	2 (Heat modes) + Fan mode
Max Temperature Setting	85 Degrees Fahrenheit
Item Dimensions (D x W x H)	8.18"D x 10.23"W x 13.89"H
Item Weight	4.6 Pounds
Special Features	Adjustable Speed, Energy Efficient, Oscillating, Overheat Protection, Remote Control



Image: Detailed product dimensions of the TrendGear MK-3.

Warranty and Support

This TrendGear product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact customer support.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact TrendGear customer support:

- **Website:** www.trendgear.com/support (Example Link)
- **Email:** support@trendgear.com (Example Email)
- **Phone:** 1-800-XXX-XXXX (Example Number)

Please have your model number (MK-3) and purchase date available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5Y59LQW

More documents and user manuals: **https://manuals.plus/**