KODAK RM

KODAK 11.6 Inch WiFi Digital Picture Frame User Manual

Model: RM

1. Introduction

Thank you for purchasing the KODAK 11.6 Inch WiFi Digital Picture Frame. This manual provides essential information for setting up, operating, and maintaining your new digital photo frame. Please read this guide thoroughly before use to ensure optimal performance and longevity of your device.

2. Package Contents

Please check the package for the following items:

- KODAK 11.6 Inch WiFi Digital Picture Frame
- Power Adapter
- User Manual
- Frame Stand

3. Product Overview

Familiarize yourself with the components and controls of your digital picture frame.



Figure 3.1: Front view of the KODAK 11.6 Inch WiFi Digital Picture Frame, showcasing its display and sleek design.

3.1 Front Panel

- **11.6 Inch IPS Touchscreen Display:** High-definition screen for viewing photos and videos, with touch functionality for navigation.

3.2 Rear Panel and Ports

The rear panel includes various ports and controls for connectivity and operation.

Your browser does not support the video tag.

Video 3.2: Overview of the KODAK Digital Photo Frame, demonstrating its physical features, ports, and basic setup steps.

- **SD Card Slot:** For expanding storage or importing media from an SD card.
- **USB Port:** For connecting USB flash drives to import media.
- **Mini USB Port:** For connecting to a computer (note: use mini USB cable to add albums in the file of this frame).
- **DC-IN Port:** For connecting the power adapter.
- **Volume Control Buttons:** Adjust audio output.
- **Power Button:** To turn the device on/off or put it to sleep.

- **Frame Stand Slot:** For installing the included stand.

4. Setup

4.1 Installing the Frame Stand

Insert the provided stand into the slot on the back of the frame. Ensure it is securely in place to support the frame in either landscape or portrait orientation.



Figure 4.1: The frame supports automatic rotation, allowing flexible placement in landscape or portrait mode.

4.2 Power Connection

Connect the power adapter to the DC-IN port on the back of the frame, then plug the adapter into a power outlet. The frame will automatically power on.

4.3 Initial Setup and Wi-Fi Connection

1. Upon first power-on, follow the on-screen instructions to select your language and time zone.
2. Connect the frame to your Wi-Fi network by selecting your network name and entering the password. A stable Wi-Fi connection is required for sharing photos via the app and email.



Figure 4.3: Easy three-step setup process for connecting the frame and sharing media.

5. Operating Instructions

5.1 Touchscreen Navigation

The frame features a multi-touch screen for intuitive navigation. Swipe left/right to browse photos, tap to access options, and pinch to zoom.

5.2 KODAK App for Photo/Video Sharing

The KODAK app (available for iOS and Android) allows you to send photos and short videos (max 15 seconds) directly to your frame from anywhere in the world. This provides a private and secure way to share moments with family and friends.

1. Download the "KODAK" app from the App Store or Google Play.
2. Create an account and link your frame using the unique frame ID.
3. Invite family and friends to connect to your frame through the app, allowing them to share their photos and videos.



Figure 5.2: Private and secure sharing of photos and videos from the KODAK app to the frame.

5.3 Media Management and Storage

The frame comes with 32GB of built-in memory, capable of storing approximately 80,000 photos (at 600KB/pc). You can also expand storage using an SD card or USB drive.

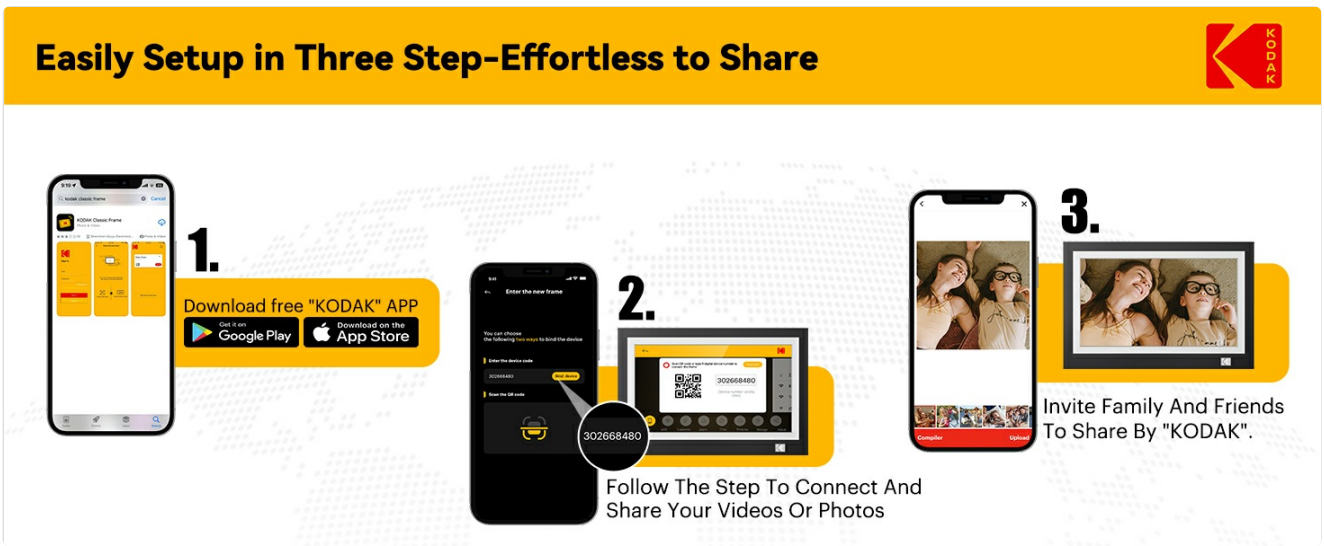


Figure 5.3: The frame's 32GB internal storage and options for expanding memory with SD cards.

5.4 Multifunction Smart Features

The frame includes various features to enhance your experience:

- **Slideshow:** Customize transition effects and display intervals for your photos.
- **Clock & Calendar:** Display time and date.
- **Alarm Clock:** Set alarms directly from the frame.
- **Weather:** View local weather forecasts (requires internet connection).
- **Adjustable Brightness:** Customize screen brightness for different lighting conditions.
- **Auto-Rotation:** Automatically adjusts photo orientation when the frame is rotated.

Figure 5.4: Overview of the frame's smart features, including calendar, clock, and slideshow options.

6. Media Integration

Your KODAK WiFi Digital Picture Frame supports multiple methods for uploading photos and videos.

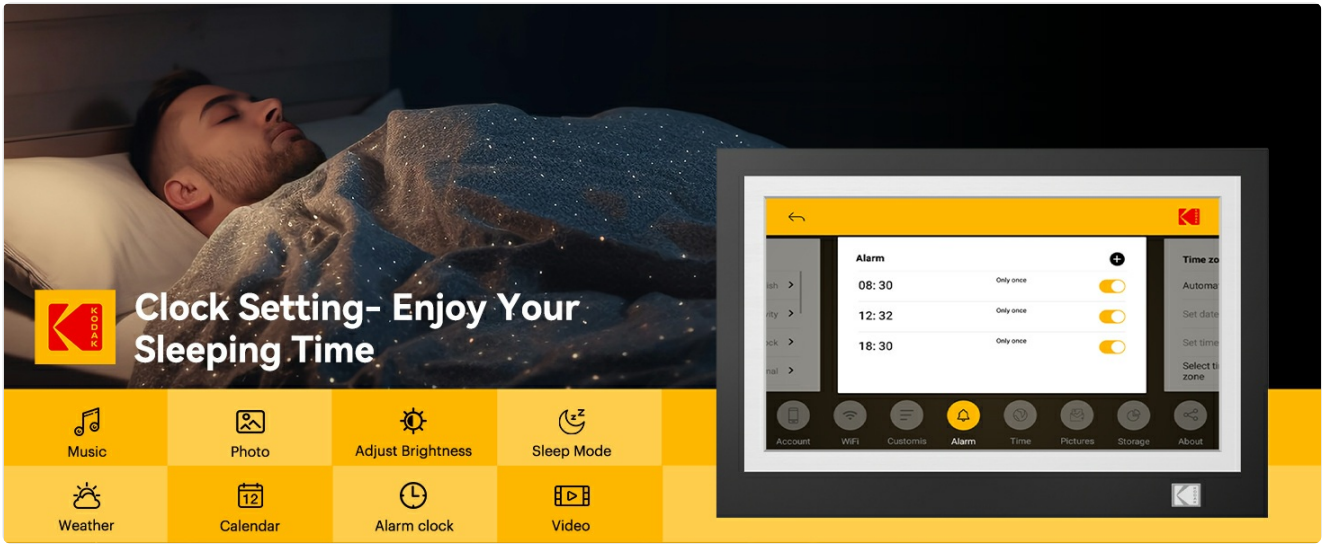


Figure 6.1: Six different methods for uploading media to your digital picture frame.

- **KODAK App:** Send photos and videos directly from your smartphone (refer to Section 5.2).
- **Email:** Send media to the frame's unique email address.
- **SD Card:** Insert an SD card into the dedicated slot to import media.
- **USB Disk:** Connect a USB flash drive to the USB port to import media.
- **Computer (Mini USB):** Connect the frame to a computer using a mini USB cable to manage files directly.
- **Google Photos:** Integrate with Google Photos for cloud-based photo access (check frame settings for this option).

7. Maintenance

7.1 Cleaning the Screen

To clean the touchscreen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

7.2 Software Updates

Periodically check for software updates in the frame's settings menu. Updates can improve performance, add new features, and enhance security. Ensure the frame is connected to Wi-Fi and has sufficient battery (if applicable) or is plugged into power during updates.

8. Troubleshooting

Problem	Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Verify your Wi-Fi password. Ensure the frame is within range of your router. Restart the frame and your router.
Photos are not appearing on the frame.	Check if the photos were successfully uploaded via the app, email, or external storage. Ensure the frame is connected to Wi-Fi if using app/email. Verify file formats are supported.
Touchscreen is unresponsive.	Restart the frame by holding down the power button. If the issue persists, contact customer support.
Frame is slow or freezing.	Try restarting the frame. Clear cache or reset to factory settings (note: this will erase all data).

9. Specifications

Feature	Detail
Model Number	RM
Screen Size	11.6 Inches
Resolution	1366 x 768 HD (WXGA)
Display Type	IPS Touchscreen
Internal Storage	32GB (approx. 80,000 photos at 600KB/pc)
Connectivity	WiFi
External Storage Support	SD Card, USB Drive
Product Dimensions	12.3 x 8.3 x 0.99 inches
Item Weight	3.21 pounds

Feature	Detail
Manufacturer	China

10. Warranty and Support

KODAK products are designed for reliability and performance. For warranty information, please refer to the documentation included with your purchase or visit the official KODAK support website. If you encounter any issues or have questions not covered in this manual, please contact our customer service team for assistance.

Customer Service: For professional customer service and support, please refer to the contact information provided with your product or on the KODAK brand website. Response typically within 24 hours.

© 2026 KODAK. All rights reserved.