realme Air 6 Pro

realme Air 6 Pro True Wireless Earbuds

User Manual

Model: Air 6 Pro | Brand: realme

Introduction

Thank you for choosing the realme Air 6 Pro True Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as 50dB Intelligent Deep Sea Noise Cancellation 2.0, Hi-Res Audio with LDAC support, and 3D spatial sound. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds to ensure optimal performance.

What's in the Box

Please check the package contents to ensure all items are present:

- realme Air 6 Pro Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable
- Eartips (various sizes)
- User Manual (this document)



Image: realme Air 6 Pro True Wireless Earbuds and their charging case, displayed open with both earbuds inside.

Setup

1. Charging the Earbuds and Case

Before first use, fully charge the realme Air 6 Pro earbuds and their charging case. The case can be charged via the included USB cable or wirelessly.

- **Wired Charging:** Connect the USB charging cable to the charging port on the case and to a power source. The indicator light on the case will show charging status.

- **Wireless Charging:** Place the charging case on a compatible wireless charging pad.
- The earbuds will charge automatically when placed inside the charging case.

A full charge provides up to 10 hours of playback for the earbuds, and up to 40 hours total with the charging case.



Image: Graphic illustrating the ultra-long playtime of the realme Air 6 Pro, showing 10 hours on a single charge and 40 hours with the charging case, along with a fast charge icon.

2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case lid is open.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "realme Air 6 Pro" in the list of available Bluetooth devices.
4. Select it to pair. Once connected, you will hear an audio prompt.

The earbuds feature Bluetooth 5.3 for a stable and reliable connection.

Operating the Earbuds

Touch Controls

The realme Air 6 Pro earbuds feature intuitive touch controls for easy management of music playback, calls, and noise control modes. Specific gestures can be customized via the realme Link app.

Action	Gesture
Play/Pause Music	Single tap on either earbud
Next Track	Double tap on right earbud
Previous Track	Double tap on left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud
Switch Noise Control Mode (ANC/Transparency/Normal)	Press and hold either earbud (customizable)

Noise Cancellation and Sound Modes

The realme Air 6 Pro features advanced audio technologies for an immersive listening experience:

- **50dB Intelligent Deep Sea Noise Cancellation (ANC) 2.0:** Significantly reduces ambient noise, allowing you to focus on your audio. This includes 4000Hz ultra-wide frequency noise reduction.
- **Transparency Mode:** Allows you to hear your surroundings without removing the earbuds.
- **Normal Mode:** Standard audio playback without noise cancellation or transparency.



Image: An earbud with sound waves emanating, illustrating the 50dB Smart Noise Cancellation feature.

- **Hi-Fi Level Coaxial Dual Unit:** Features a 6mm micro-plane tweeter and an 11mm woofer for rich, detailed audio with crisp highs and deep bass.
- **Hi-Res Certification & LDAC Audio Codec:** Ensures exceptional audio fidelity, capturing every nuance of your music.
- **3D Spatial Sound:** Creates a wider and more realistic soundscape, enhancing immersion for movies and games.
- **55ms Ultra-Low Latency:** Guarantees perfect synchronization for videos and games, minimizing

audio delay.

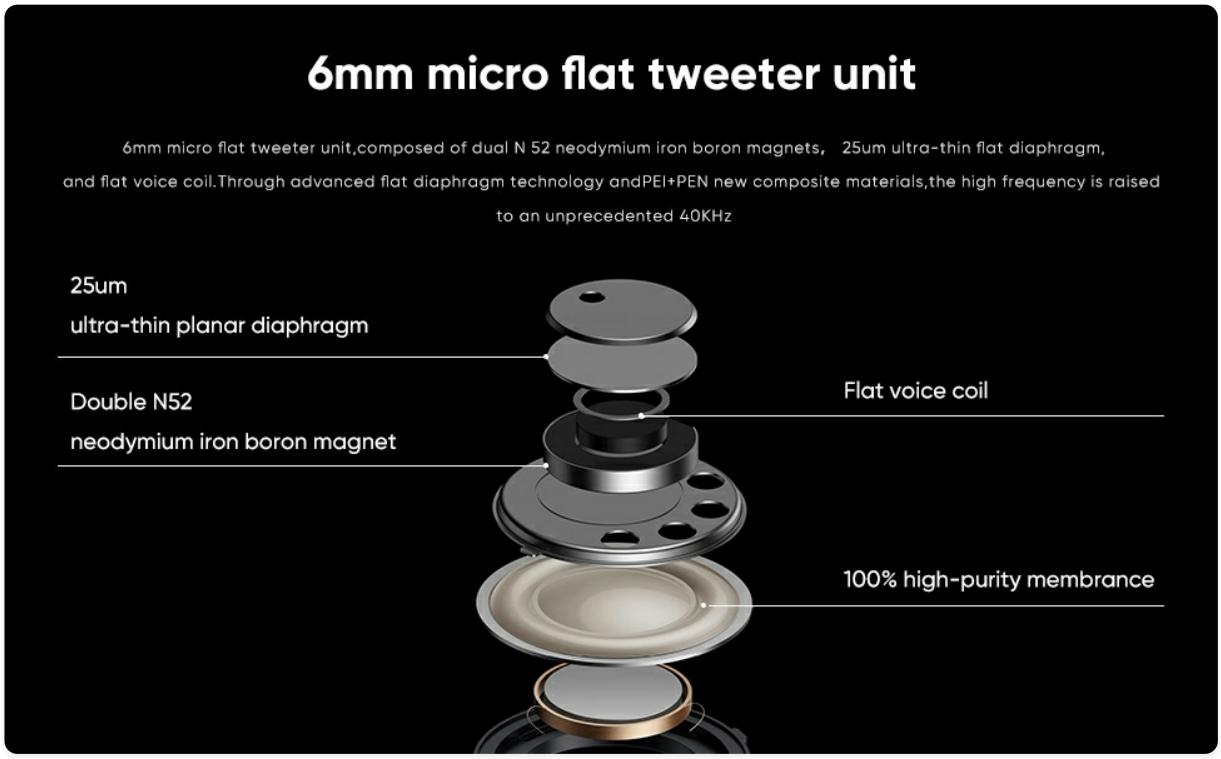


Image: An exploded diagram of the realme Air 6 Pro's HiFi Level Coaxial Dual Unit, showing the 6mm micro-plane tweeter and 11mm woofer components.



Image: The realme Air 6 Pro earbuds and case with "Hi-Res Audio Wireless" and "LDAC" logos, indicating high-resolution audio support.



Image: A smartphone screen displaying a racing game with the realme Air 6 Pro earbuds in the foreground, highlighting the 55ms ultra-low latency feature.

Making Calls

The earbuds are equipped with 6 integrated microphones and AI noise cancellation to ensure clear calls by filtering out unwanted background noise.

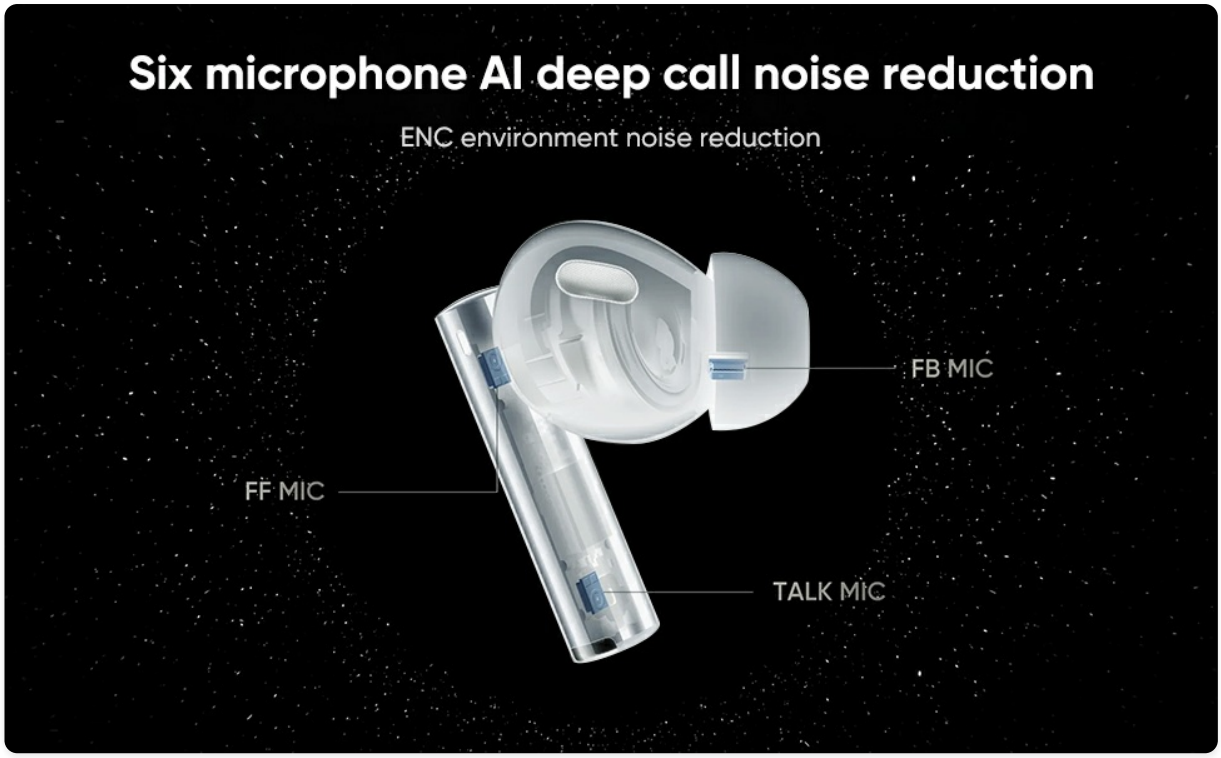


Image: A person wearing a realme Air 6 Pro earbud, with text indicating "6 Mics For Clear Calls" and "Amplify Your Voice and Reduce Background Noise."

Maintenance

Cleaning and Care

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Avoid using abrasive materials or harsh chemicals.
- Keep the charging contacts on both the earbuds and the case clean to ensure proper charging.

Water Resistance

The realme Air 6 Pro earbuds have an IP55 water resistance rating, meaning they are protected against dust and low-pressure water jets. This makes them suitable for workouts and light splashes, but they are not designed for submersion in water.



Image: realme Air 6 Pro earbuds with water droplets on them, demonstrating their IP55 water resistance.

Troubleshooting

If you encounter any issues with your realme Air 6 Pro earbuds, please refer to the following common solutions:

- **Earbuds not pairing:** Ensure both earbuds are in the case, close the lid, wait a few seconds, then open it again. Check your device's Bluetooth settings and try re-pairing.
- **No sound from one earbud:** Place both earbuds back in the case, close the lid, and reopen. Ensure they are fully charged.
- **Charging issues:** Clean the charging contacts on both the earbuds and the case. Try a different charging cable or wireless charging pad.
- **Poor sound quality:** Ensure the eartips provide a good seal in your ear. Try different sized eartips. Check for debris in the earbud nozzles.
- **App connectivity issues:** Ensure the realme Link app is updated to the latest version. Restart your phone and try again.

For further assistance, consult the realme Link app for additional settings and firmware updates, or visit the official realme support website.

Specifications

Feature	Detail
Model Name	Air 6 Pro
Connectivity Technology	Wireless (Bluetooth 5.3)
Noise Control	Active Noise Cancellation (50dB ANC 2.0)
Audio Driver Type	Hi-Fi Level Coaxial Dual Unit (11mm woofer, 6mm micro-plane tweeter)
Frequency Range	20 Hz - 40,000 Hz
Audio Latency	55 Milliseconds
Battery Life	Up to 10 hours (earbuds), 40 hours (with charging case)
Charging	USB-C, Wireless Charging
Water Resistance Level	IP55
Control Type	Touch Control
Included Components	Earbuds, Wireless Charging Case, USB Cable, Eartips, User Manual
Item Weight	6.3 ounces

Warranty and Support

realme products are covered by a limited warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official realme website. For product support, FAQs, and the latest software updates, download the realme Link app or visit the realme official store:

Visit the realme Store on Amazon

© 2025 realme. All rights reserved.