T4TREAM VSC5DRSC-LRO

T4TREAM Farmhouse 5-Drawer Dresser User Manual

Model: VSC5DRSC-LRO

1. Product Overview

The T4TREAM Farmhouse 5-Drawer Dresser is a rustic and vintage-designed storage solution for bedrooms and living rooms. It features natural wood texture, embossed details, and sturdy construction.



Image 1: Front view of the T4TREAM Farmhouse 5-Drawer Dresser in Light Rustic Oak, showcasing its five drawers and rustic finish.

Key Features:

- **Rustic Farmhouse Design:** Natural wood grain with light rustic oak finish, embossed textures, and beveled edges.
- **Ample Storage:** Five spacious drawers, each 6.3 inches deep, suitable for clothing and linens.
- **Durable Construction:** Made with FSC-Certified wood materials, featuring a 1.18" thick tabletop and unique feet design for stability.
- **Vintage Accents:** Roman column-style handles add a classic touch.
- **Safety Feature:** Includes an anti-toppling device for enhanced stability.

Specifications:

Brand:	T4TREAM
Model Name:	VSC5DRSC-LRO

Product Dimensions:	31.2"W x 15.5"D x 48"H
Item Weight:	107 Pounds
Color:	Light Rustic Oak
Assembly Required:	Yes



Image 2: Detailed dimensions of the dresser and an illustration of the anti-toppling device for secure installation.

2. Setup and Assembly

The T4TREAM Farmhouse 5-Drawer Dresser requires assembly. Follow the included clear assembly instructions and utilize the labeled parts for a smooth process. It is recommended to have a second person assist with assembly.

Before You Begin:

- Unpack all components and verify against the parts list in the instruction manual.
- Ensure you have the necessary tools (e.g., screwdriver).
- Assemble the dresser in the room where it will be placed due to its weight (107 lbs).
- Inspect all parts for any damage before assembly.

Assembly Steps:

1. Follow the step-by-step diagrams and instructions provided in the separate assembly manual.
2. Attach the Roman column-style handles to each drawer front.
3. Install the anti-toppling device securely to the wall as per instructions to prevent accidental tipping.

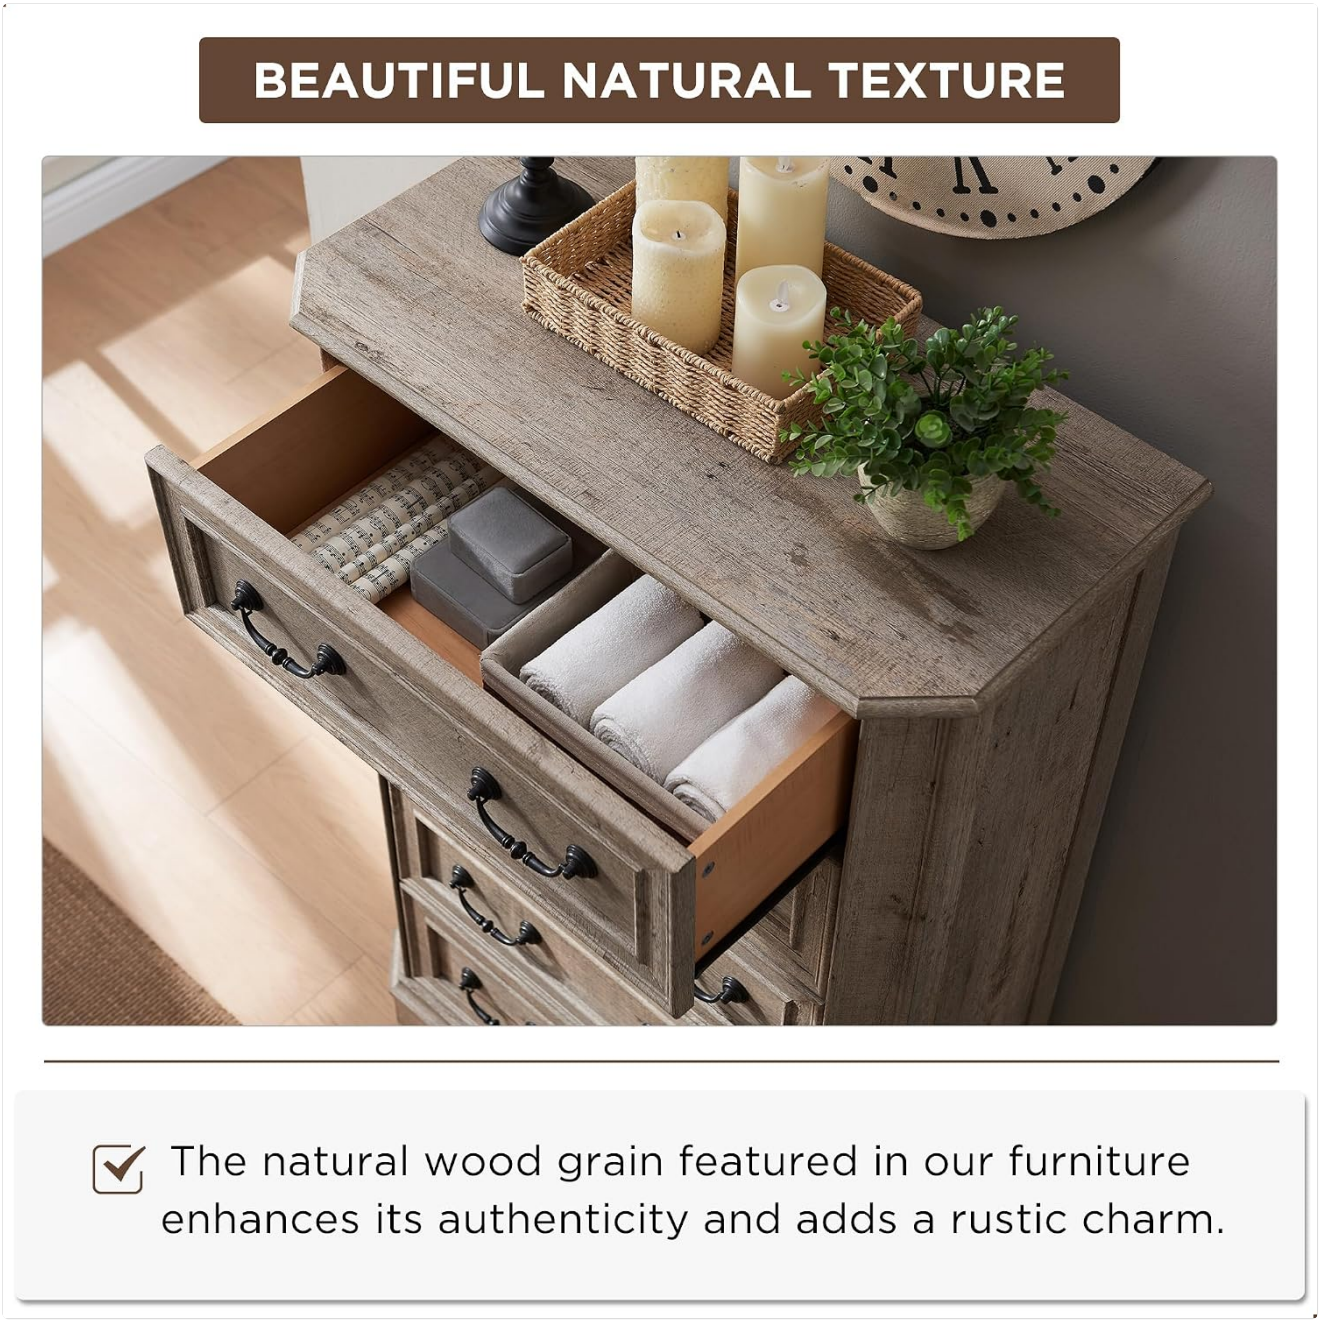


Image 3: Close-up view of a dresser drawer and its handle, highlighting the vintage design and texture.

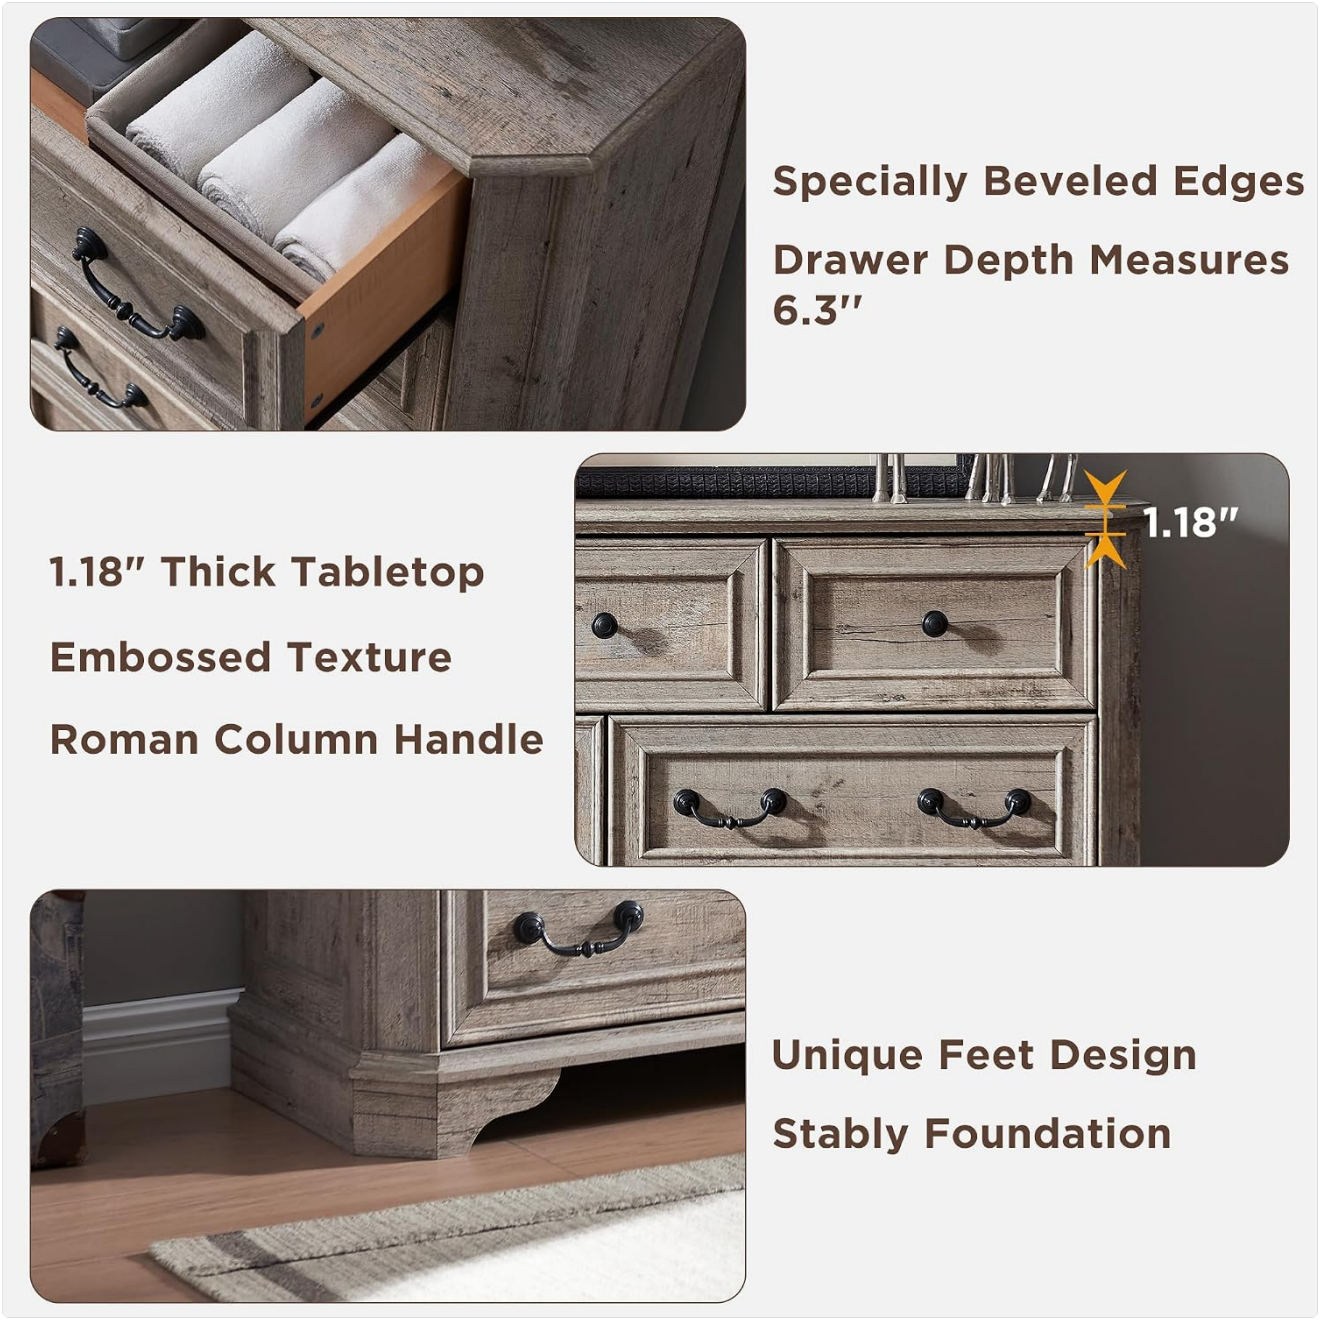


Image 4: Detail of the dresser's base and unique feet design, contributing to its overall stability.

3. Operating Instructions

The T4TREAM Farmhouse 5-Drawer Dresser is designed for straightforward use. Its five drawers provide ample storage for various items.

Drawer Usage:

- Gently pull the Roman column-style handles to open the drawers.
- Organize clothing, linens, or other personal items within the spacious 6.3-inch deep drawers.
- Push the drawers firmly until they are fully closed to ensure items are secure and dust-free.



Image 5: An open dresser drawer showcasing its storage capacity, filled with neatly folded towels.

Top Surface Use:

- The spacious tabletop (31.2"W x 15.5"D) can be used to display decorative items, framed photos, or a lamp.
- Avoid placing excessively heavy objects on the tabletop to maintain stability and prevent damage.



Image 6: The dresser with decorative items on its top surface, demonstrating its use as a display area in a bedroom setting.

4. Maintenance and Care

Proper care will ensure the longevity and appearance of your T4TREAM Farmhouse 5-Drawer Dresser.

Cleaning:

- Wipe the dresser with a dry cloth to remove dust and debris.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the wood finish.

General Care:

- Keep the dresser away from direct sunlight and extreme temperature changes to prevent warping or fading.
- Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.

- Ensure the anti-toppling device remains securely attached to the wall.

5. Troubleshooting

This section addresses common issues you might encounter with your dresser.

Problem	Possible Cause	Solution
Drawers stick or do not slide smoothly.	Misaligned drawer slides or debris in the tracks.	Check that drawer slides are properly aligned and free of obstructions. Lubricate tracks with a silicone-based spray if needed.
Dresser feels wobbly or unstable.	Loose fasteners or uneven floor.	Ensure all assembly screws are tightened. Place furniture pads or shims under the feet to level the dresser on uneven surfaces. Verify anti-toppling device is installed correctly.
Handles are loose.	Screws securing the handles have loosened.	Tighten the screws on the inside of the drawer that secure the handles. Do not overtighten.
Surface scratches or minor damage.	Normal wear and tear or accidental impact.	For minor scratches, use a wood repair marker or furniture polish matching the light rustic oak finish. For deeper damage, consult a professional.

6. Warranty and Support

T4TREAM is committed to providing high-quality products and customer satisfaction.

Warranty Information:

Specific warranty details are typically provided with your purchase documentation. Please refer to the warranty card or contact T4TREAM customer service for comprehensive information regarding coverage and terms.

Customer Support:

If you encounter any issues during assembly, have questions about product care, or require assistance, our dedicated support team is available to provide professional assistance.

For support, please refer to the contact information provided in your product packaging or visit the official T4TREAM website. You can also visit the T4TREAM Store on Amazon for more information.

© 2024 T4TREAM. All rights reserved.