Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HOMCOM 853-025V80GY

HOMCOM Portable Clothes Dryer Instruction Manual

Model: 853-025V80GY

1. Introduction

Thank you for choosing the HOMCOM Portable Clothes Dryer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.



Image 1.1: The HOMCOM Portable Clothes Dryer in a typical home environment.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury, adhere to the following safety precautions:

- Always connect the dryer to a properly grounded 120V, 1300W electrical outlet.
- Do not dry items that have been soiled with cooking oils, flammable chemicals, or other combustible substances.
- Clean the lint filter before or after each load to prevent fire hazards and maintain drying efficiency.
- Ensure adequate ventilation around the dryer. Do not block air openings.
- Do not allow children to play on or in the dryer. Supervise children when the dryer is in use.
- If the dryer door is opened during operation, the machine will automatically stop for safety.

3. Product Overview

The HOMCOM Portable Clothes Dryer is designed for compact spaces, offering efficient drying with multiple modes. Key features include a stainless steel drum, a transparent door window, and a convenient carry handle.



Image 3.1: Detailed view of the dryer's transparent door, stainless steel inner drum, and integrated carry handle.



Image 3.2: Visual representation of the dryer's high power, 13 lbs / 3.22 cu ft capacity, and high temperature capabilities.

4. Setup and Installation

Before operating your dryer, ensure it is properly installed according to these guidelines.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the dryer for any shipping damage. Retain packaging for potential future transport or service.

4.2 Placement

The dryer can be placed freestanding on the floor, stacked on a compatible washer, or wall-mounted using the included brackets. Ensure the surface is level and stable. For wall mounting, consult a professional to ensure proper installation and structural support.

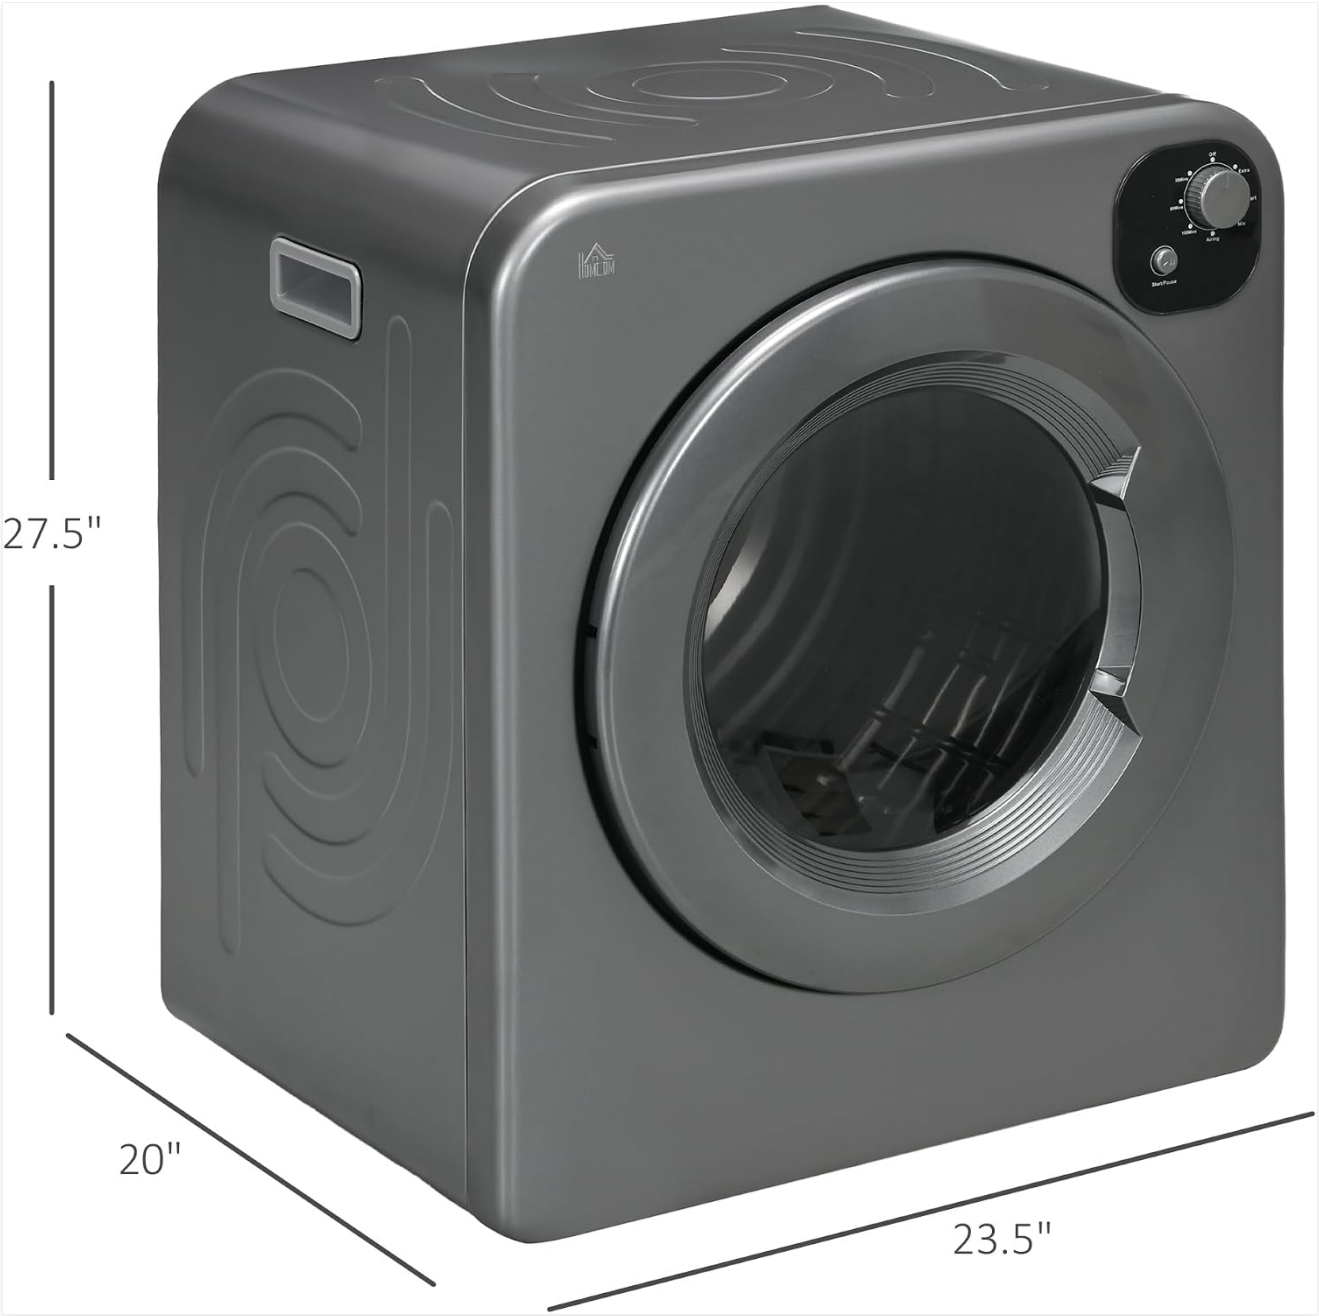


Image 4.1: Product dimensions for placement planning.

4.3 Ventilation

Connect the provided air vent connector to the exhaust port at the rear of the dryer. Secure it with the three included screws. Ensure the exhaust hose (not included) is directed outdoors or to a suitable ventilation system to prevent moisture buildup.



Image 4.2: Rear view detailing the air vent connector, protective foot pads, and air inlet filter screen.

Your browser does not support the video tag.

Video 4.1: Demonstrates the installation of the air vent connector on the HOMCOM portable dryer.

4.4 Power Connection

Plug the dryer into a dedicated 120V, 60Hz, 15A (minimum) grounded electrical outlet. Do not use extension cords or adapters.

5. Operating Instructions

Follow these steps for effective drying of your laundry.

5.1 Loading Clothes

Open the dryer door and load clothes into the stainless steel drum. Do not overload the dryer; ensure clothes can tumble freely. For optimal results, spin-dry clothes thoroughly before placing them in the dryer.

5.2 Selecting a Drying Mode

Turn the control knob to select one of the seven available drying modes:

- **Extra:** 160 minutes, 140°F (60°C) - For heavy or bulky items.
- **Smart:** 100 minutes, 140°F (60°C) - For standard loads.
- **Mix:** 47 minutes, 131°F (55°C) - For mixed fabric loads.
- **Airing:** 100 minutes, 77°F (25°C) - For refreshing items without heat.
- **Timed Modes:** 30 minutes, 90 minutes, 150 minutes - For custom drying times.



Image 5.1: The control panel with the rotary knob for selecting drying modes and the Start/Pause button.

5.3 Starting the Cycle

Press the Start/Pause button to begin the selected drying cycle. The dryer will automatically stop when the cycle is complete or if the door is opened.

5.4 Removing Clothes

Once the cycle is finished, open the door and remove your dry clothes. Promptly removing clothes can help reduce wrinkles.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

6.1 Cleaning the Lint Filter

The dryer features a two-layer filter to effectively trap lint. Clean the lint filter located inside the drum before or after every load. Pull the filter out, remove accumulated lint, and reinsert it securely.

6.2 Cleaning the Exterior

Wipe the exterior of the dryer with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6.3 Internal Cleaning

Periodically inspect the interior of the drum for any residue. Wipe with a damp cloth if necessary. Ensure the drum is dry before operating the dryer again.

7. Troubleshooting

If you encounter issues with your dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged, door not closed, circuit breaker tripped.	Ensure power cord is securely plugged in. Close the door firmly. Check and reset the circuit breaker.
Clothes are not drying	Overloaded dryer, clogged lint filter, incorrect drying mode selected.	Reduce load size. Clean the lint filter. Select a longer or hotter drying mode.
Unusual noises during operation	Foreign objects in the drum, dryer not level.	Check the drum for loose items. Ensure the dryer is on a level surface.
Dryer stops mid-cycle	Door opened, power interruption.	Close the door securely. Check power supply.

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Feature	Specification
Brand	HOMCOM
Model Number	853-025V80GY
Item Weight	60 pounds

Feature	Specification
Product Dimensions (L x W x H)	20 x 23.5 x 27.5 inches
Capacity	13 Pounds (3.22 Cu. Ft)
Voltage	120 Volts
Wattage	1300 watts
Noise Level	65 Decibels
Installation Type	Freestanding, Stackable, Wall Mounted
Material Type	Alloy Steel
Color	Gray
Included Components	Air Vent Connector, Screws
Certification	cETL, cUL

9. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official HOMCOM website. Keep your purchase receipt as proof of purchase for warranty claims. **Aosom Direct** is the seller of this product. For specific inquiries, you may contact them directly through your purchase platform.

© 2026 HOMCOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D692F3N8

More documents and user manuals: **https://manuals.plus/**