Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Puzau DG68-00377A FX710BGS knobs

Instruction Manual: DG68-00377A Stove Knob Replacement

Brand: Puzau | Model: DG68-00377A FX710BGS Knobs

1. Introduction

This manual provides essential information for the proper installation, use, and care of your new DG68-00377A Stove Knob Replacements. These knobs are designed to be a durable and compatible replacement for various Samsung oven models, featuring an upgraded material and reinforced design for enhanced longevity and performance. Please read this manual thoroughly before installation and use.

2. Safety Information

Always prioritize safety when working with appliances. Follow these guidelines:

- **Disconnect Power:** Before attempting any installation or maintenance, ensure the stove or oven is completely disconnected from its power source to prevent electrical shock.
- **Handle with Care:** While durable, handle the knobs carefully during installation to avoid damage.
- **Proper Fit:** Ensure the replacement knobs fit securely onto the D-shaped shaft. A loose knob can lead to improper operation.
- **Keep Away from Children:** Store replacement parts and tools out of reach of children.

3. Package Contents

Your package should contain the following items:

- 5 x DG68-00377A Stove Knobs



Image: Contents of the package, showing five replacement stove knobs.

4. Specifications

Feature	Detail
Model Number	DG68-00377A FX710BGS knobs
Material	High-quality ABS with steel coating (exterior), Stainless Steel (interior reinforcement)
Color	Silver
Product Dimensions	Approximately 2.1" (Diameter) x 0.43" (Shaft Depth)
Shaft Interface	Reinforced D-type interface

Feature	Detail
Weight	Approximately 1.08 pounds (for the set of 5)
Quantity	5 Count

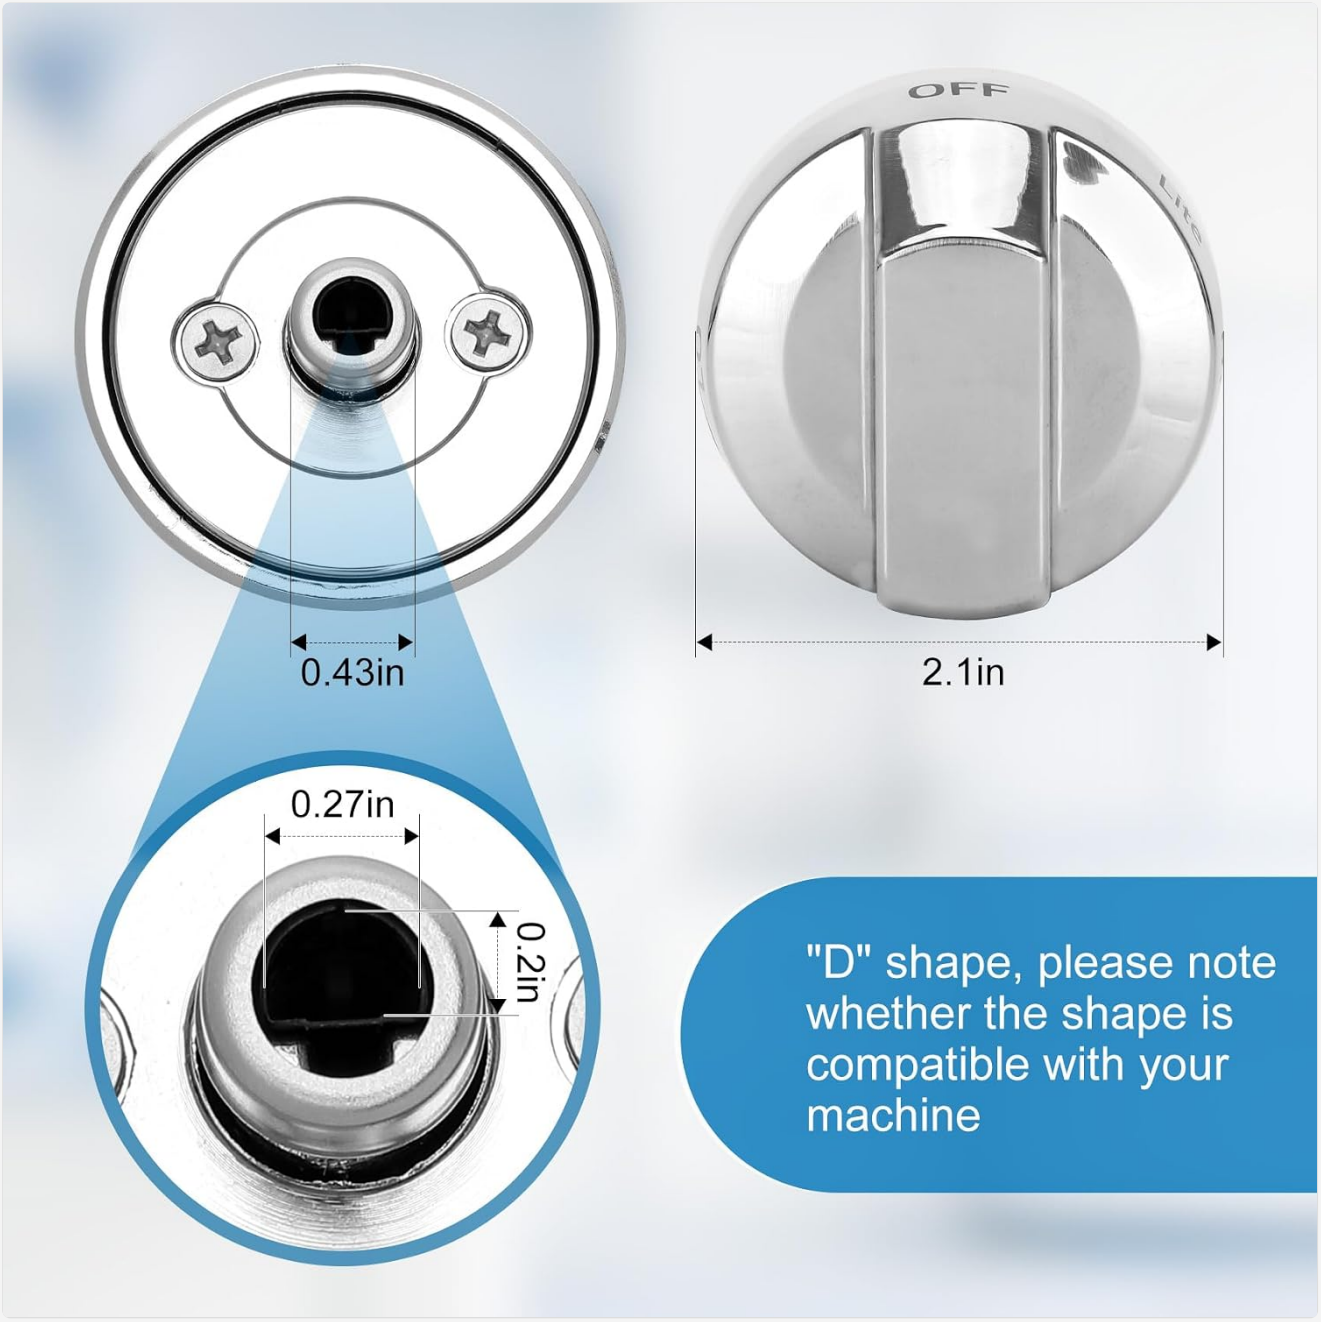


Image: Detailed dimensions of the stove knob and its D-shaped interface.

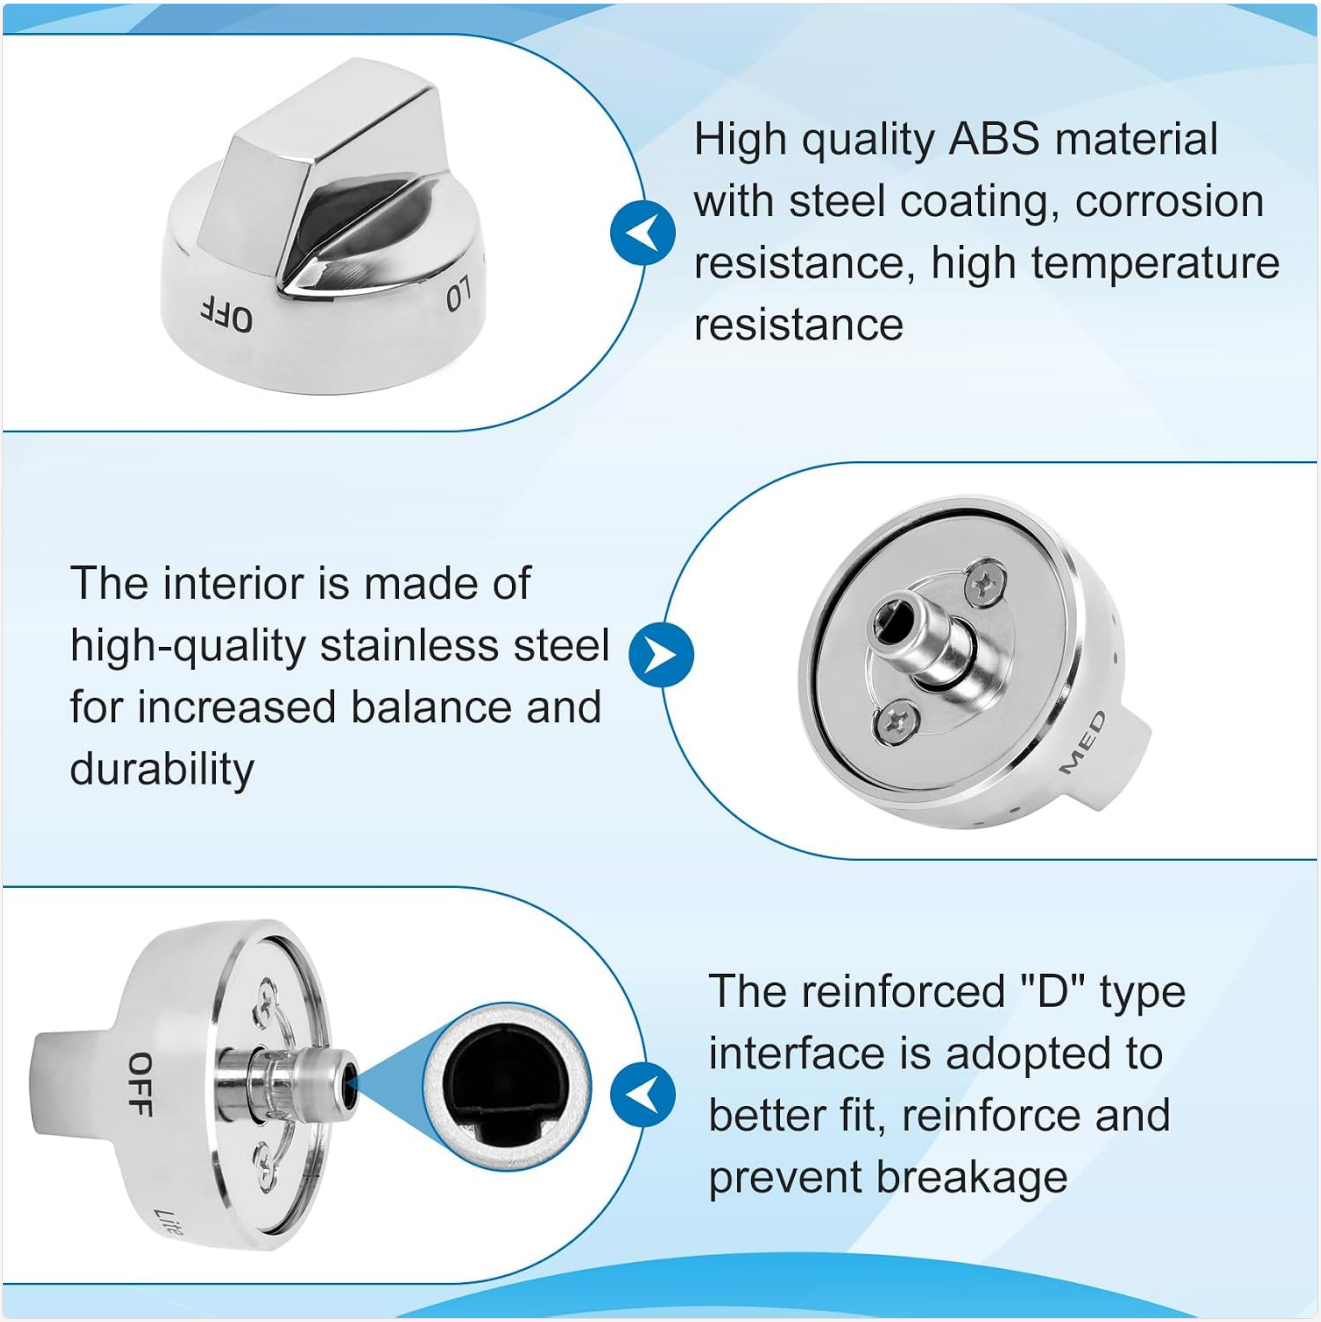


Image: Breakdown of the knob's material composition and reinforced D-type interface.

5. Compatibility

These DG68-00377A stove knobs are compatible with a wide range of Samsung oven models. Please verify your specific model number against the list below or consult your appliance's manual to ensure compatibility. Some compatible models include:

- NX58F5500SS
- FX710BGS
- NX58H9500WS
- NY58J9850WS
- NX583G0VBBBAA
- NX58H5600SS

- NX58J5600SG
- NX58J7750SG
- NX58K3310SB
- NX58K3310SS
- NX58K3310SW
- And many more. Refer to the image below for a more comprehensive list.



Image: Extensive list of compatible Samsung oven models.

6. Setup and Installation

The DG68-00377A stove knobs are designed for tool-less and straightforward installation. Follow these steps:

1. **Prepare:** Ensure the stove or oven is turned off and completely cooled. Disconnect the appliance from its power source for safety.

2. **Remove Old Knob:** Gently pull the original, old knob straight off the control shaft.
3. **Inspect Shaft:** Check the control shaft for any debris or residue. Clean if necessary to ensure a smooth fit for the new knob.
4. **Install New Knob:** Align the D-shaped opening on the back of the new DG68-00377A knob with the D-shaped control shaft. Gently push the new knob straight onto the shaft until it is seated firmly. Do not force it.
5. **Test:** Once installed, gently turn the knob to ensure it rotates smoothly and engages with the control mechanism.



Image: Visual representation of the knob's integration with a Samsung range, highlighting ease of installation.

7. Operating Instructions

Once installed, operate the DG68-00377A stove knobs as you would the original knobs. Turn the knob to the desired setting (e.g., OFF, LITE, LO, MED, HI) to control the corresponding burner or oven function. Ensure the

knob is fully engaged at each setting for proper operation.

8. Maintenance

To maintain the appearance and functionality of your stove knobs:

- **Cleaning:** Wipe the knobs regularly with a soft, damp cloth and mild soap. Avoid abrasive cleaners or scouring pads, as these can damage the finish.
- **Drying:** Ensure the knobs are completely dry before re-engaging power or using the appliance.
- **Inspection:** Periodically check the knobs for any signs of wear or looseness. If a knob becomes loose, remove it and re-install it firmly.

9. Troubleshooting

If you encounter issues with your replacement knobs, consider the following common solutions:

- **Knob Does Not Fit:** Ensure you have the correct model number for your appliance and that the control shaft is a D-shape. Refer to the compatibility section and dimensions.
- **Knob Feels Loose:** Remove the knob and re-install it, ensuring it is pushed firmly onto the D-shaped shaft until it clicks or is securely seated. Check for any debris on the shaft preventing a snug fit.
- **Knob Does Not Turn Smoothly:** Remove the knob and inspect the control shaft for any obstructions or damage. Ensure the knob's internal mechanism is clear.
- **Knob Breaks:** While these knobs feature reinforced construction, excessive force can cause damage. If a knob breaks, it will need to be replaced.

If problems persist after attempting these solutions, please contact customer support.

10. Warranty and Customer Support

Puzau is committed to providing high-quality products and customer satisfaction. While specific warranty terms are not detailed in this manual, we offer dedicated customer support for any questions or concerns you may have regarding your DG68-00377A stove knobs.
If you experience any issues or have questions about installation, compatibility, or performance, please do not hesitate to contact us. Our goal is to ensure your complete satisfaction with our product.

"Your wonderful experience is our core pursuit."



Image: Commitment to customer service and product quality.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D69JNWWQ

More documents and user manuals: **https://manuals.plus/**