Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Remax Mena RTS-20

Remax Mena RTS-20 Soundbar User Manual

Model: RTS-20

1. Introduction

Thank you for choosing the Remax Mena RTS-20 Bluetooth Wireless Soundbar. This 2.1 channel home theater system is designed to deliver an immersive audio experience with powerful sound and versatile connectivity. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening pleasure.



Image: The Remax Mena RTS-20 Soundbar, a sleek black unit, is shown alongside its compact remote control. The soundbar features a minimalist design with speaker grilles on the front and sides, and the 'Remax Mena' logo subtly placed on the top surface. The remote control is black with clearly labeled buttons for power, volume, input selection, and sound modes.

2. Key Features

- **Immersive 2.1 Channel Sound:** Delivers powerful 80W output with a built-in subwoofer for deep bass and crisp mid-high tones.
- **Versatile Connectivity:** Supports AUX, Optical, USB, and HDMI-ARC inputs.
- **Advanced Bluetooth 5.3:** Ensures seamless wireless streaming from devices up to 10 meters away.
- **User-Friendly Controls:** Features soft touch controls on the soundbar and an intuitive remote control.
- **Multiple Sound Modes:** Easily switch between Music, News, and Movie sound modes to optimize audio for different content.
- **Wide Frequency Response:** 50Hz-20KHz range for rich and detailed sound reproduction.
- **Sleek Design:** Compact and elegant design that complements any home decor.



Image: An exploded view of the Remax Mena RTS-20 Soundbar reveals its internal speaker components, highlighting the engineering behind its 80W powerful sound output. The image emphasizes the soundbar's ability to deliver crystal clear audio.

3. Package Contents

Please check the box for the following items:

- Remax Mena RTS-20 Soundbar
- Remote Control
- Power Adapter/Cable
- User Manual
- Auxiliary Audio Cable (if included)
- Optical Audio Cable (if included)

4. Setup Guide

4.1 Placement

Place the soundbar on a flat, stable surface directly in front of your television. Ensure there are no obstructions in front of the soundbar to allow for optimal sound dispersion. For best results, place it at ear level when seated.



Image: The Remax Mena RTS-20 Soundbar is perfectly integrated into a modern living room setup, positioned neatly below a large television. This illustrates its compact size and how it can be a perfect fit for any room, enhancing the audio for a 2.1 sound channel

experience.

4.2 Connections

Connect the soundbar to your TV or other audio sources using one of the following methods:

1. **HDMI-ARC (Recommended):** Connect an HDMI cable from the HDMI-ARC port on the soundbar to the HDMI-ARC port on your TV. This allows for audio return channel functionality, simplifying control.
2. **Optical:** Connect an optical audio cable from the OPTICAL port on the soundbar to the Optical Digital Audio Out port on your TV.
3. **AUX:** Connect a 3.5mm audio cable from the AUX port on the soundbar to the headphone jack or audio out port on your TV or device.
4. **USB:** Insert a USB flash drive into the USB port for direct audio playback.

After connecting the audio cable, plug the power adapter into the DC IN port on the soundbar and then into a wall outlet.



Image: A close-up of the rear panel of the Remax Mena RTS-20 Soundbar, clearly displaying its diverse connectivity options. Labeled ports include Bluetooth 5.4v, USB Flash Drive, AUX 3.5mm, Optical Port, and HDMI Port, illustrating the soundbar's versatility.

5. Operating Instructions

5.1 Power On/Off

- Press the **Power** button on the remote control or the touch control panel on the soundbar to turn it on or off.

5.2 Input Source Selection

- Press the **Input/Source** button on the remote control or the touch control panel to cycle through available input modes (Bluetooth, AUX, Optical, USB, HDMI-ARC).

5.3 Volume Control

- Use the **VOL+** and **VOL-** buttons on the remote control or the touch control panel to adjust the volume.

5.4 Remote Control

The included remote control provides full functionality for the soundbar.



Image: A person is comfortably seated, holding the sleek remote control for the Remax Mena RTS-20 Soundbar, demonstrating how control is at your fingertips. The soundbar is positioned below a television displaying various streaming service icons, indicating seamless integration into a home entertainment system.

5.5 Touch Control

The soundbar features soft touch controls on its top panel for convenient adjustments.



Image: A close-up view of the Remax Mena RTS-20 Soundbar's top panel, highlighting its soft touch controls. These intuitive controls allow users to easily adjust playback settings with a gentle touch, enhancing user convenience.

5.6 Sound Modes

Optimize your audio experience by selecting one of the preset sound modes:

- **Music Mode:** Enhances music playback with balanced audio.
- **News Mode:** Optimizes vocal clarity for news and dialogue.
- **Movie Mode:** Provides a dynamic and immersive soundstage for films.

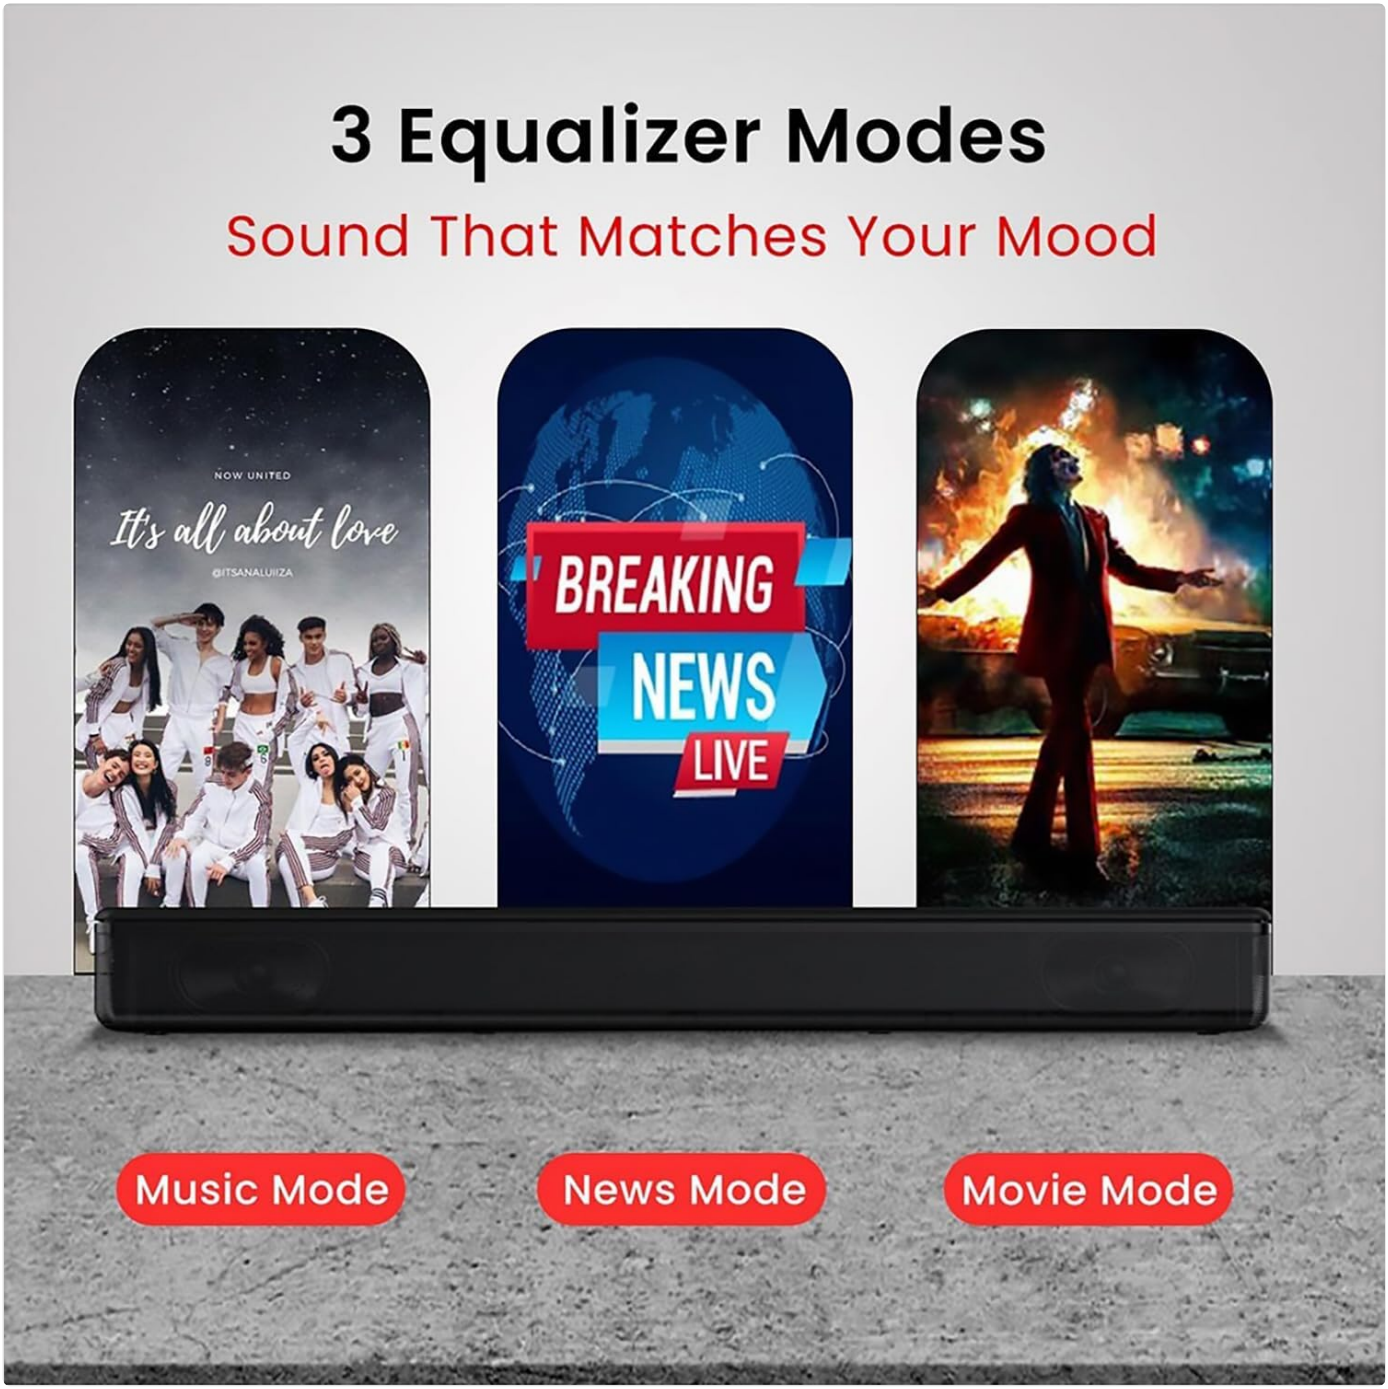


Image: The Remax Mena RTS-20 Soundbar is shown with three distinct equalizer modes: Music Mode, News Mode, and Movie Mode. Each mode is represented by a visual cue (e.g., album art for music, news broadcast for news, movie scene for movie), illustrating how the soundbar offers sound that matches your mood.

6. Connectivity

6.1 Bluetooth Pairing

1. Turn on the soundbar and switch to Bluetooth mode. The Bluetooth indicator will flash.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "Remax Mena RTS-20" (or similar name) in your device's Bluetooth list and select it to pair.
4. Once paired, the Bluetooth indicator on the soundbar will stop flashing and remain solid. You can now play audio from your device.

6.2 USB Playback

- Insert a USB flash drive containing MP3/WMA audio files into the USB port.

- The soundbar will automatically switch to USB mode and begin playing the audio files.
- Use the remote control to skip tracks or pause playback.

7. Maintenance

To ensure the longevity and optimal performance of your soundbar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the soundbar in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper ventilation around the soundbar to prevent overheating. Do not block any ventilation openings.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working	Ensure power cable is securely connected; Try a different power outlet.
No sound	Incorrect input source; Volume too low; Audio cable not connected properly	Select correct input source; Increase volume; Reconnect audio cable securely.
Bluetooth not pairing	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in Bluetooth pairing mode; Move device closer; Turn off other Bluetooth devices.
Remote control not working	Batteries low/dead; Obstruction between remote and soundbar	Replace batteries; Remove any obstructions.

9. Specifications

Feature	Specification
Brand	Remax Mena
Model	RTS-20
Speaker Maximum Output Power	120 Watts (Peak), 80W (RMS)
Frequency Response	50Hz-20KHz
Connectivity Technology	Bluetooth 5.3, HDMI-ARC, Optical, USB, AUX
Audio Output Mode	Surround (2.1 Channel)
Product Dimensions	1 x 3 x 2 cm; 100 g (Note: These dimensions seem incorrect for a soundbar, please refer to product packaging for accurate dimensions.)
Manufacturer	Easy Commerce

Feature	Specification
Date First Available	9 June 2024

10. Warranty and Support

The Remax Mena RTS-20 Soundbar comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or the manufacturer's customer service department.
Keep your purchase receipt as proof of purchase for any warranty-related inquiries.

© 2024 Remax Mena. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D6LLRBPF

More documents and user manuals: **https://manuals.plus/**