Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Remax Mena RM-1951BK

Remax Mena OpenBuds P3 Wireless Earbuds User Manual

Model: RM-1951BK

1. Introduction

Thank you for choosing the Remax Mena OpenBuds P3 Wireless Earbuds. These open-ear headphones are designed for comfort and performance, featuring Bluetooth 5.3 connectivity, a built-in microphone, and a waterproof design, making them ideal for sports and daily use. This manual provides essential information on setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity.





Figure 1: Remax Mena OpenBuds P3 Earbuds and Charging Case.
The image displays the Remax Mena OpenBuds P3, showcasing the sleek black charging case with a transparent cover, revealing the two open-ear earbuds nestled inside. A small green indicator light is visible on the case, suggesting a charging or power-on state. The design emphasizes portability and the unique open-ear form factor.

2. Package Contents

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- Remax Mena OpenBuds P3 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual (this document)

3. Setup Guide

3.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the USB charging cable to the charging port on the case and the other end to a USB power source (e.g.,

computer, wall adapter).

3. The indicator light on the case will show charging status. Refer to the LED indicator section for details.
4. Once fully charged, disconnect the charging cable.



Figure 2: Charging Case in Hand.
This image shows a pair of hands holding the Remax Mena OpenBuds P3 charging case, highlighting its compact and portable design. The transparent top cover of the case is visible, allowing a glimpse of the earbuds inside. This illustrates the ease of handling and the sleek form factor of the product.

3.2 Pairing with a Bluetooth Device

The earbuds will automatically enter pairing mode when taken out of the charging case.

1. Open the charging case and remove both earbuds. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth.
3. Search for "Remax OpenBuds P3" in the list of available Bluetooth devices.
4. Select "Remax OpenBuds P3" to connect. Once connected, you will hear a confirmation tone.

5. The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.

4. Operating Instructions

4.1 Wearing the Earbuds

The OpenBuds P3 feature an open-ear, clip-on design for comfortable and secure wear, allowing you to remain aware of your surroundings.

- Identify the Left (L) and Right (R) earbuds.
- Gently clip the earbud onto your ear, ensuring the speaker portion is positioned correctly over your ear canal for optimal sound.
- Adjust the earbud for a snug and comfortable fit.



Figure 3: Open-Ear Clip-on Design.

This diagram illustrates the unique clip-on design of the Remax Mena OpenBuds P3 earbud, showing how it comfortably and securely

attaches to the outer ear. The image highlights the directional sound transmission, indicating how audio is delivered while maintaining awareness of ambient sounds.



Figure 4: Directional Transmission for Privacy.
The image depicts a person wearing the Remax Mena OpenBuds P3 earbud, emphasizing its directional sound transmission feature. This design ensures that audio is primarily directed towards the user's ear, enhancing privacy and minimizing sound leakage, even in public settings like a car.

4.2 Basic Controls

The earbuds feature touch-sensitive controls for easy management of music and calls.

Function	Action
Power On	Remove from charging case
Power Off	Place into charging case
Play/Pause Music	Single tap on either earbud
Next Track	Double tap right earbud
Previous Track	Double tap left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud for 2 seconds
Activate Voice Assistant	Triple tap on either earbud

4.3 Sound Quality and Features

The OpenBuds P3 are engineered for high-fidelity audio and robust performance.

- **Hifi-Level Sound Quality:** Equipped with 14.2mm large drivers, these earbuds deliver rich, immersive surround

sound.

- **Bluetooth 5.3:** Ensures stable, low-latency wireless connectivity for seamless audio streaming and calls.
- **Built-in Mic:** Allows for clear, hands-free calls.
- **Waterproof Design:** Built to withstand sweat and splashes, making them suitable for workouts and outdoor activities.



Figure 5: High-Fidelity Sound.
This image highlights the audio capabilities of the Remax Mena OpenBuds P3, featuring the earbuds against a dark, abstract background. Text overlays emphasize "Hifi-Level Sound Quality," "Surround Sound," and the presence of "14.2mm large drivers," indicating a focus on rich and immersive audio experience.



Figure 6: Waterproof Design.
The image displays the Remax Mena OpenBuds P3 charging case and a single earbud on a wet, dark surface, covered in water droplets. This visual representation effectively demonstrates the product's waterproof and sweatproof capabilities, making it suitable for active lifestyles and various environmental conditions.

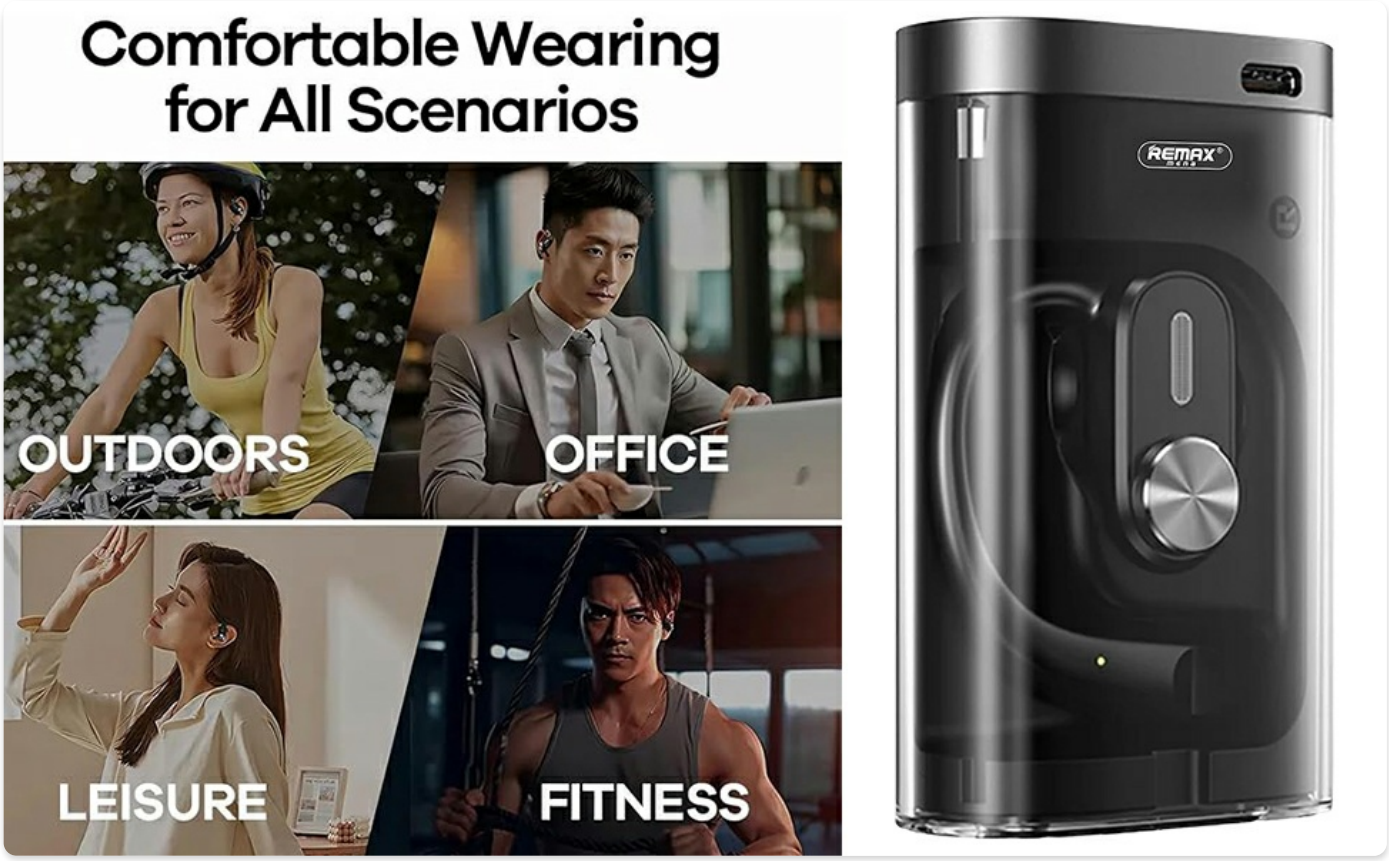


Figure 7: Versatile Usage Scenarios.
This composite image showcases the Remax Mena OpenBuds P3 being used in diverse environments: outdoors (cycling), in an office setting, during leisure time, and during fitness activities. This highlights the earbuds' adaptability and comfortable design for all-day wear across various daily scenarios.

5. Maintenance and Care

Proper care will extend the life of your Remax Mena OpenBuds P3.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Water Exposure:** While waterproof, avoid prolonged submersion in water. After exposure to sweat or rain, wipe the earbuds dry before placing them back in the charging case.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Charging:** Use the provided charging cable or a certified equivalent. Avoid overcharging.

6. Troubleshooting

If you encounter issues with your OpenBuds P3, refer to the following common solutions:

Problem	Possible Solution
Earbuds not powering on	Ensure earbuds are charged. Place them in the charging case and connect the case to power.

Problem	Possible Solution
Cannot pair with device	Ensure Bluetooth is enabled on your device. Make sure earbuds are in pairing mode (out of case). Forget "Remax OpenBuds P3" from your device's Bluetooth list and try pairing again. Ensure earbuds are within Bluetooth range (10 meters).
No sound or low volume	Check volume levels on both your device and the earbuds. Ensure earbuds are properly connected to your device. Try reconnecting the earbuds.
Intermittent connection	Move closer to your device. Avoid strong electromagnetic interference. Ensure earbuds are fully charged.
Microphone not working	Ensure the earbuds are selected as the audio input device on your phone/computer. Check for any obstructions on the microphone port.

7. Specifications

Feature	Detail
Model Number	RM-1951BK
Bluetooth Version	5.3
Playtime	Up to 12 hours (earbuds)
Driver Size	14.2mm
Microphone	Built-in
Water Resistance	Sweatproof & Waterproof
Ear Placement	Open Ear / On Ear (Clip-on)
Color	Black
Package Dimensions	10 x 3 x 3 cm
Item Weight	100 g

8. Warranty and Support

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Remax Mena website. You may also contact your point of purchase for assistance.
Manufacturer: Easy Commerce
Date First Available: 12 June 2024
For further assistance, please visit the Remax Mena Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D6W9N33G

More documents and user manuals: **https://manuals.plus/**