DREAME R10 Pro

DREAME R10 Pro Cordless Stick Vacuum Cleaner

INSTRUCTION MANUAL

Introduction   Product
Overview   Setup   Operation   Maintenance   Troubleshooting   Specifications   Warranty & Support

1. Introduction

This manual provides essential instructions for the safe and efficient use of your DREAME R10 Pro Cordless Stick Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference. The DREAME R10 Pro is designed for versatile cleaning across various surfaces, offering powerful suction and a long runtime for comprehensive home cleaning.

2. Product Overview

The DREAME R10 Pro is a cordless stick vacuum cleaner featuring robust suction, a lightweight design, and an anti-tangle brush head. It is suitable for hard floors, carpets, and pet hair removal.

2.1 Included Components

- Main Vacuum Unit
- Extension Rod
- Multi-Surface Brush (V-shaped brush)
- Soft Roller Brush
- Crevice Nozzle
- Wide Combination Tool
- Motorized Mini-Brush
- Swappable Battery
- Charger
- Wall Mount
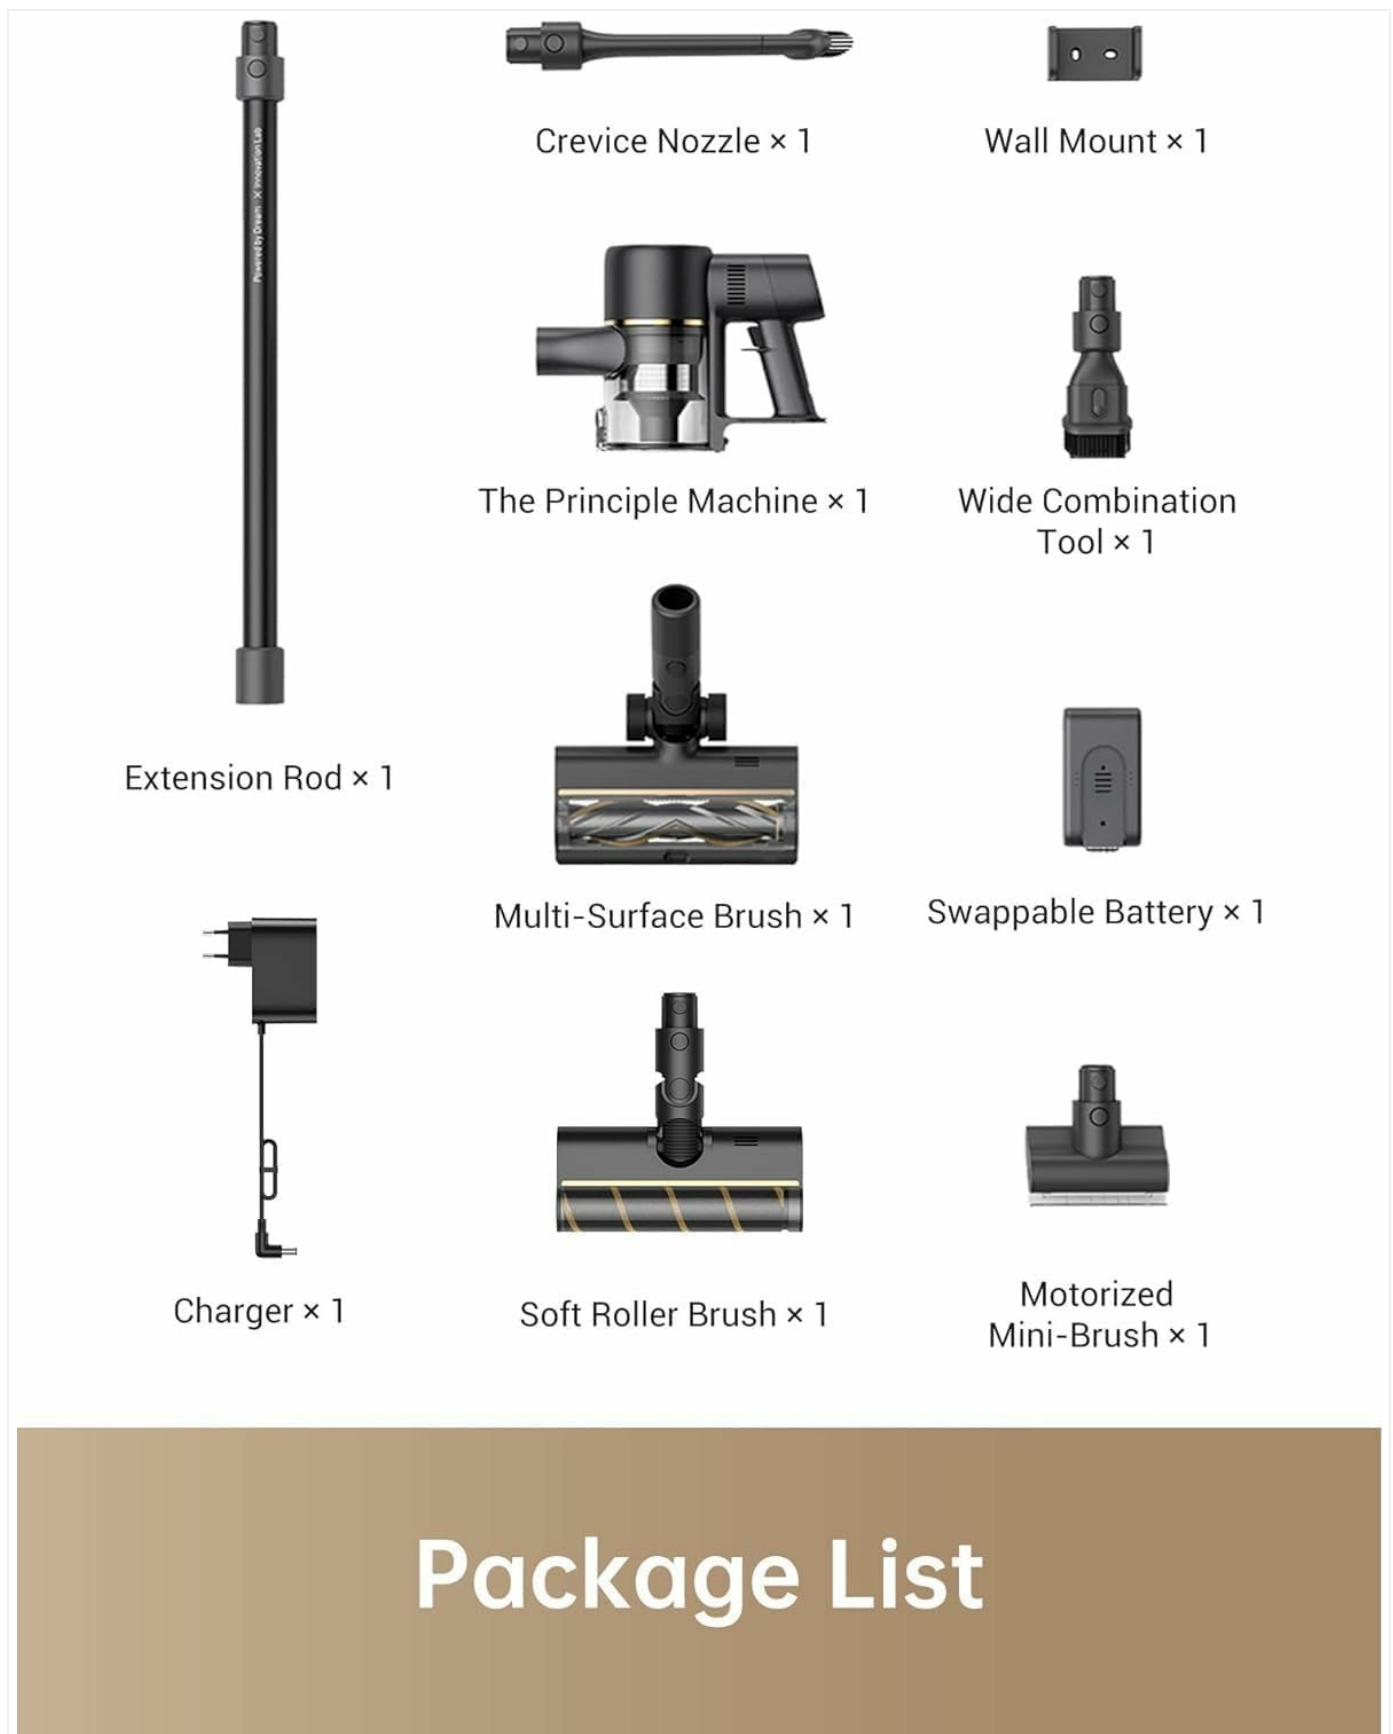- Filter (pre-installed and spare)

Figure 2.1: Overview of the DREAME R10 Pro Cordless Stick Vacuum Cleaner and its included accessories.

3. Setup

3.1 Assembly

1. Attach the desired brush head (Multi-Surface or Soft Roller) to the end of the extension rod.
2. Connect the extension rod to the main vacuum unit until it clicks into place.

3. For handheld use, attach accessories directly to the main vacuum unit.

3.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately. Connect the charger to a power outlet and to the battery. The indicator lights on the main unit will show charging status. A full charge provides up to 65 minutes of runtime.

3.3 Wall Mount Installation

The included wall mount allows for convenient storage and charging. Choose a suitable location near a power outlet. Secure the wall mount to the wall using appropriate fasteners (not included, depending on wall type). Ensure the mount is stable before hanging the vacuum cleaner.

Figure 3.1: The DREAME R10 Pro main unit mounted on its wall bracket for storage.

4. Operating Instructions

4.1 Powering On and Suction Modes

Press the power button to turn on the vacuum cleaner. The DREAME R10 Pro offers multiple suction modes. Use the mode selection button (often a push button or touch control) to cycle through different power levels (e.g., Eco, Standard, Boost) to suit your cleaning needs. The current mode and battery level are typically displayed on the unit's interface.

Figure 4.1: The DREAME R10 Pro in use, demonstrating powerful suction on a carpeted surface.

4.2 Cleaning Different Surfaces

The vacuum is equipped with a dual brush head design, including a V-shaped brush and a soft roller brush. These work together to effectively clean various surfaces, from hard floors to carpets, minimizing scratches and tangles. The anti-tangle design is particularly useful for pet hair.

Figure 4.2: Close-up of the DREAME R10 Pro's V-shaped brush and soft roller brush, designed for various floor types.

4.3 Using Accessories

Utilize the various accessories for specialized cleaning tasks:

- **Crevice Nozzle:** Ideal for narrow gaps, corners, and edges.
- **Wide Combination Tool:** Suitable for upholstery, curtains, and car interiors.
- **Motorized Mini-Brush:** Effective for pet hair on furniture and deep cleaning small areas.

Portable Hand-vacuum

Figure 4.3: The DREAME R10 Pro configured as a handheld vacuum, cleaning tight spaces and surfaces.

4.4 Illuminating LED Lights

The main brush head features bright LED lights that illuminate dirt and debris in dark areas, such as under furniture or in dimly lit corners, ensuring thorough cleaning.

Figure 4.4: The LED lights on the DREAME R10 Pro's brush head illuminating dust and debris on the floor.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the MAX line is reached. To empty, detach the dustbin from the main unit and press the release button to open the bottom flap, allowing debris to fall into a waste bin.

Figure 5.1: A hand demonstrating how to empty the dustbin of the DREAME R10 Pro vacuum cleaner.

5.2 Cleaning the Filtration System

The DREAME R10 Pro features a 5-layer filtration system that captures 99.9% of fine dust and particles. Regularly clean the filters to maintain suction power and air quality. Refer to the diagram below for filter components. Filters can typically be rinsed with water; ensure they are completely dry before reinstallation.

Figure 5.2: Exploded view of the DREAME R10 Pro's 5-stage filtration system, showing individual components.

Figure 5.3: A hand rinsing a filter component of the DREAME R10 Pro under running water.

5.3 Cleaning Brush Heads

Periodically check the brush heads for tangled hair or debris. The anti-tangle design helps, but occasional manual cleaning may be necessary. Remove the brush roller from the head and use scissors or a cleaning tool to cut and remove any wrapped hair or fibers.

6. Troubleshooting

If you encounter issues with your DREAME R10 Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and correctly inserted into the main unit.
Reduced suction power.	Dustbin is full, filters are clogged, or brush head is obstructed.	Empty the dustbin. Clean or replace filters. Remove any obstructions from the brush head or air ducts.
Brush head not rotating.	Brush roller is tangled with hair or debris, or the brush head is not properly attached.	Clean the brush roller. Ensure the brush head is securely attached to the extension rod or main unit.
Short battery runtime.	Battery not fully charged, or operating in Boost mode for extended periods.	Ensure the battery is fully charged. Use lower suction modes for longer runtime. Consider purchasing an additional swappable battery for extended cleaning sessions.

If the problem persists after attempting these solutions, please contact DREAME customer support.

7. Specifications

Feature	Detail
Model Name	R10 Pro
Brand	DREAME
Special Feature	Lightweight
Filter Type	HEPA Filter
Cordless	Yes
Dustbin Capacity	0.6 litres
Wattage	350 Watts
Maximum Suction	150 AW (Air Watts)
Recommended Uses	Hard floors, Carpets, Pet hair removal
Form Factor	Stick
Product Dimensions	75L x 17W x 35H Centimeters
Noise Level	70 Decibels
Battery Life	Up to 65 Minutes
Motor Horsepower	600 Watts

Feature	Detail
Control Method	Touch / Push Button
Item Weight	4 kg

8. Warranty and Support

8.1 Warranty Information

The DREAME R10 Pro Cordless Stick Vacuum Cleaner comes with a **1-Year Warranty**. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact customer support.

8.2 Customer Support

For any inquiries, technical assistance, or warranty claims, please contact DREAME India Support:

- **Email:** Support.in@dreame.tech
- **Customer Support Hotline:** 18003093942
- **Operating Hours:**

    - Monday to Saturday: 10:00 AM to 6:00 PM
    - Sunday: 10:00 AM to 4:00 PM

DREAME offers support within 24 hours across India, including service centers in 165 cities, onsite service with pick-up and drop, virtual product demos, and onsite installation.

Figure 8.1: DREAME India Support details, including contact information and service coverage map.