Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXGO PHANTOM

LEXGO HOVERBOARD PHANTOM User Manual

Model: PHANTOM

Introduction

This manual provides essential information for the safe and efficient operation of your LEXGO HOVERBOARD PHANTOM. Please read it thoroughly before first use and retain it for future reference. This electric hoverboard is designed for urban mobility, offering a convenient and versatile mode of transport.

Safety Information

Your safety is paramount. Adhere to the following guidelines to prevent injury or damage:

- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Ensure the hoverboard is fully charged before each use.
- Do not exceed the maximum weight limit of 75 kg.
- Operate the hoverboard on flat, dry surfaces. Avoid uneven terrain, wet conditions, or steep inclines.
- Maintain a safe speed and be aware of your surroundings.
- Children should only use the hoverboard under adult supervision.
- Do not attempt stunts or sudden maneuvers.
- Regularly inspect the hoverboard for any damage or loose parts before use.
- Adhere to all local traffic laws and regulations.


Package Contents

Verify that all items are present in the package:

- LEXGO HOVERBOARD PHANTOM
- User Manual
- Charger

Product Features and Components

The LEXGO HOVERBOARD PHANTOM is equipped with several features designed for performance and user experience.

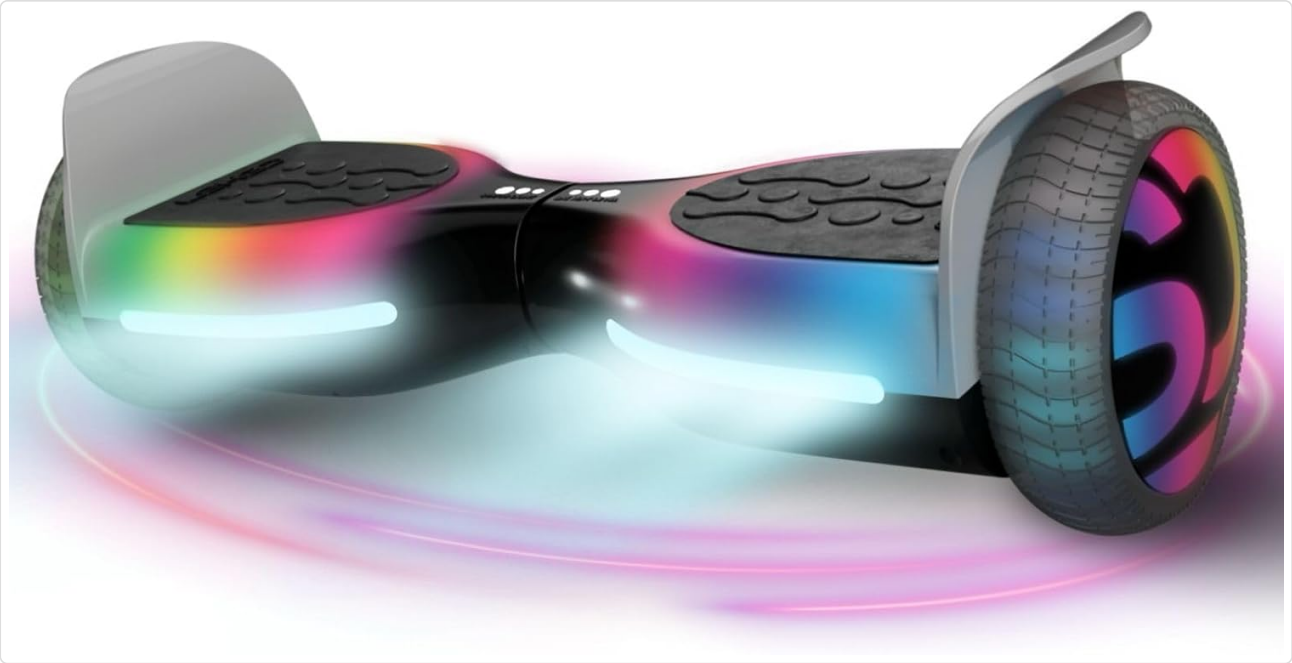

An overview of the LEXGO HOVERBOARD PHANTOM, showcasing its sleek design and integrated LED lighting system.



This image illustrates the compact dimensions of the LEXGO HOVERBOARD PHANTOM, measuring 640mm in length and

240mm in width, making it portable and easy to store.



Key performance specifications of the hoverboard, including a 10 km battery range, 250W motor power, a maximum speed of 12 km/h, and 6.5-inch wheels.



Details on the hoverboard's power system: a 36V 2Ah battery, capable of fast charging in approximately 2 hours.



The hoverboard features front LED lights, rear lights, and colorful RGB LED lights integrated into the wheels for enhanced visibility and aesthetic appeal.

Setup

1. Initial Charge

Before first use, fully charge the hoverboard. Connect the charger to the charging port on the hoverboard and then to a power outlet. The charging indicator will change when fully charged (refer to the charger's specific indicator behavior). A full charge typically takes about 2 hours.

2. Power On/Off

Press the power button to turn the hoverboard on. The indicator lights will illuminate. Press and hold the power button to turn it off.

3. Bluetooth Pairing

If your hoverboard has a Bluetooth speaker, activate Bluetooth on your mobile device and search for 'LEXGO PHANTOM'. Pair with the device to play audio.

Operating Instructions

1. Mounting the Hoverboard

1. Place the hoverboard on a flat, level surface.
2. Step onto one footpad with one foot, keeping the hoverboard level.
3. Quickly step onto the other footpad with your second foot.
4. Maintain a relaxed posture and keep your body centered.

2. Riding

The hoverboard uses self-balancing technology. Lean slightly forward to move forward, and lean backward to slow down or move in reverse. To turn, apply gentle pressure with your left foot to turn right, and with your right foot to turn left.

3. Dismounting

When ready to dismount, slow down to a complete stop. Step off the hoverboard one foot at a time, preferably backward.

Maintenance

1. Cleaning

Wipe the hoverboard with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid direct water spray.

2. Battery Care

- Charge the battery regularly, even if not in use, to maintain its lifespan.
- Do not overcharge or completely drain the battery.
- Store the hoverboard in a cool, dry place, away from direct sunlight and extreme temperatures.

3. Storage

When storing for extended periods, ensure the battery is charged to approximately 50-70%.

Troubleshooting

Problem	Possible Cause	Solution
Hoverboard does not turn on	Low battery or power button issue	Charge the hoverboard. Ensure the power button is pressed firmly.
Battery not charging	Charger not connected properly or faulty charger/battery	Check all connections. Try a different power outlet. If issues persist, contact support.

Problem	Possible Cause	Solution
Difficulty balancing or unexpected movement	Improper calibration or sensor issue	Recalibrate the hoverboard (refer to specific instructions if provided by manufacturer, generally involves powering off, placing on level ground, and powering on while holding a button). Ensure you are within the weight limit.
LED lights not working	Electrical connection issue	Ensure the hoverboard is powered on. If only some lights are affected, contact support.

Specifications

Model Name: HOVERBOARD PHANTOM

Brand: LEXGO

Motor Power: 2 x 250 W Brushless Motors

Max Speed: 12 km/h

Battery: 36 V, 2 Ah Lithium-ion (included)

Max Range: Up to 10 km

Wheel Size: 6.5 inches

Max Load: 75 kg

Material: Steel frame

Item Weight: 6.7 kg

Dimensions (Package): 63.7 x 23.8 x 23.5 cm

Special Feature: Lightweight, Auto-balancing, LED lights, Bluetooth speaker

Recommended Use: Indoor

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact LEXGO customer service directly. Keep your proof of purchase for warranty claims.

© 2024 LEXGO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D6Z955YN

More documents and user manuals: **https://manuals.plus/**