oneisall PJ05037

oneisall Dog Clippers Replacement Metal Blade for DTJ 002 Instruction Manual

Introduction

This manual provides instructions for the installation, use, and maintenance of the oneisall Dog Clippers Replacement Metal Blade, model DTJ 002 (PJ05037). This blade is specifically designed for use with compatible oneisall DTJ 002 dog clippers.

Safety Information

Always unplug the trimmer before cleaning or replacing parts. Keep it away from water sources. Avoid using it on infants or sensitive areas. Always keep the blades away from your eyes and skin. Follow the manufacturer's instructions for cleaning and maintenance.

Product Overview

The oneisall Replacement Metal Blade for DTJ 002 clippers is crafted from stainless steel, ensuring durability and efficient cutting performance. Its detachable design facilitates easy cleaning and maintenance.



Image: Close-up of the oneisall replacement metal blade for dog clippers, showing sharp teeth for fast hair cutting.

Setup: Blade Installation

To install the replacement blade, ensure the clipper is turned off and unplugged from any power source. Align the blade with the clipper head and press firmly until it clicks securely into place. Verify that the blade is seated correctly before use.



Image: A hand demonstrating the quick installation of the oneisall replacement blade onto a dog clipper, with an arrow indicating the upward motion to attach.

Operating Instructions

Once installed, the blade is ready for use with your oneisall DTJ 002 dog clippers. Ensure the blade is clean and free of debris before each grooming session. The metal blade is designed for efficient hair cutting across various dog hair types, providing a smooth grooming experience.



Image: The oneisall replacement blade shown above images of a Golden Retriever, Poodle, Schnauzer, and Teddy dog, indicating its suitability for different hair types.

Maintenance

Regular cleaning and proper maintenance are crucial for extending the life and performance of your blade. To clean, detach the blade from the clipper. Rinse the blade under running water to remove hair and debris. Ensure the blade is completely dry before reattaching or storing. Lubricate the blade regularly with clipper oil (not included) to maintain optimal performance and prevent rust.

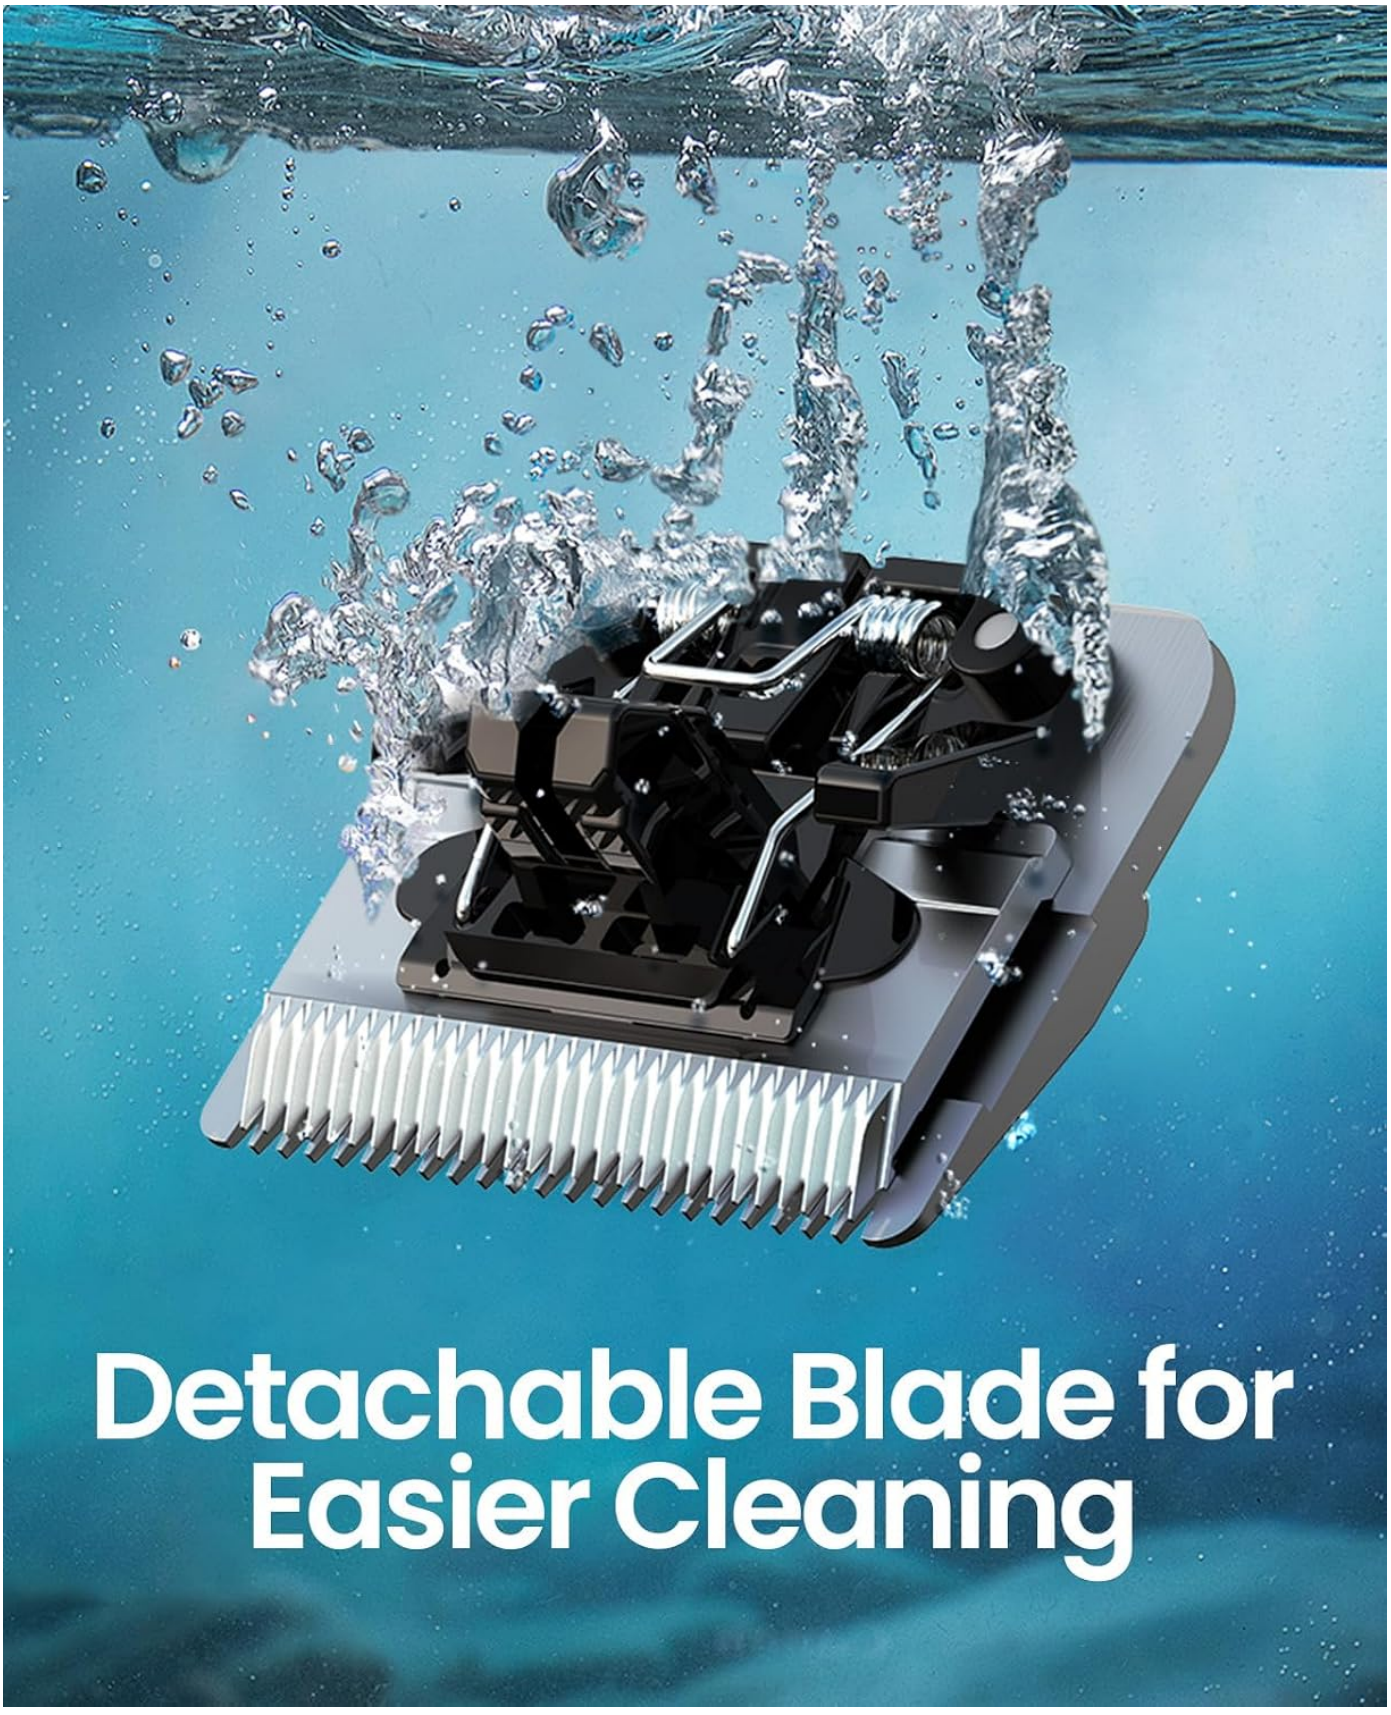


Image: The oneisall replacement blade being rinsed under water, demonstrating its detachable feature for easy cleaning.

Troubleshooting

- **Blade Does Not Fit:** If the blade does not fit your clipper, verify that your clipper model is specifically the oneisall DTJ 002. This replacement blade is designed exclusively for that model. Ensure correct alignment during installation and do not force the blade if it does not properly.
- **Reduced Cutting Performance:** If the blade is not cutting effectively, ensure it is clean and free of hair or debris.

Regular lubrication with clipper oil is essential for optimal sharpness and smooth operation. If performance does not improve, the blade may need replacement due to wear.

Specifications

Model Number	PJ05037 (DTJ 002 compatible)
Material	Stainless Steel
Blade Material	Stainless Steel
Special Feature	Detachable
Target Audience	Dogs (All Hair Types)
Dimensions	6.91 x 5.59 x 1.9 cm
Weight	50 g

Warranty and Support

For product support, warranty inquiries, or further assistance, please contact oneisall customer service through their official website or the retailer where the product was purchased. Please have your product model number (PJ05037) and purchase details ready.

Legal Disclaimer

Actual product packaging and materials may contain more and different information than what is shown on our website. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question