Bene Casa BC-99606

Bene Casa 5L Electric Multi Cooker User Manual

Model: BC-99606

Product Overview

The Bene Casa 5L Electric Multi Cooker is a versatile 9-in-1 appliance designed to simplify your cooking experience. It features a large LED control panel, 24-hour delay start, and multiple safety systems, making it an efficient and safe addition to any kitchen. Its 5-liter capacity is ideal for preparing meals for 4-6 people.



Image: Front view of the Bene Casa 5L Electric Multi Cooker, showcasing its black and stainless steel design and the prominent LED control panel.

Key Features:

- **Large LED Digital Control Panel:** Easy-to-use interface with pre-programmed, user-programmed, and slow cooker functions.
- **9-in-1 Cooking Capability:** Functions as a pressure cooker, slow cooker, rice maker, steamer, sauté pan, food warmer, cake maker, sterilizer, and yogurt maker.
- **24-Hour Delay Start:** Allows for meal preparation scheduling.
- **Multiple Safety Systems:** Designed with a locking lid for secure operation.
- **Energy & Time Efficient:** Saves up to 80% energy and 70% cooking time.
- **BPA-Free & Non-Stick Pot:** Ensures healthy cooking and easy cleaning.
- **5L Family-Sized Capacity:** Suitable for 4-6 people.

Safety Instructions

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the lid is properly locked before operating under pressure.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

Setup and First Use

1. **Unpacking:** Carefully remove the multi cooker and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the inner pot, sealing ring, and lid components with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the multi cooker on a stable, flat, heat-resistant surface, away from walls and cabinets to allow for proper ventilation. Ensure there is sufficient space above the unit for steam release.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (120 Volts).

bene casa

Designed to inspire

5L Stainless Steel Multicooker
BC-99606



Facebook Instagram Twitter Pinterest YouTube TikTok

Connect with us @ClubBeneCasa

www.BeneCasa.com

Image: The Bene Casa 5L Electric Multi Cooker with its dimensions indicated: 8.5 inches (D) x 10.2 inches (W) x 9.6 inches (H).

Operating Instructions

General Operation:

1. **Add Ingredients:** Place desired ingredients into the non-stick inner pot.
2. **Secure Lid:** Place the lid on the multi cooker and rotate it clockwise until it locks securely. Ensure the pressure release valve is in the correct position for your chosen cooking method (e.g., sealed for pressure cooking).
3. **Select Function:** Use the large LED digital control panel to select your desired cooking function (e.g., Rice, Beans, Meat, Chicken, Fish, Soup, Vegetables, Slow Cooker).
4. **Adjust Settings (if needed):** For some functions, you may adjust cooking time using the '+' and '-' buttons.
5. **Start Cooking:** The cooker will automatically begin the cooking process after a short delay or once the desired pressure/temperature is reached.
6. **Delay Start Function:** To use the 24-hour delay start, press the "Delay Timer" button, set the desired delay time, then select your cooking function. The cooker will start automatically after the set delay.
7. **Keep Warm Function:** After cooking is complete, the multi cooker may automatically switch to "Keep Warm" mode. Press "Keep Warm" to manually activate or deactivate this function.



Image: A hand interacting with the control panel of the Bene Casa 5L Electric Multi Cooker, demonstrating the one-touch cooking feature. The display shows "06:00".

9-in-1 Cooking Capabilities:

This appliance combines the functionality of multiple kitchen devices:

- **Pressure Cooker:** For fast cooking of meats, stews, and tough vegetables.
- **Slow Cooker:** For tender, flavorful dishes cooked over extended periods.
- **Rice Maker:** Perfectly cooked rice every time.
- **Steamer:** For healthy steaming of vegetables, fish, and more.
- **Sauté Pan:** Brown meats or sauté vegetables directly in the pot.
- **Food Warmer:** Keeps food warm after cooking.
- **Cake Maker:** Bake cakes and desserts.
- **Sterilizer:** Can be used for sterilizing baby bottles or canning jars.
- **Yogurt Maker:** Prepare homemade yogurt.

bene casa

Designed to inspire

9 IN 1 COOKER

9 in 1 cooking is operated by a micro-computerized temperature and time controlled system



Facebook Instagram Twitter Pinterest YouTube TikTok

Connect with us @ClubBeneCasa

www.BeneCasa.com

Image: A visual representation of the 9-in-1 cooking capabilities of the Bene Casa Multi Cooker, showing icons for Cake Maker, Pressure Cooker, Sterilize, Yogurt Maker, Sauté Pan, Rice Maker, Slow Cooker, Steamer, and Food Warmer, surrounding an image of various cooked dishes.

Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your multi cooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot is easy to clean. Wash with warm, soapy water and a soft sponge. Do not use abrasive cleaners or metallic scouring pads, as this can damage the non-stick coating. The inner pot is NOT dishwasher safe.
3. **Lid and Sealing Ring:** Remove the sealing ring from the lid and wash both with warm, soapy water. Inspect the sealing ring for any cracks or damage; replace if necessary to ensure proper pressure sealing.
4. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
5. **Steam Release Valve:** Ensure the steam release valve and float valve are clear of any food debris. Clean gently with a small brush if needed.
6. **Storage:** Store the multi cooker in a dry place. Ensure all parts are completely dry before storing.

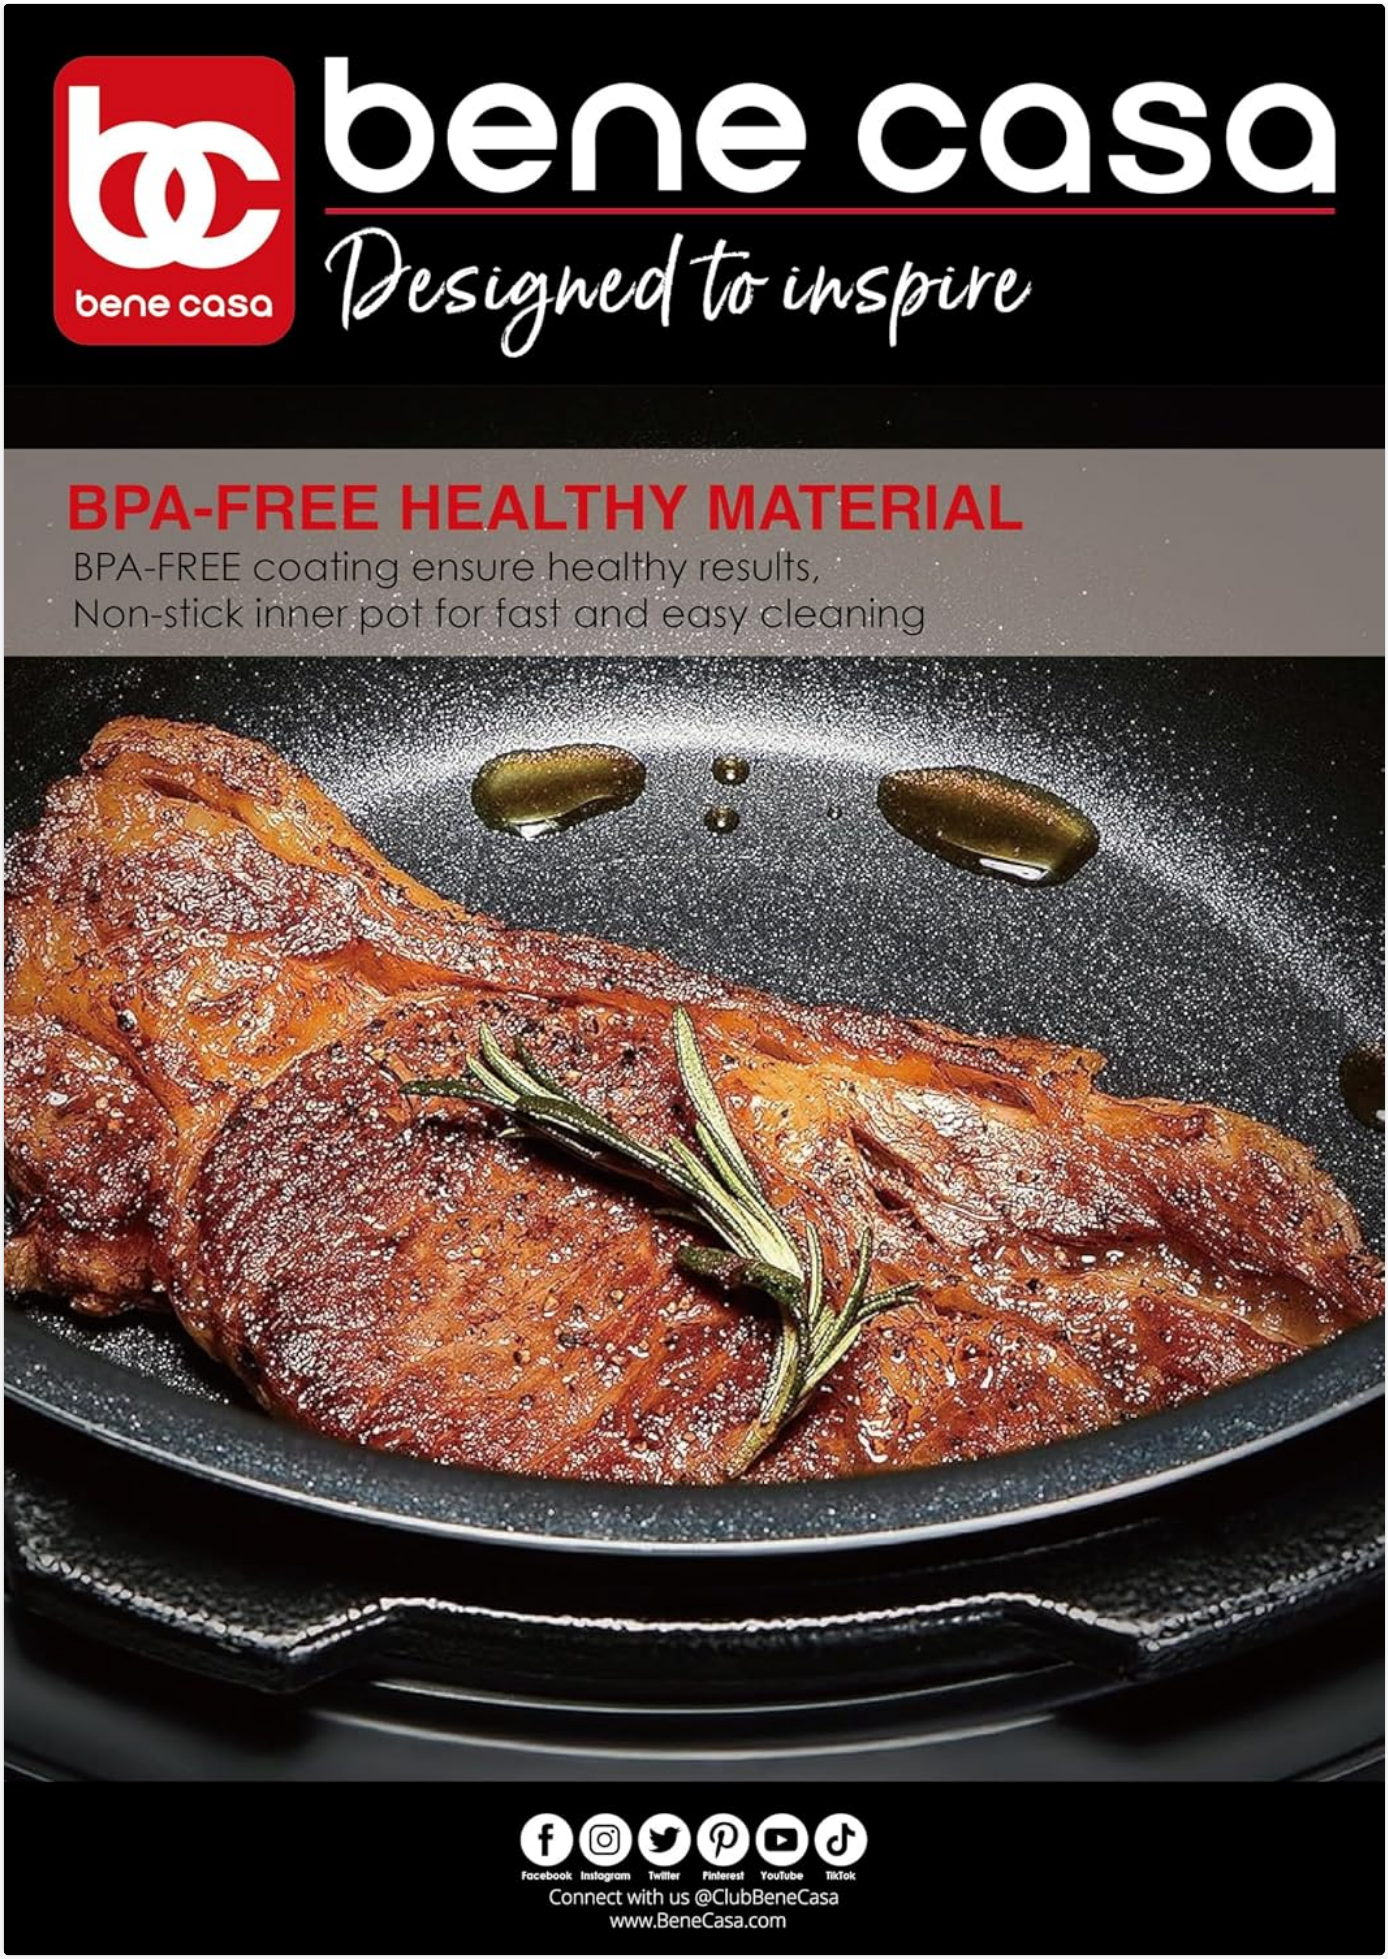


Image: A close-up view of the non-stick inner pot, highlighting its BPA-free coating, with a cooked steak inside, demonstrating its easy-to-clean surface.

Troubleshooting

Problem	Possible Cause	Solution
Cooker not turning on.	Not plugged in; power outlet issue; damaged cord.	Ensure plug is fully inserted. Test outlet with another appliance. Check cord for damage; do not use if damaged.
Lid not sealing properly.	Sealing ring not in place; sealing ring damaged; food debris on rim.	Ensure sealing ring is correctly seated. Inspect ring for damage and replace if necessary. Clean lid and pot rim thoroughly.
Steam leaking from lid.	Lid not closed correctly; sealing ring issue; pressure release valve not sealed.	Ensure lid is fully locked. Check sealing ring for proper placement and damage. Ensure pressure release valve is in the "Sealing" position.
Food not cooking evenly or taking too long.	Incorrect liquid amount; wrong cooking setting; insufficient preheating.	Refer to recipe for correct liquid. Verify selected cooking function and time. Allow cooker to preheat fully before adding ingredients for certain functions.

Specifications

- **Brand:** Bene Casa
- **Model Number:** BC-99606
- **Capacity:** 5 Liters
- **Material:** Stainless Steel (exterior), BPA-Free Non-Stick (inner pot)
- **Color:** Black & Stainless Steel
- **Product Dimensions:** 8.5"D x 10.2"W x 9.6"H
- **Wattage:** 900 watts
- **Voltage:** 120 Volts
- **Control Method:** Touch
- **Operation Mode:** Automatic
- **Item Weight:** 10 Pounds
- **UPC:** 037005996069
- **Special Feature:** Keep Warm Setting, 24-Hour Delay Start



Image: The Bene Casa 5L Electric Multi Cooker in a kitchen setting, with individuals adding ingredients, illustrating its large capacity suitable for family meals.

Warranty and Support

For warranty information and customer support, please refer to the official Bene Casa website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Bene Casa Official Store: Visit the Bene Casa Store on Amazon

Note: Specific warranty terms and conditions may vary. Please consult the documentation included with your product or the manufacturer's website for the most current information.

Video Resources

No official product videos from the seller were found in the provided data. Please refer to the Bene Casa official website or support channels for any available video tutorials or demonstrations.

© 2024 Bene Casa. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What are the solutions for the E1 error code on the Bene Casa BC-99606 Electric Multi Cooker?

While the provided manual for the Bene Casa BC-99606 does not explicitly list an "E1" error code in its troubleshooting table, this code on most electric multi-cookers and pressure cookers typically indicates a sensor...

Read full answer