Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HMHAMA DG-L90588BHC

HMHAMA DG-L90588BHC Washing Machine Door Hook User Manual

Model: DG-L90588BHC

Product Overview

This manual provides essential information for the installation, operation, and maintenance of the HMHAMA DG-L90588BHC Washing Machine Door Hook. This part is designed as a replacement for the SANYO L9088BHX Drum Washer door hook.

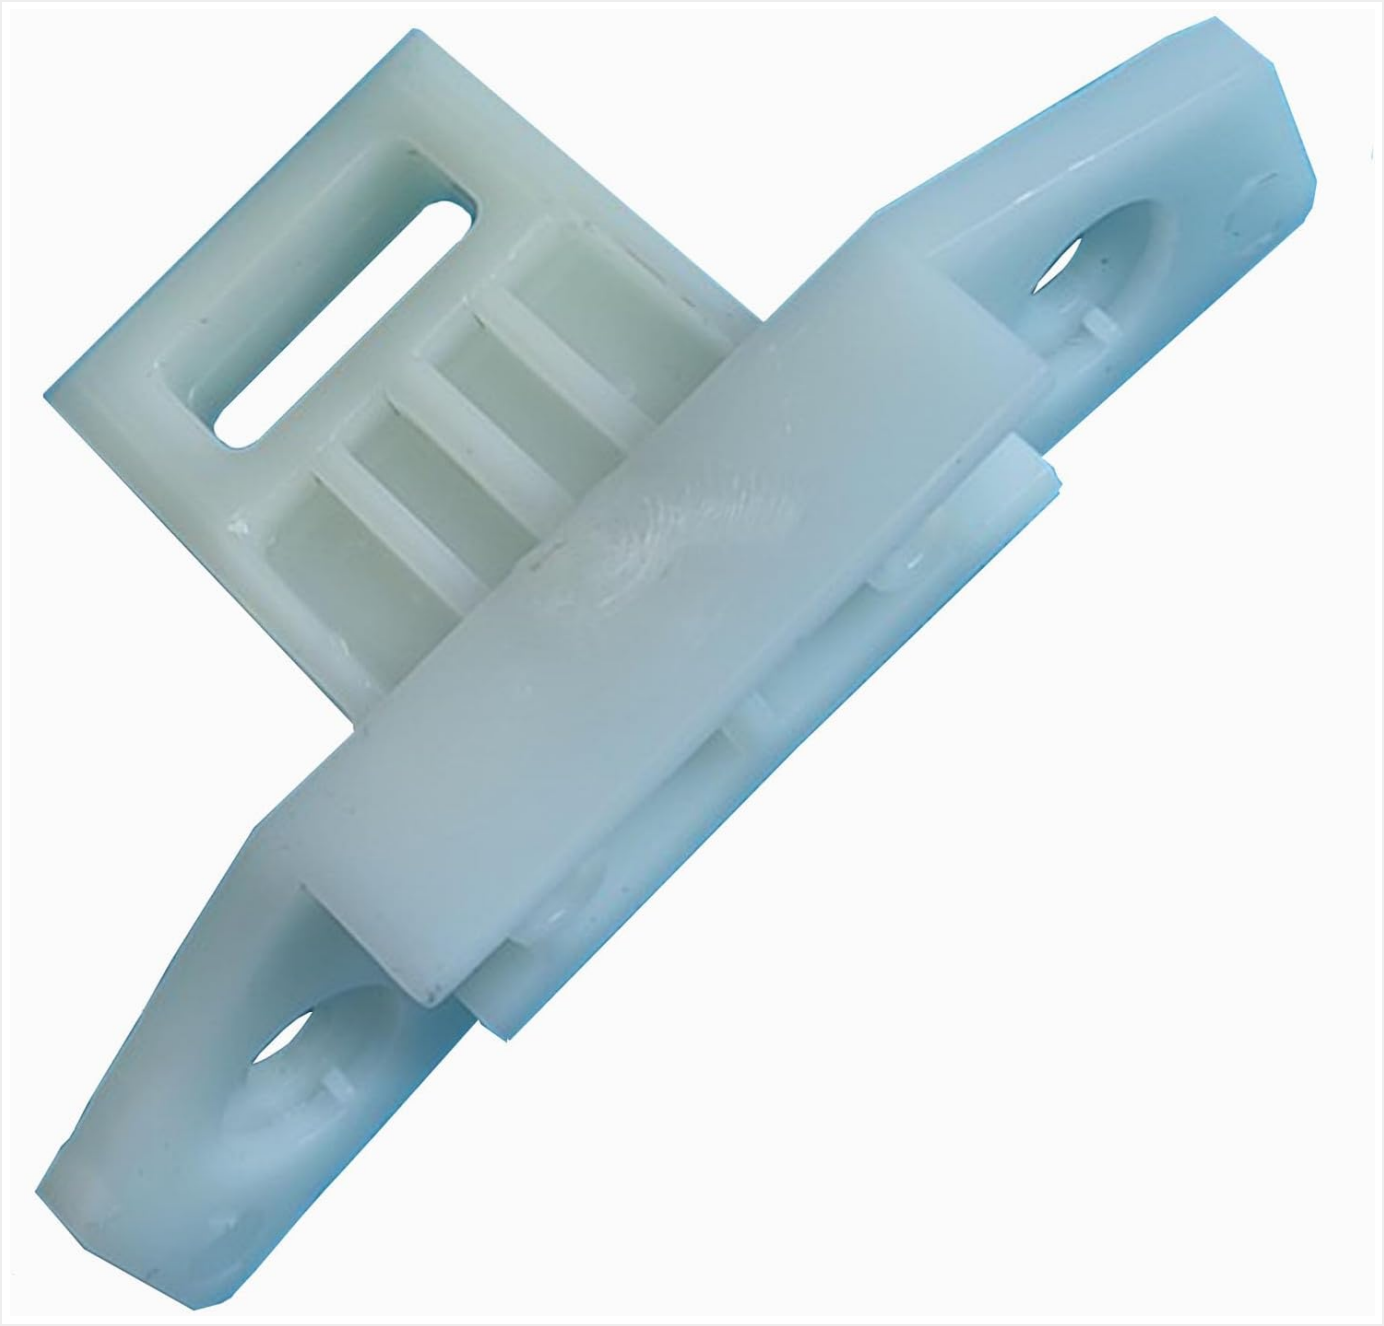


Image 1: The HMHAMA DG-L90588BHC Washing Machine Door Hook. This image shows the complete door hook component, typically made of durable white plastic, designed to secure the washing machine door.

Safety Information

Always prioritize safety when performing repairs or maintenance on appliances. Failure to follow these instructions may result in injury or damage.

- **Power Disconnection:** Before beginning any installation or repair, ensure the washing machine is completely disconnected from the power supply. Unplug the appliance from the wall outlet.
- **Tools:** Use appropriate tools for the task.
- **Professional Assistance:** If you are unsure about any step, consult a qualified technician.

Package Contents

Verify that all components are present before proceeding with installation.

- 1 x HMHAMA DG-L90588BHC Washing Machine Door Hook

(As per product feature bullets: "The package includes 1 x Waher Door Hook.")

Setup and Installation

This section outlines the general steps for replacing the washing machine door hook. Specific steps may vary slightly depending on your washing machine model.

1. **Prepare the Appliance:** Ensure the washing machine is turned off and unplugged from the power outlet. This is a critical safety step.
2. **Access the Door Hook:** Depending on your washing machine model, you may need to open the door and locate the existing door hook mechanism. This often involves removing screws or prying open plastic covers around the door latch area.
3. **Remove the Old Hook:** Carefully detach the broken or faulty door hook. Note how it was connected, as the new hook will be installed in the same manner.
4. **Install the New Hook:** Position the new HMHAMA DG-L90588BHC door hook in place. Secure it using the original screws or fastening mechanisms. Ensure it is firmly seated and aligned correctly.
5. **Test Functionality:** Once the new hook is installed, gently close and open the washing machine door a few times to ensure the latch mechanism engages properly.
6. **Restore Power:** Plug the washing machine back into the power outlet.

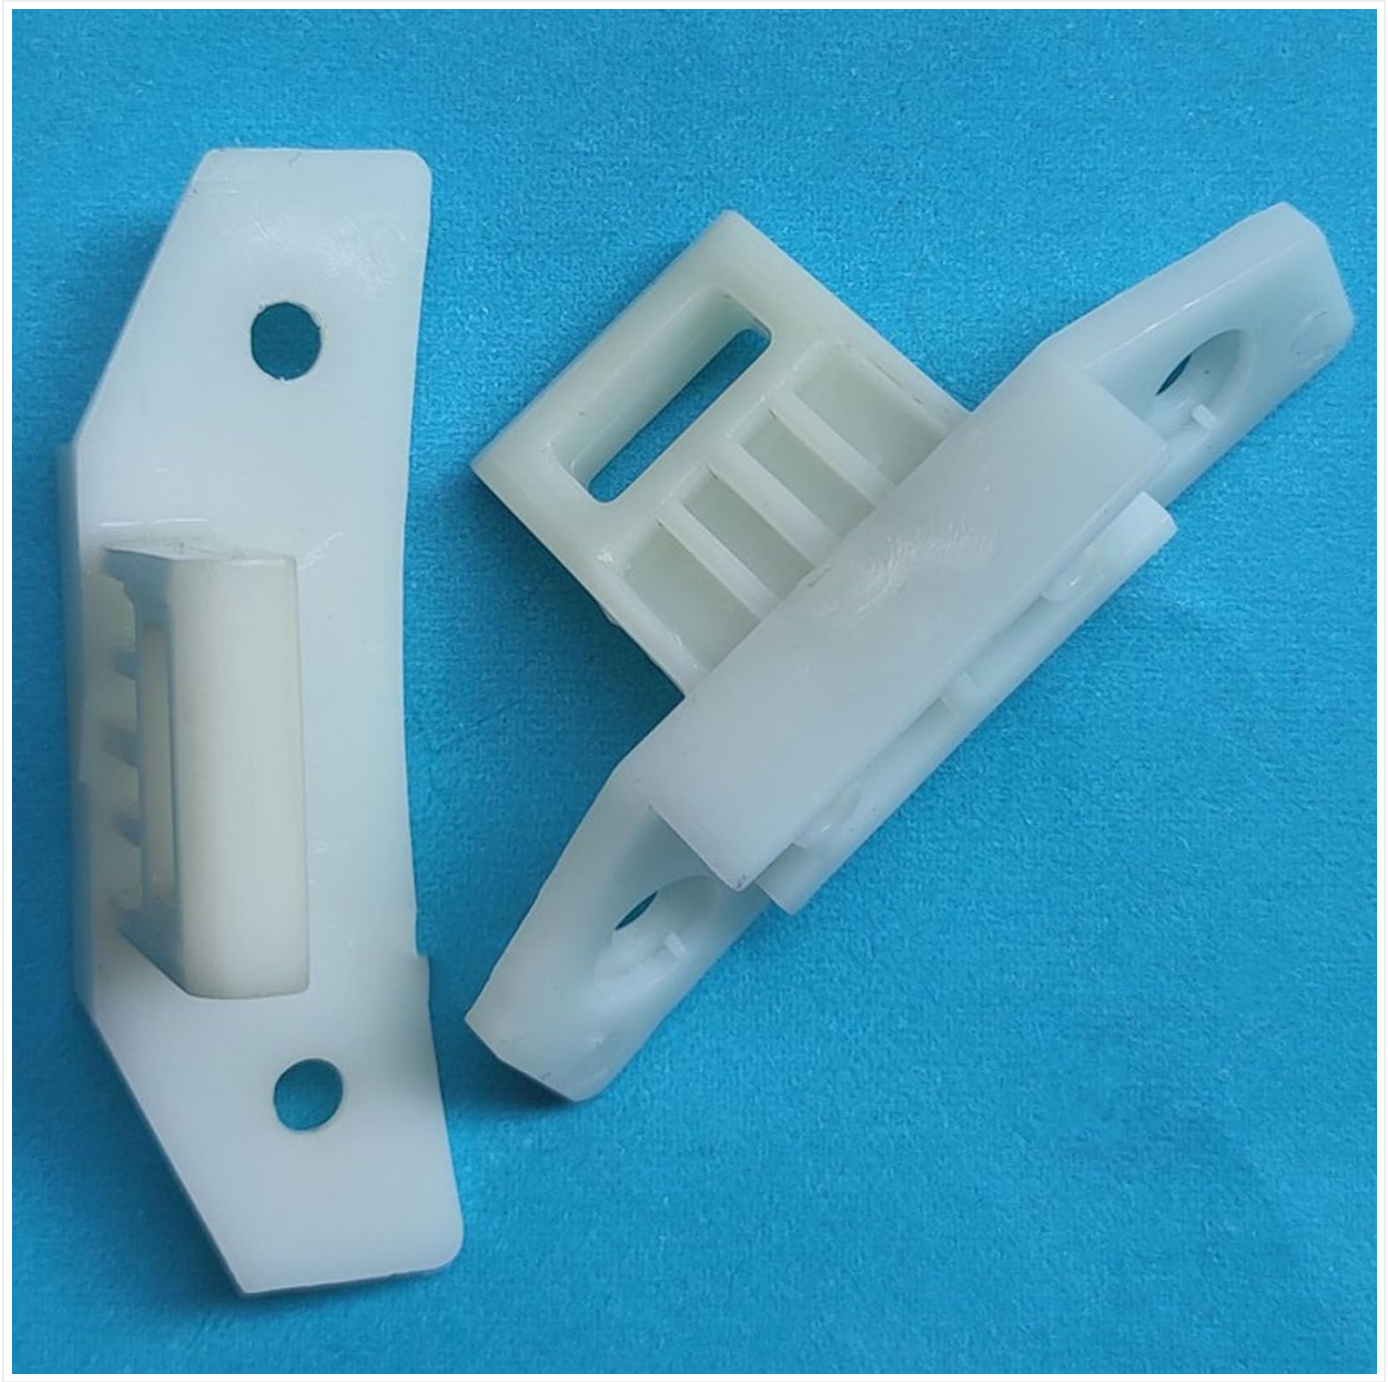


Image 2: Two views of the HMHAMA DG-L90588BHC Washing Machine Door Hook. This image provides a clearer view of the hook's structure and mounting points, which is helpful for installation.

Operating Instructions (Post-Installation)

After successful installation, the washing machine door hook should function as intended, allowing the door to latch securely during operation.

- **Door Closure:** Ensure the washing machine door closes completely and latches securely before starting a wash cycle. A properly functioning door hook is essential for the machine to operate.
- **Cycle Start:** If the door is not latched, the washing machine may display an error code or refuse to start.

Maintenance

The DG-L90588BHC door hook is designed for durability. Regular maintenance is generally not required for this component. However, consider the following:

- **Cleaning:** Periodically inspect the door hook and surrounding area for lint, debris, or detergent residue. Clean with a damp cloth if necessary.
- **Inspection:** If you notice any unusual resistance when opening or closing the door, or if the door does not latch securely, inspect the door hook for signs of wear or damage.

Troubleshooting

If you encounter issues after replacing the door hook, consider these common problems and solutions:

Problem	Possible Cause	Solution
Door does not latch securely.	Hook not installed correctly or misaligned.	Re-check installation steps. Ensure the hook is fully seated and screws are tightened.
Washing machine displays door error.	Door not fully closed or latch sensor issue.	Ensure the door is firmly closed. If the problem persists, the issue might be with the door latch sensor, not the hook itself.
Difficulty opening/closing door.	Friction or obstruction.	Inspect the area around the hook for any foreign objects or debris. Ensure the hook moves freely.

Specifications

Attribute	Detail
Model Number	DG-L90588BHC
Compatible Models	SANYO L9088BHX Drum Washer
Product Dimensions	9.98 x 4.98 x 4.98 cm
Included Components	Waher Door Hook
Manufacturer	zzhm

Warranty and Support

This product is manufactured to high standards. If you encounter any quality problems or require assistance, please contact customer service.
For support, refer to the contact information provided by your retailer or the manufacturer, HMHAMA.
Note: Specific warranty terms may vary. Please retain your proof of purchase.

© 2024 HMHAMA. All rights reserved.
This manual is for informational purposes only. HMHAMA is not responsible for any damage or injury resulting from improper installation or use.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D7HRLT8P

More documents and user manuals: **https://manuals.plus/**