OORAII F4

OORAII Rotating Pomodoro Timer User Manual

Model: F4

Introduction

Thank you for choosing the OORAII Rotating Pomodoro Timer. This innovative device is designed to enhance your productivity and time management through its intuitive gravity-sensing operation and versatile timing modes. Whether for work, study, or daily tasks, this timer provides a simple yet effective tool to maintain focus and manage breaks efficiently.



The OORAII Rotating Pomodoro Timer, a compact black cube with a clear digital display.

Safety Information

- Keep the device away from water and high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided USB-C cable for charging.
- Store in a cool, dry place when not in use.


Package Contents

- 1 x OORAII Rotating Pomodoro Timer
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)

Setup

Charging the Timer

The OORAII Rotating Pomodoro Timer is equipped with a built-in Lithium Polymer battery. Before first use, or when the battery is low, connect the provided USB-C cable to the charging port on the device and plug the other end into a standard USB power adapter (not included) or a computer's USB port. The display will indicate charging status. A full charge provides approximately 20 hours of continuous use or 30 days of standby time.

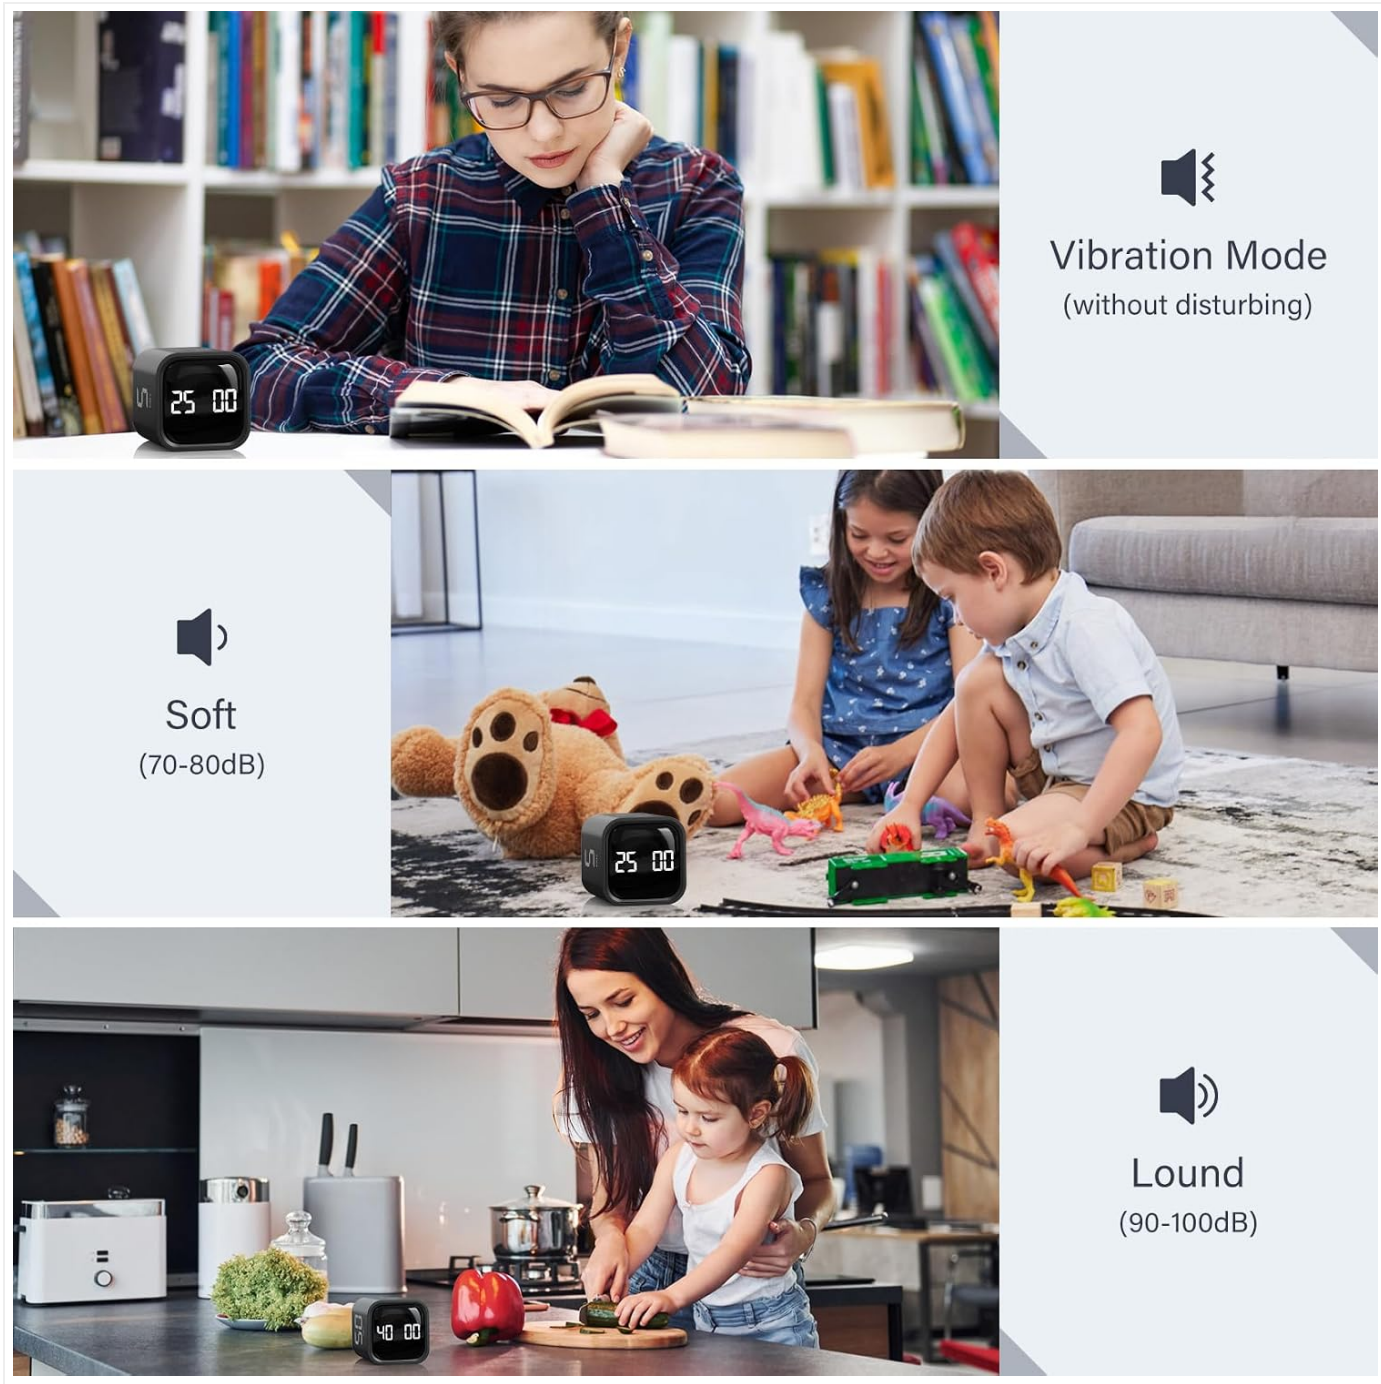

The timer offers extended battery life for prolonged use.

Operating Instructions

Gravity Sensing Preset Modes

This timer features four preset countdown times: 5, 10, 25, and 50 minutes. These are activated by simply flipping the timer to the side with the desired time facing upwards.

1. **To Start a Timer:** Flip the timer so that the desired preset number (5, 10, 25, or 50) is facing upwards. The countdown will begin automatically.
2. **To Pause a Timer:** Flip the timer so the screen is facing upwards. The countdown will pause.
3. **To Reset a Timer:** Flip the timer so the screen is facing downwards. The timer will reset to zero.



Utilize the gravity sensing feature for quick activation of preset timers.

Custom Countdown Mode

For specific timing needs, the timer supports a custom countdown mode from 00-99 minutes and 59 seconds.

1. **Activate Custom Mode:** Locate the switch on the back of the timer and slide it to position "2".
2. **Adjust Minutes:** Press the 'M' button to adjust the minutes (00-99).

3. **Adjust Seconds:** Press the 'S' button to adjust the seconds (00-59).
4. **Start/Stop:** Press the 'ST/SP' button to start or pause the countdown.



Set precise custom countdowns for any task.

Stopwatch Mode

The timer can also function as a stopwatch to measure elapsed time.

1. **Activate Stopwatch Mode:** Ensure the switch on the back is in position "2". When the display shows "00 00", it is ready for stopwatch function.
2. **Start/Stop:** Press the 'ST/SP' button to start the stopwatch. Press it again to pause.
3. **Reset:** Flip the timer screen facing downwards to reset the stopwatch to zero.



Track elapsed time with the convenient stopwatch mode.

Volume Settings

The timer offers three volume levels to suit your environment:

- **Silent Mode (Vibration):** Ideal for quiet environments like libraries or offices. The timer will vibrate instead of sounding an alarm.
- **Low Volume (70-80dB):** Suitable for general use where a subtle alert is preferred.
- **High Volume (90-100dB):** For noisy environments or when a prominent alert is required.

To adjust the volume, use the dedicated volume switch on the back of the timer.



Choose from silent vibration, low, or high volume settings.

Maintenance

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the timer in a dry place away from extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in constant use.

Troubleshooting

Problem	Possible Cause	Solution
Timer not starting in gravity mode.	Timer not flipped correctly or battery low.	Ensure the desired time face is fully upwards. Charge the timer.

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery.	Charge the timer fully.
No sound from alarm.	Timer is in silent (vibration) mode.	Adjust the volume switch on the back to Low or High.
Timer not responding.	Temporary software glitch.	Flip the timer screen facing downwards to reset it. If issue persists, allow battery to fully drain and then recharge.

Specifications

Feature	Detail
Model Number	F4
Dimensions	2.5"D x 2.5"W x 2.5"H
Weight	2.39 ounces
Power Source	1 Lithium Polymer battery (included)
Charging Port	USB-C
Screen Size	2.5 Inches
Volume Levels	Silent (Vibration), Low (70-80dB), High (90-100dB)
Timing Range (Custom)	00-99 minutes, 59 seconds
Preset Times	5, 10, 25, 50 minutes

Warranty and Support

OORAII products are designed for reliability and performance. For any questions, concerns, or warranty claims, please contact the seller, Sanjour Direct, through your Amazon order page. Our customer support team aims to respond within 24 hours to assist you.
For more information about OORAII products, visit the official OORAII Store on Amazon.

© 2024 OORAII. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question