PINDOWS PDS-646-N1

PINDOWS Watch for Men Instruction Manual

Model: PDS-646-N1
Brand: PINDOWS

1. Introduction and Overview

Thank you for choosing the PINDOWS Multifunction Analog Digital Sport Watch. This manual provides detailed instructions to help you set up, operate, and maintain your new timepiece. Designed for durability and precision, this watch combines classic analog display with modern digital functionalities, making it suitable for various activities.

Your PINDOWS watch features a robust design with a high-hardness, scratch-resistant mirror and a comfortable silicone band. It is equipped with multiple functions including time, date, day of the week, alarm, stopwatch, and LED backlight for enhanced visibility in low-light conditions.

2. Product Features

- **Accurate Timekeeping:** Multifunction chronograph movement ensures high accuracy.
- **Analog & Digital Display:** Combines traditional watch hands with digital readouts for date, day, and additional time.
- **LED Backlight:** Provides clear visibility of the digital display in dark environments.
- **Water Resistance:** Sealed waterproof design, suitable for daily use up to 30 meters (not for underwater activities or hot water environments).
- **Durable Construction:** High-quality IP vacuum plating material for stronger texture and no color fading. Mirror with high hardness, scratch, and abrasion resistance.
- **Multifunctionality:** Includes alarm, stopwatch, and calendar features.
- **Comfortable Band:** High-quality silicone band designed for comfort and durability.

3. Parts Identification

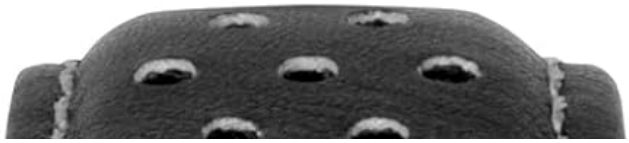




Figure 3.1: Front view of the PINDOWS watch, showcasing the analog and digital displays, and the black silicone band.



Figure 3.2: Side view illustrating the crown and function buttons used for setting and operating the watch's features.



Figure 3.3: Rear view of the watch, showing the stainless steel back and engraved model information.



Figure 3.4: Detailed view of the watch dial, highlighting the minute dial, 24-hour dial, and the functions of the crown and buttons for

adjustment.

4. Setup Instructions

4.1 Setting Analog Time

1. Pull the crown (middle button on the right side) out to the second position (two gears).
2. Rotate the crown to adjust the analog hour and minute hands to the correct time.
3. Push the crown back in to the first position to start the analog movement.

4.2 Setting Digital Time and Date

The digital display typically shows time, date, and day of the week. Refer to the detailed instruction manual included in the watch packaging for specific button functions to set these digital parameters. Generally, a 'MODE' button (often bottom-left) cycles through settings, and other buttons (top-right, bottom-right) adjust values.

5. Operating Instructions

5.1 Using the Stopwatch

1. Press the 'MODE' button until the stopwatch function is displayed (often indicated by 'STW' or 'CHR').
2. Press the 'START/STOP' button (often top-right) to begin timing.
3. Press the 'START/STOP' button again to pause/stop the timer.
4. Press the 'RESET' button (often bottom-right) to clear the stopwatch to zero.

5.2 Setting and Using the Alarm

1. Press the 'MODE' button until the alarm function is displayed (often indicated by 'ALM').
2. Use the adjustment buttons to set the desired alarm time.
3. Activate or deactivate the alarm using the designated button (refer to the full manual for specific button).

5.3 Activating the LED Backlight

Press the 'LIGHT' button (often top-left) to illuminate the digital display. The backlight will typically stay on for a few seconds.

6. Maintenance

6.1 General Care

- Clean your watch regularly with a soft, dry cloth to remove dust and dirt.
- Avoid exposing the watch to extreme temperatures or sudden temperature changes.
- Do not expose the watch to strong magnetic fields, as this may affect its accuracy.

6.2 Water Resistance

Your PINDOWS watch is water-resistant up to 30 meters. This means it is suitable for daily use, such as splashes, rain, or brief immersion in water. However, it is **not** suitable for swimming, diving, or any underwater activities. Avoid pressing buttons while the watch is wet or submerged, and do not expose it to hot water or steam (e.g., in showers or saunas), as this can compromise the water seals.

7. Troubleshooting

- **Watch not running/display blank:** Check if the crown is fully pushed in. If not, the battery may need replacement.
- **Incorrect time/date:** Follow the setup instructions in Section 4 to reset the time and date.
- **Digital display not visible:** Ensure the LED backlight is activated (Section 5.3). If still not visible, the battery may be low.
- **Water inside the watch:** Immediately take the watch to a professional watch repair service. Do not attempt to open it yourself.

8. Specifications

Feature	Specification
Model Number	PDS-646-N1
Movement	Multifunction Chronograph
Water Resistance Depth	30 Meters
Case Material	IP Vacuum Plating
Mirror Material	High Hardness, Scratch & Abrasion Resistant
Band Material	Silicone
Clasp Type	Buckle
Item Type Name	Casual Watch
Package Dimensions	3.66 x 3.62 x 3.03 inches
Item Weight	6.35 ounces

9. Warranty and Support

PINDOWS strives to provide a satisfactory shopping experience. If you encounter any problems or dissatisfaction with your watch, please feel free to contact our professional customer service team. We are committed to assisting you with any issues.

For specific warranty details and to initiate a support request, please refer to the warranty card included with your product or visit the official PINDOWS website. Keep your purchase receipt as proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question