Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EUARY A44

EUARY Cordless Stick Vacuum Cleaner A44 User Manual

Model: A44 | Brand: EUARY

Introduction

Thank you for choosing the EUARY Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

Safety Instructions

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Always disconnect the vacuum cleaner from the charger before cleaning or performing maintenance.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Check the battery pack for damage before use. Do not use a damaged or modified battery pack.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

Package Contents

Carefully unpack all components and check against the list below. If any items are missing or damaged, contact customer support.

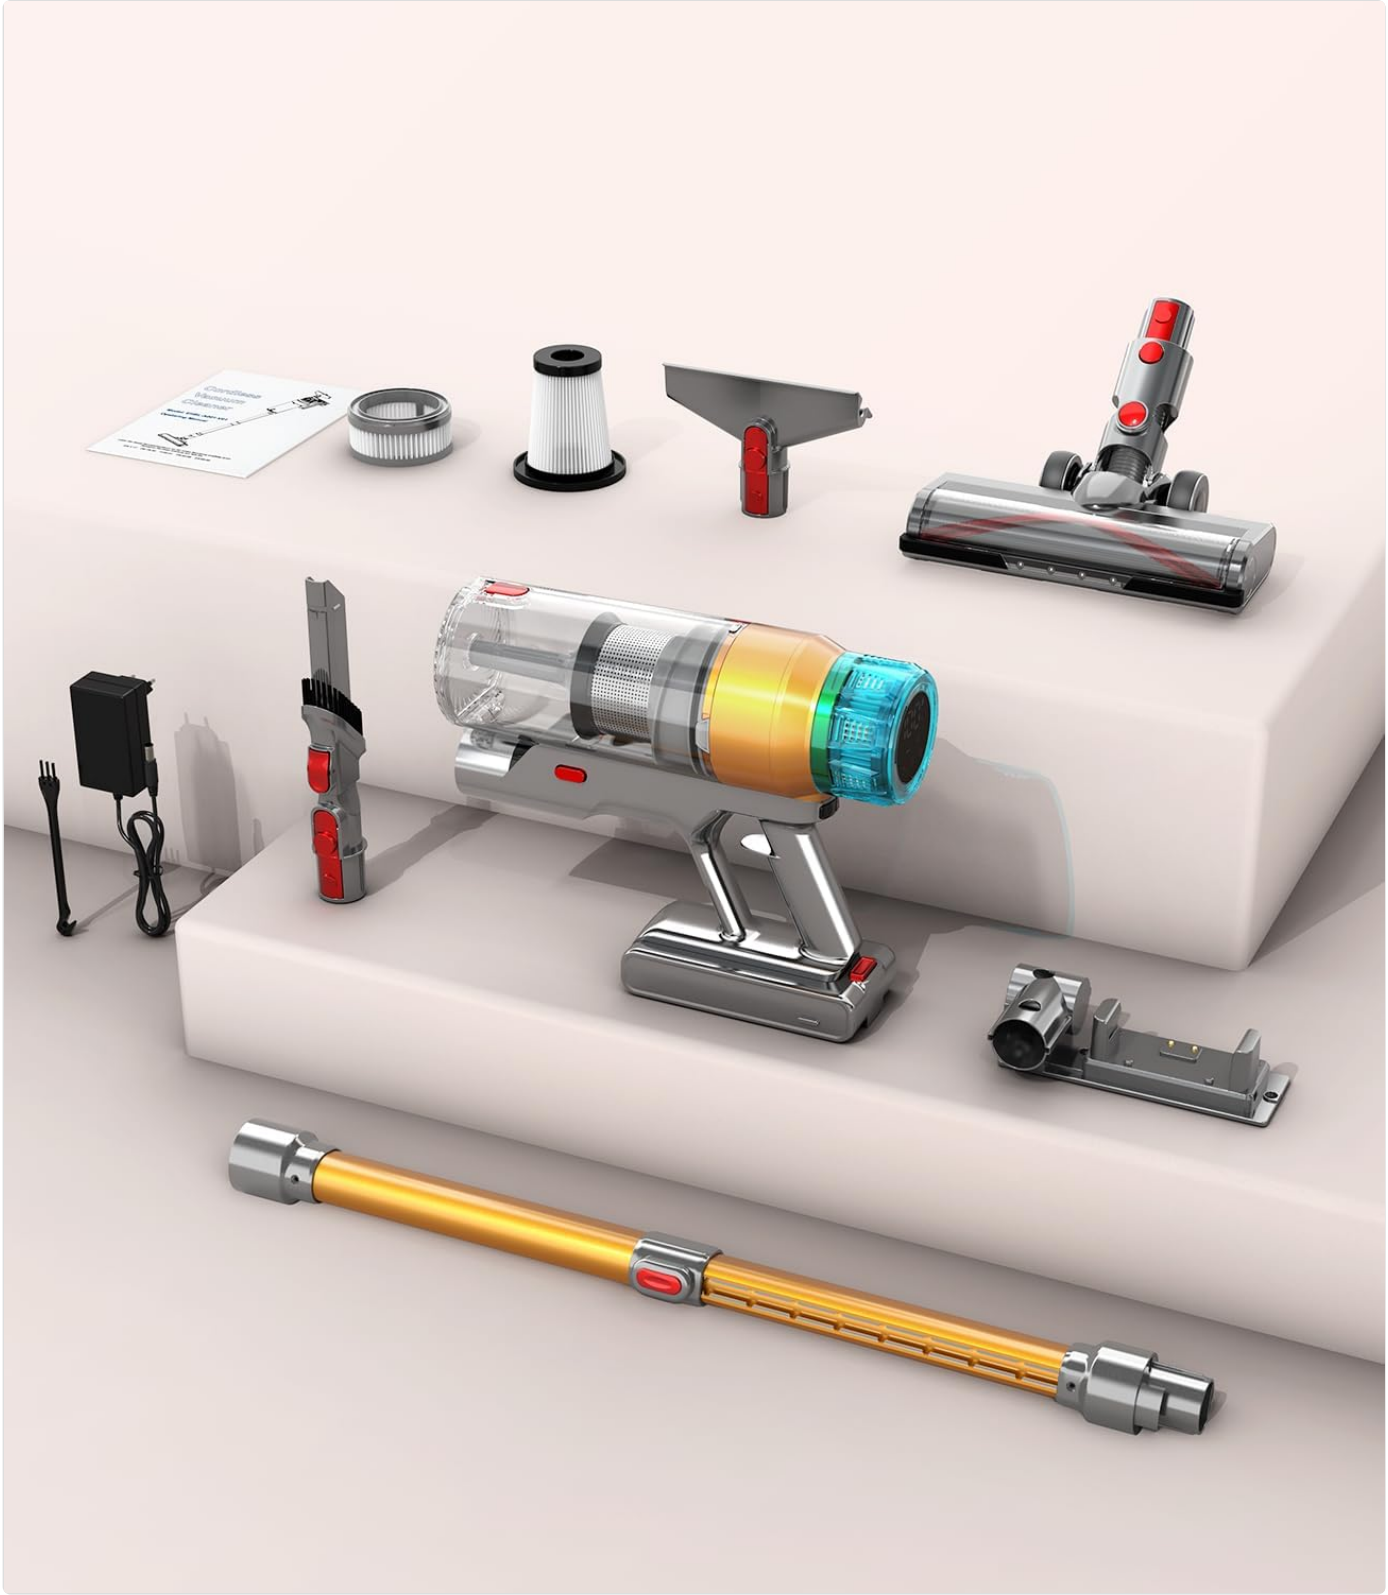


Image: All components of the EUARY Cordless Stick Vacuum Cleaner laid out. This includes the main vacuum unit, a long extension wand, the motorized floor brush, a crevice tool, a 2-in-1 brush tool, a wall-mounting bracket, the power adapter/charger, and spare filters. An instruction manual is also visible.

- Main Vacuum Unit with Dustbin
- Extension Wand
- Motorized Floor Brush (V-shaped anti-tangle design)
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mounting Bracket

- Power Adapter/Charger
- HEPA Filter (pre-installed and spare)
- User Manual

Product Diagram

Familiarize yourself with the different parts of your vacuum cleaner.



Image: A visual breakdown of the EUARY Cordless Stick Vacuum Cleaner. It illustrates the main handheld unit, the extension tube, the motorized floor brush with LED lights, and various attachments like the crevice tool and brush tool. The image also shows how the vacuum can be configured for different cleaning tasks, such as a handheld vacuum or a stick vacuum.

1. Main Unit (Motor, Dustbin, Battery, Smart Display)
2. Dustbin Release Button

3. Power Button
4. Mode Selection Button
5. Extension Wand
6. Wand Release Button
7. Motorized Floor Brush with LED Lights
8. Brush Roll Release Latch
9. Crevice Tool
10. 2-in-1 Brush Tool
11. Wall Mounting Bracket
12. Charger Port

Setup

1. Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging port on the main unit or the wall mounting bracket. The smart display will show charging progress.



Image: The main vacuum unit is shown docked into a wall-mounted charging bracket. A power cord connects the bracket to an outlet, indicating the charging process. This setup allows for convenient storage and charging.

A full charge typically takes approximately 4 hours. The battery provides up to 50 minutes of runtime depending on the power mode used.

2. Assembly

1. **Attach the Extension Wand:** Align the main unit with the top end of the extension wand and push until it clicks into place.
2. **Attach the Floor Brush:** Align the bottom end of the extension wand with the motorized floor brush and push until it clicks into place.

3. **Attach Accessories:** For handheld use, attach the crevice tool or 2-in-1 brush tool directly to the main unit. For extended reach, attach them to the extension wand.

Operating Instructions

1. Powering On/Off

Press the **Power Button** once to turn the vacuum cleaner on. Press it again to turn it off.

2. Adjusting Suction Power

The vacuum cleaner has 3 power levels. Press the **Mode Selection Button** to cycle through the different suction modes (Eco, Standard, Max). The current mode will be displayed on the smart LED screen.



Image: A detailed view of the vacuum's smart LED display. It clearly shows the battery percentage (e.g., 100%) and indicators for different suction modes, allowing users to monitor performance and battery life at a glance.

3. Using Different Attachments



Image: This image demonstrates the versatility of the EUARY vacuum. It shows the vacuum being used in three configurations: as a full stick vacuum cleaning a carpet, as a handheld unit cleaning a sofa, and as a stick vacuum cleaning a hard floor. This highlights the use of different attachments for various cleaning tasks.

- **Motorized Floor Brush:** Ideal for carpets, rugs, and hard floors. The V-shaped brush roll prevents hair tangles, and LED lights illuminate dark areas.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like keyboards or curtains, and the nozzle for upholstery or car interiors.

Maintenance

1. Emptying the Dustbin

Press the dustbin release button to detach the dustbin from the main unit. Hold the dustbin over a trash can and press the bottom release latch to empty its contents. The 1.5-liter capacity allows for extended cleaning sessions.

2. Cleaning Filters

The vacuum features an 11-layer filtration system, including a HEPA filter. For optimal performance, clean the filters regularly.

- Twist and pull to remove the filter assembly from the dustbin.
- Tap off loose dirt. Rinse the filters under cold running water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or heat source.

3. Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. Use a coin or flat tool to unlock the brush roll cover, remove the brush roll, and clear any obstructions. Reinsert and secure the cover.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the battery fully. Press the power button firmly.
Low suction power.	Dustbin is full. Filters are clogged. Brush roll is obstructed. Attachment is not properly secured.	Empty the dustbin. Clean or replace filters. Clear obstructions from the brush roll. Reattach the accessory securely.
Vacuum stops suddenly.	Battery is depleted. Overheating protection activated.	Recharge the battery. Turn off the vacuum and allow it to cool down for at least 30 minutes. Check for blockages.
Brush roll not spinning.	Obstruction in the brush roll. Brush roll not properly installed.	Remove and clean the brush roll. Ensure the brush roll is correctly seated and locked.

Specifications

Model: A44

Brand: EUARY

Motor Power: 450W

Suction Power: Up to 40,000 PA

Battery Type: Lithium-ion (6x 2500 mAh)

Runtime: Up to 50 minutes (Eco mode)

Charging Time: Approximately 4 hours

Dustbin Capacity: 1.5 Liters

Filtration System: 11-layer HEPA filtration (99.99% efficiency)

Special Features: Smart LED Display, Anti-tangle V-shaped brush, LED headlights, Wall-mount charging

Dimensions (L x W x H): 24 cm x 22 cm x 110 cm

GTIN/UPC: 722898070858



Image: A detailed view of the main vacuum unit, emphasizing its power source. The image highlights the 2500mAh lithium-ion battery pack and indicates a running time of up to 55 minutes, showcasing the vacuum's endurance.

Warranty and Support

The EUARY Cordless Stick Vacuum Cleaner A44 comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use.
For technical support, warranty claims, or any questions regarding your product, please contact our customer service team. We offer **24/7 customer support** to assist you.
Please have your model number (A44) and purchase information ready when contacting support.
Contact information (e.g., email, phone number, website) would typically be provided here by the manufacturer.

© 2024 EUARY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D7MMJ612

More documents and user manuals: **https://manuals.plus/**