Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MangoKit MD2

MangoKit MD2 DAB/DAB+ Radio User Manual

Model: MD2

Introduction

Thank you for purchasing the MangoKit MD2 DAB/DAB+ Radio. This manual provides detailed instructions on how to set up, operate, and maintain your new radio. Please read this manual carefully before use to ensure optimal performance and longevity of your device.
The MangoKit MD2 offers a superior listening experience with its clear digital radio reception, versatile connectivity options including Bluetooth, and convenient features like dual alarms and a sleep timer. Its compact design makes it ideal for use in various settings, from your kitchen to outdoor adventures.

Product Overview

Familiarize yourself with the main components and controls of your MangoKit MD2 radio.



Front view of the MangoKit MD2 radio, showing the display, speaker grille, and control buttons.



The MangoKit MD2 radio positioned in a bathroom, demonstrating its compact size and versatility.

Key Features:

- **DAB/DAB+ and FM Digital Radio:** Enjoy crystal clear audio quality and a wide selection of stations.
- **Bluetooth Connectivity:** Wirelessly stream audio from your smartphone or other Bluetooth-enabled devices.
- **Portable Design:** Operates on both main power and 4x AA batteries (not included) for flexible use.
- **Headphone Jack:** For private listening without disturbing others.
- **Dual Alarms & Sleep Timer:** Customize your wake-up and sleep routines.
- **40 Presets:** Quickly save and access your favorite DAB and FM stations.
- **Adjustable Display Brightness:** High, medium, and low settings for comfortable viewing.

Setup

Powering Your Radio:

The MangoKit MD2 radio can be powered in two ways:

1. **Main Power:** Connect the included USB Type-C cable to the radio's USB-C port and the power supply to a wall outlet.
2. **Battery Power:** For portable use, insert 4x AA batteries (not included) into the battery compartment located on the back of the radio. Ensure correct polarity. The radio can also be powered by a power bank using the USB cable.


Friendly Tip: While rechargeable AA batteries are recommended for environmental and economic reasons, please note that the radio itself does not charge rechargeable batteries. An external charger is required.

Antenna Adjustment:

Extend the telescopic antenna located on the back of the radio. For optimal signal reception, rotate the antenna 360 degrees and adjust its position until you achieve the clearest sound. This is especially important for DAB/DAB+ and FM reception.

Initial Station Scan:

Upon first power-on or after a factory reset, the radio will automatically perform a quick scan for available DAB/DAB+ and FM stations. This ensures optimal digital radio performance by finding all available channels in your area.

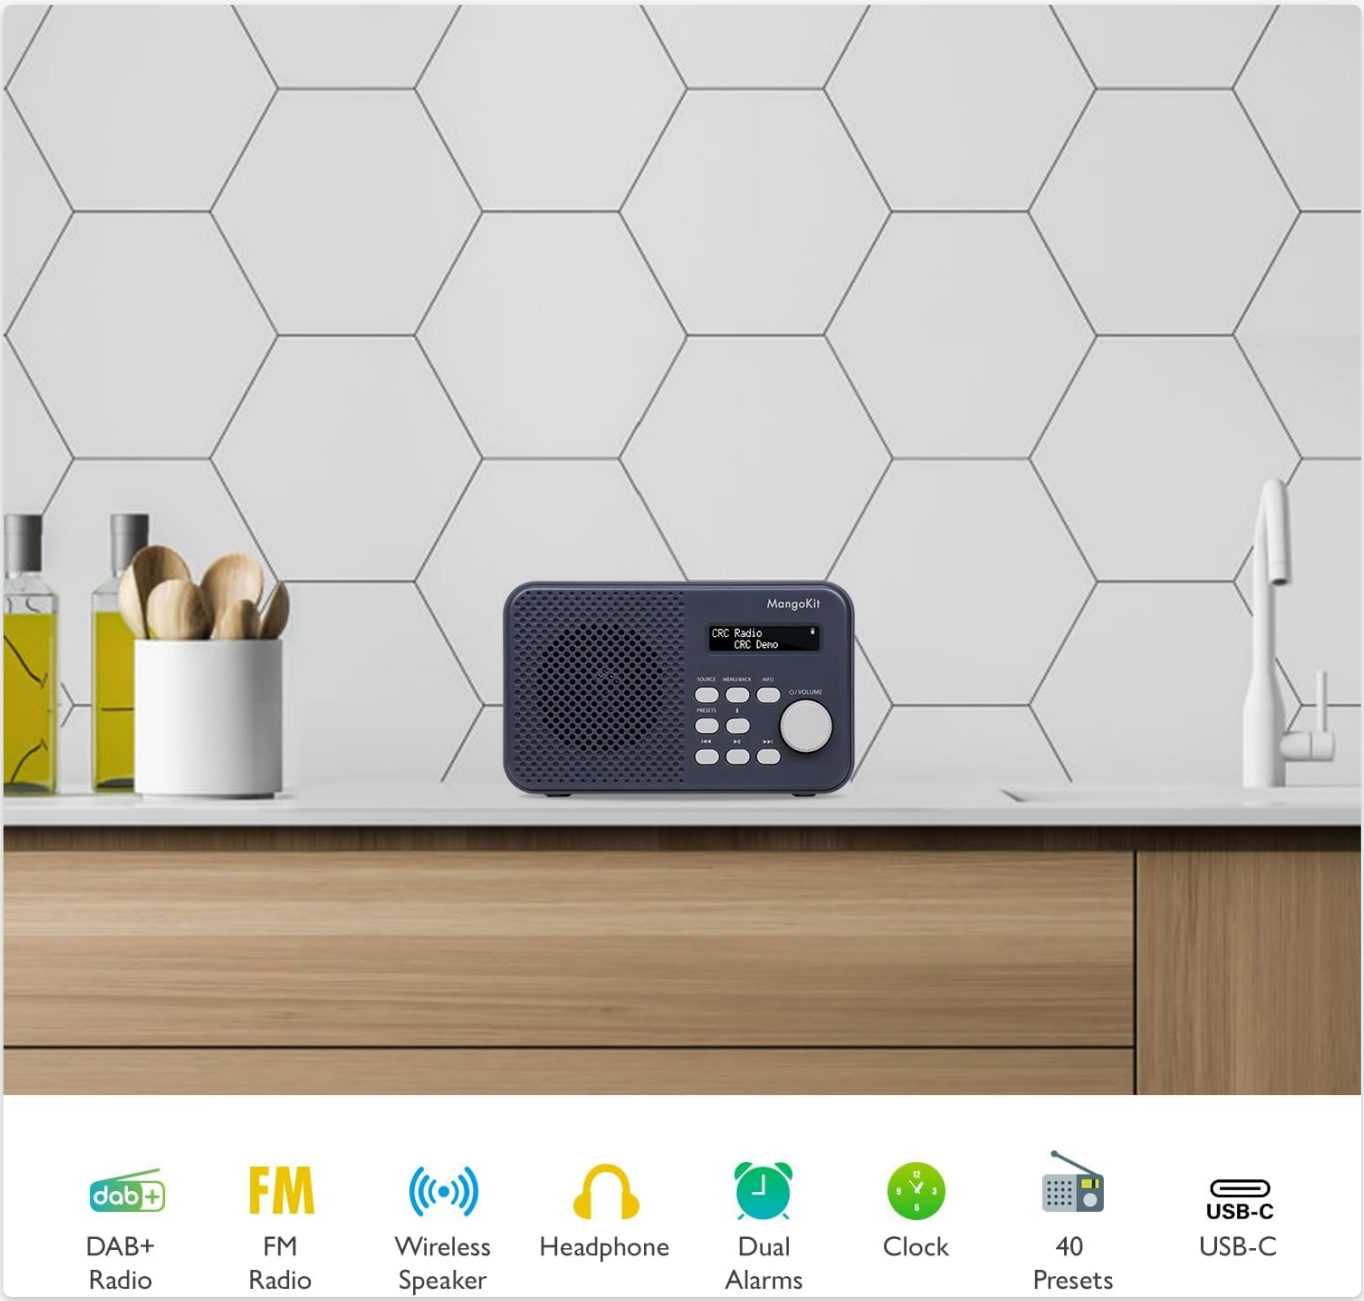

The MangoKit MD2 radio in a kitchen environment, illustrating its compact size and various features like DAB+, FM, Bluetooth, and alarm functions.

Operating the Radio

DAB/DAB+ and FM Radio Operation:

- **Switching Modes:** Press the 'SOURCE' button to cycle between DAB, FM, and Bluetooth modes.
- **Tuning:** In DAB or FM mode, use the 'PREV' and 'NEXT' buttons to navigate through available stations.
- **Presets:** The radio allows you to save up to 20 DAB and 20 FM stations. To save a station, tune to your desired station, then press and hold the 'PRESETS' button until the display shows 'Preset Store'. Use the 'PREV'/'NEXT' buttons to select a preset number, then press 'OK' to confirm. To recall a saved station, press the 'PRESETS' button briefly, then use 'PREV'/'NEXT' to select the desired preset and press 'OK'.



The MangoKit MD2 radio on a table, emphasizing its 40 preset memory and auto-scan capabilities for radio stations.

Bluetooth Speaker Mode:

The MangoKit MD2 can function as a wireless Bluetooth speaker, allowing you to stream audio from your smartphone, tablet, or other Bluetooth-enabled devices.

1. Press the 'SOURCE' button until 'Bluetooth' mode is selected. The display will show 'Bluetooth Pairing'.
2. On your smart device, enable Bluetooth and search for available devices.
3. Select 'MangoKit MD2' from the list of devices to pair. Once connected, the display will show 'Bluetooth Connected'.
4. You can now play audio from your device through the MangoKit MD2 radio.



The MangoKit MD2 radio next to a smartphone, illustrating its Bluetooth streaming capability.

Headphone Use:

For private listening, connect your headphones to the 3.5mm headphone jack located on the back of the MD2. The radio's speaker will automatically mute when headphones are connected.



A person enjoying music outdoors with the MangoKit MD2 radio and headphones, highlighting its headphone connectivity.

Advanced Features

Dual Alarms:

The MangoKit MD2 features dual alarm settings, allowing you to set separate alarms for weekdays and weekends, or for different times. You can choose your favorite DAB or FM radio station as the alarm sound.

- To set an alarm, navigate to the Alarm settings in the menu.
- Select Alarm 1 or Alarm 2.
- Set the desired time, alarm source (DAB/FM), and frequency (daily, weekdays, weekends, once).
- Confirm your settings.

Snooze Function:

When an alarm sounds, press the large snooze button to temporarily silence the alarm for a few minutes, allowing for a

short extension of sleep.

Sleep Timer:

The sleep timer allows you to fall asleep to music, with the radio automatically turning off after a set period. You can set the sleep timer for 15, 30, 45, 60, or 90 minutes.

- To activate the sleep timer, navigate to the Sleep Timer settings in the menu.
- Select your desired duration. The radio will play for the set time and then automatically switch off.



The MangoKit MD2 radio on a bedside table, demonstrating its dual alarm and sleep timer functions for a comfortable sleep environment.

Display Brightness:

Adjust the display brightness to suit your environment. The MD2 offers high, medium, and low brightness levels, which can be particularly useful for night-time use.

Care and Maintenance

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the radio for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- **Environment:** Avoid exposing the radio to extreme temperatures, direct sunlight, high humidity, or dusty environments.
- **Water Resistance:** This device is not waterproof. Keep it away from water and liquids.

Troubleshooting

Problem	Possible Cause	Solution
No power / Radio does not turn on	Batteries are dead or incorrectly inserted; Power cable is not connected properly.	Replace batteries or ensure correct polarity. Check power cable connection to radio and wall outlet.
Poor radio reception (DAB/FM)	Weak signal; Antenna not extended or positioned correctly.	Fully extend and adjust the telescopic antenna. Try moving the radio to a different location. Perform a new auto-scan.
Bluetooth not connecting	Radio not in Bluetooth mode; Device not discoverable; Incorrect pairing name.	Ensure radio is in Bluetooth mode. Make sure Bluetooth is enabled on your smart device. Search for 'MangoKit MD2'. Try unpairing and re-pairing.
Alarm does not sound	Alarm not activated; Volume too low.	Check alarm settings to ensure it is enabled and set correctly. Increase the volume.

Technical Specifications

Feature	Specification
Model Number	MD2
Dimensions (L x W x H)	16 x 5.4 x 9.5 cm
Weight	480 grams
Supported Radio Bands	DAB, DAB+, FM
Connectivity Technology	Bluetooth, 3.5mm Headphone Jack, USB-C
Power Source	AC Power (via USB-C) and 4x AA Batteries (not included)
Color	Dark Grey
Included Components	User Manual, Quick Start Guide, USB Type-C Cable, Power Supply, Thank You Card

Warranty and Support

For warranty information and customer support, please refer to the 'Thank You Card' included in your product

packaging or visit the official MangoKit website. If you encounter any issues not covered in this manual, please contact our customer service team for assistance.
We are committed to providing high-quality products and excellent customer service.

© 2024 MangoKit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D7S1ZQDJ

More documents and user manuals: **https://manuals.plus/**