Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Zunate Zunateguh1dm87w9-11

Zunate The Waves Bluetooth Speaker Instruction Manual

Model: Zunateguh1dm87w9-11 | Brand: Zunate

Introduction

The Zunate The Waves Bluetooth Speaker is a versatile 3-in-1 device that combines a stereo speaker, a night light, and a time display. Designed with a classic record player aesthetic, it offers both modern functionality and a vintage appearance. This manual provides instructions for the proper setup, operation, and maintenance of your device.



Image: The Zunate The Waves Bluetooth Speaker, presented with its product packaging, highlighting its musical capabilities.

Setup

Package Contents

- Zunate The Waves Bluetooth Speaker
- Charging Cable

Charging the Device

Before initial use, fully charge the speaker. Connect the provided charging cable to the charging port on the speaker and to a standard USB power adapter (not included). The battery indicator on the display will show charging status.

Power On/Off

1. To power on: Locate the power button or knob (refer to the operating section for control layout) and press/turn it to the 'On' position.
2. To power off: Press/turn the power button or knob to the 'Off' position.

Bluetooth Pairing

1. Ensure the speaker is powered on.
2. Activate Bluetooth on your mobile device or computer.
3. On your device, search for available Bluetooth devices. The speaker will typically appear as "The Waves Speaker" or a similar name.
4. Select the speaker from the list to initiate pairing. A confirmation sound or message may indicate successful pairing.

Operating Instructions

Speaker Functionality

The speaker delivers clear stereo sound with volume and rich bass, suitable for various audio content. Adjust the volume using the designated control knob.



Image: A pink variant of the speaker demonstrating its 360-degree surround sound and Bluetooth connectivity.

Night Light Feature

The integrated night light projects a soft, ambient transparent water ripple effect, creating a relaxing atmosphere. It can function as a bedside lamp. The light offers different modes, including RGB and Breathing modes, which can be selected via the control interface.

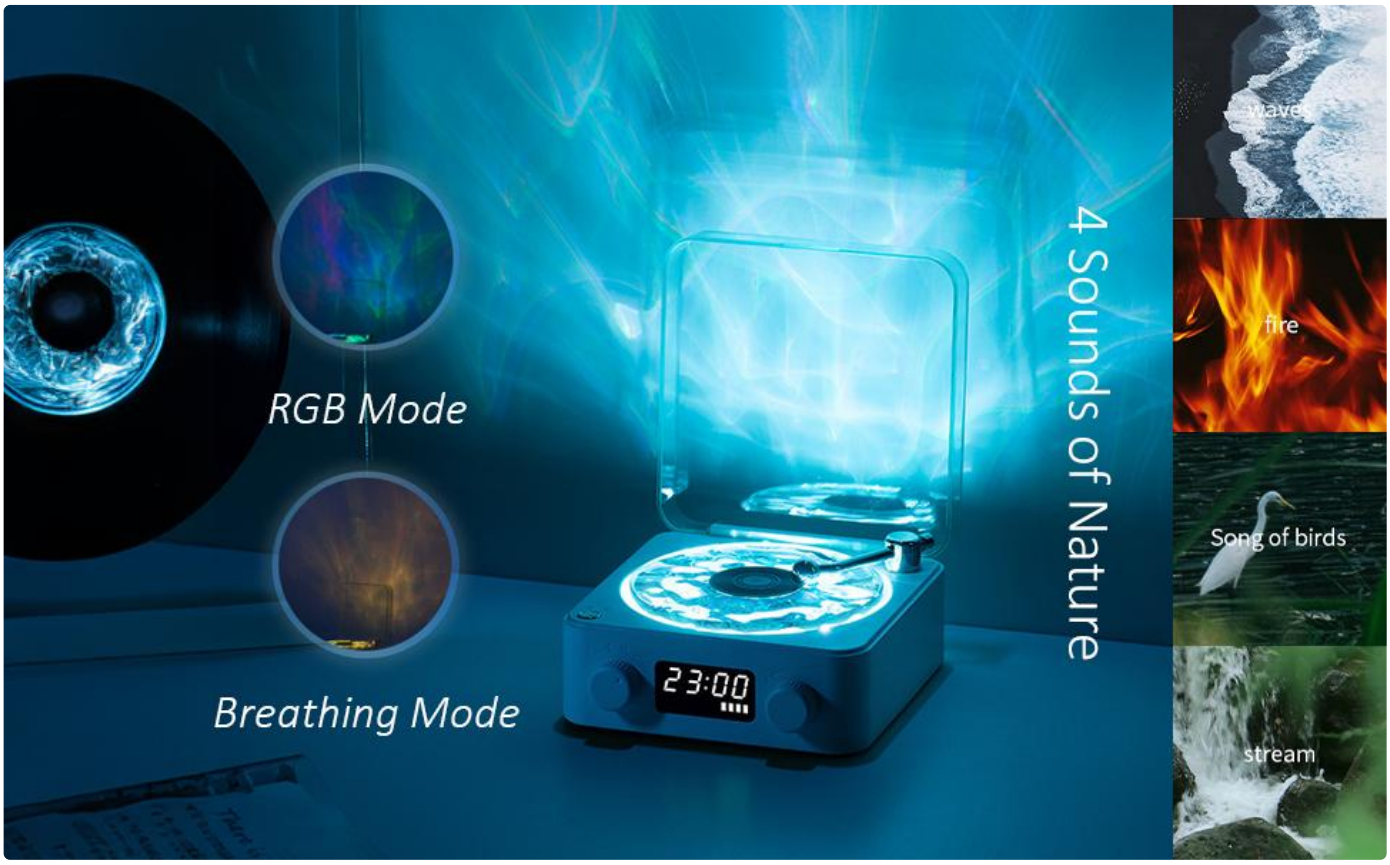


Image: The speaker showcasing its RGB and Breathing light modes, alongside a visual representation of four natural sounds.

Time and Battery Display

The front display shows the current time and battery level, allowing for easy monitoring. Ensure the device is charged when the battery level is low.

Natural Sound Modes

The speaker includes various natural sound modes, such as sea white noise, to aid relaxation or sleep. These modes can be selected to enhance the ambient experience.

Controls Overview

The device features control knobs for adjusting settings. One knob typically controls power and volume, while another may manage light modes or sound selections. Refer to the specific markings on your device for precise functions.

Image: A user's hand adjusting one of the control knobs on the speaker.

Product Video

Your browser does not support the video tag.

Video: This video demonstrates the unboxing of the Zunate The Waves Bluetooth Speaker and showcases its various light effects and overall aesthetic.

Maintenance

Cleaning

Wipe the speaker with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the surface. Do not immerse the device in water.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before storage to prolong its lifespan.

Troubleshooting

- **No Power:** Ensure the speaker is fully charged. Check the charging cable connection.
- **No Sound:** Verify that the volume is turned up on both the speaker and the connected device. Ensure Bluetooth is properly paired.
- **Bluetooth Disconnection:** Move the connected device closer to the speaker to ensure it is within range. Disconnect and re-pair the Bluetooth connection.
- **Light Not Working:** Check if the light feature is enabled and if the correct mode is selected.

Specifications

Feature	Detail
Model Name	Zunateguh1dm87w9-11
Brand	Zunate
Package Dimensions	6.3 x 5.91 x 3.15 inches
Item Weight	1.42 pounds (646 Grams)
Power Source	Battery Powered
Included Components	Speaker, Charging Cable
Special Feature	Adjustable
Color	WHITE

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt for warranty claims.

© 2025 Zunate. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D7VZNBL5

More documents and user manuals: **https://manuals.plus/**