Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VONLUCE HCF-1049-NI

VONLUCE Semi Flush Mount Ceiling Light Instruction Manual

Model: HCF-1049-NI

Product Overview

The VONLUCE Semi Flush Mount Ceiling Light is designed to provide elegant and functional illumination for various indoor spaces. Featuring a brushed nickel canopy and a 2-layer gray fabric shade, this 3-light fixture accommodates E26 bulbs up to 60W, offering a versatile lighting solution that can be paired with a dimmer switch for adjustable ambiance.



Image: The VONLUCE Semi Flush Mount Ceiling Light, showcasing its gray fabric shade and brushed nickel components.

Important Safety Information

Please read all instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- **Always turn off the power supply at the circuit breaker or fuse box before beginning installation or performing any maintenance.**
- This fixture is intended for indoor use only. Do not expose to water or moisture.
- Ensure the mounting surface can support the weight of the fixture.
- Use only bulbs of the specified type and wattage (E26, up to 60W per bulb). Exceeding the maximum wattage may cause overheating.
- Consult a qualified electrician if you are unsure about the installation process or electrical wiring.
- Do not modify the fixture in any way. Any modifications may void the warranty and create safety hazards.
- Keep flammable materials away from the light fixture when in operation.

What's in the Box

Carefully unpack the contents and ensure all items are present and undamaged:

- Instruction Manual
- Mounting Hardware (screws, wire nuts, mounting bracket)
- Light Fixture Shade (2-layer gray fabric)
- Light Fixture Body (with brushed nickel canopy and E26 bases)



Image: Detailed view of the light fixture's key components: the 2-layer fabric shade, the brushed nickel canopy, and the durable E26 bulb bases.

Specifications

Feature	Detail
Brand	VONLUCE
Model Number	HCF-1049-NI

Feature	Detail
Color	Gray Shade & Nickel Finish
Material	Metal, Fabric
Product Dimensions	13"L x 13"W x 6"H
Light Fixture Form	Close to Ceiling / Semi Flush Mount
Number of Light Sources	3
Bulb Base	E26
Max Wattage (per bulb)	60 Watts
Voltage	120 Volts (AC)
Special Feature	Dimmable (with compatible bulbs and dimmer switch)
Indoor/Outdoor Usage	Indoor
Item Weight	3.16 pounds



Image: Visual representation of the light fixture's dimensions (13" wide, 10.2" high) and a selection of compatible E26 bulb types, emphasizing that bulbs are not included.

Installation Guide

Follow these steps for safe and proper installation of your ceiling light fixture. It is recommended to have two people for installation.

1. **Prepare for Installation:**
   - Turn off the electricity at the main fuse box or circuit breaker.
   - Remove the old fixture (if applicable) and its mounting hardware.
   - Ensure the junction box is securely mounted to the ceiling structure.
2. **Attach Mounting Bracket:**
   - Secure the mounting bracket (included) to the junction box using the provided screws. Ensure the bracket is firm and

stable.

3. **Wire the Fixture:**
    - Carefully connect the electrical wires:
    - Connect the bare copper ground wire from the fixture to the ground wire from the junction box (usually bare copper or green) using a wire nut.
    - Connect the white (neutral) wire from the fixture to the white (neutral) wire from the junction box using a wire nut.
    - Connect the black (live) wire from the fixture to the black (live) wire from the junction box using a wire nut.
    - Ensure all wire connections are secure and tuck them neatly into the junction box.
4. **Mount the Fixture Body:**
    - Align the fixture's canopy with the mounting screws on the mounting bracket.
    - Push the fixture body upwards and secure it with the decorative nuts or screws provided, ensuring it is flush against the ceiling.
5. **Install Bulbs:**
    - Screw three E26 base bulbs (not included) into the sockets. Do not exceed 60W per bulb.
    - If using a dimmer switch, ensure the bulbs are dimmable compatible.
6. **Attach Fabric Shade:**
    - Carefully place the 2-layer fabric shade onto the fixture, aligning it properly.
    - Secure the shade using any retaining rings or decorative caps provided.
7. **Restore Power:**
    - Turn the electricity back on at the main fuse box or circuit breaker.
    - Test the light fixture to ensure it functions correctly.

Operating Instructions

This semi flush mount ceiling light operates like a standard light fixture. Once installed and powered, it can be controlled via a wall switch.

- **On/Off Function:** Use your standard wall light switch to turn the fixture on or off.
- **Dimmable Feature:** If you have installed dimmable E26 bulbs and connected the fixture to a compatible dimmer switch (both not included), you can adjust the light intensity to create your desired ambiance. Rotate or slide the dimmer switch to increase or decrease brightness.

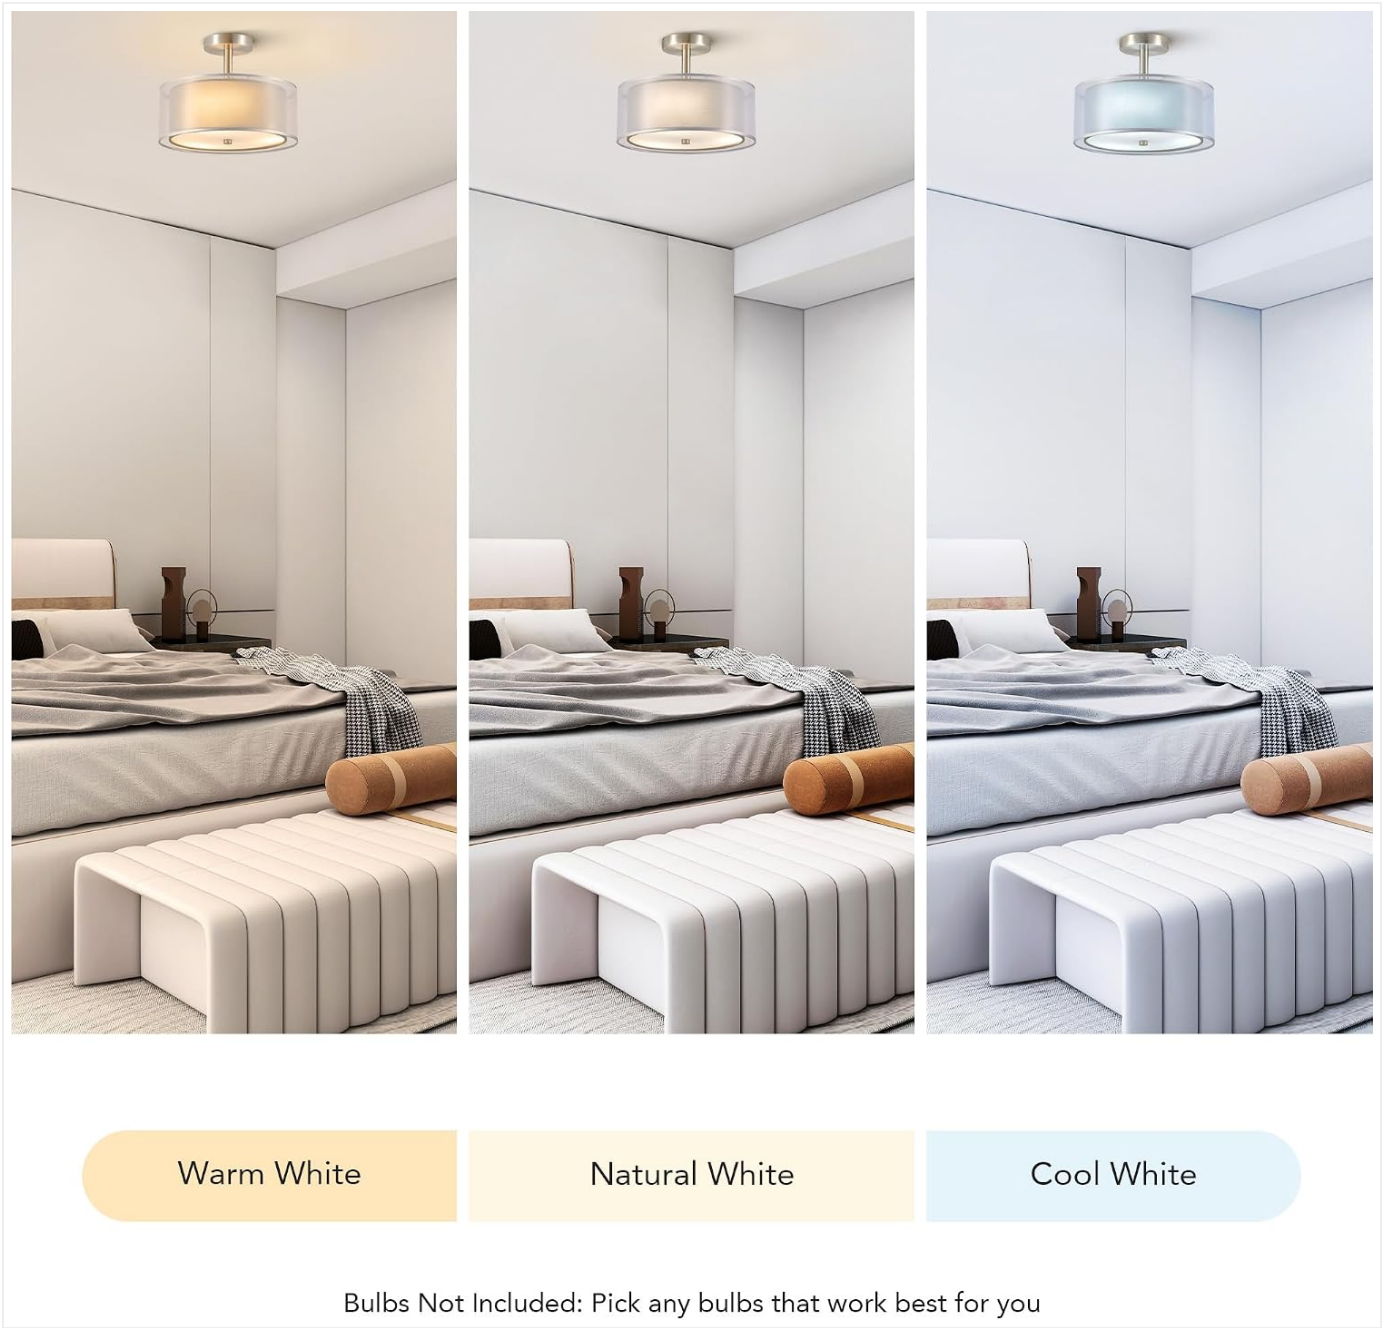


Image: The light fixture demonstrating various color temperatures (warm white, natural white, cool white) achievable with different bulb types, allowing for customized atmosphere.

Maintenance

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** Turn off the power to the fixture before cleaning. Use a soft, dry cloth to wipe down the metal finish. For the fabric shade, gently dust with a soft brush or a vacuum cleaner with a brush attachment. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or fabric.
- **Bulb Replacement:** Ensure the power is off and the bulbs have cooled before attempting to replace them. Unscrew old bulbs and screw in new E26 bulbs (max 60W).
- **Inspection:** Periodically check the fixture for any loose connections or signs of wear. If any issues are found, turn off the power and consult a qualified electrician.

Troubleshooting

If you encounter issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture Loose wiring connection Faulty bulb Faulty wall switch	Check circuit breaker/fuse. Ensure all wire nuts are secure (with power off). Replace bulb. Test wall switch or consult electrician.
Light flickers	Loose bulb Incompatible dimmer/bulb Loose wiring	Tighten bulb. Ensure dimmable bulbs are used with a compatible dimmer. Check wiring connections (with power off).
Bulbs burn out quickly	Incorrect wattage bulbs Poor quality bulbs Voltage fluctuations	Use bulbs within the specified 60W maximum. Try different brand of bulbs. Consult electrician for voltage issues.

If the problem persists after attempting these solutions, please contact VONLUCE customer support or a qualified electrician.

Warranty and Support

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or contact VONLUCE directly through their official website or the seller's contact information provided at the point of purchase. The seller for this product is VONLUCE DIRECT.
You may also visit the VONLUCE Store on Amazon for additional product information and support resources.

© 2024 VONLUCE. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D7W52HX8

More documents and user manuals: **https://manuals.plus/**