V2A DK8217

V2A Kids Digital Sports Watch DK8217 User Manual

Model: DK8217 | Brand: V2A

Introduction

The V2A Kids Digital Sports Watch (Model DK8217) is a multi-functional timepiece designed for children aged 5-13. This watch features a durable, waterproof design suitable for daily activities and includes functions such as a calendar, stopwatch, countdown timer, and LED backlight. Its robust construction is built to withstand the energetic lifestyle of young users.



Image: V2A Kids Digital Sports Watch, Purple variant.

Setup

Before first use, ensure the watch is properly set to the current time and date. The watch features several buttons for navigation and setting adjustments.

Button Functions Overview



Image: Functional Overview of Watch Buttons.

- **LIGHT Button:** Activates the LED backlight for viewing in low-light conditions.
- **MODE Button:** Cycles through different modes: Time Display, Stopwatch, Alarm, and Date.
- **START Button:** Used to start/stop functions in Stopwatch mode or adjust settings.
- **RESET Button:** Used to reset functions or confirm settings.

Setting Time and Date

1. From the normal time display, press the**MODE** button repeatedly until the time setting mode is activated (usually

indicated by flashing digits).

2. Use the **START** button to adjust the flashing digit (e.g., hours, minutes).
3. Press the **RESET** button to move to the next digit or setting (e.g., from hours to minutes, then to date).
4. Repeat steps 2 and 3 until all desired settings (time, date, day) are configured.
5. Press the **MODE** button to exit the setting mode and return to the normal time display.

Operating Instructions

Using the LED Backlight

To illuminate the watch face in dark environments, press the**LIGHT** button located on the upper left side of the watch. The backlight will activate for a few seconds.



Image: Luminous Display in a dark environment.

Using the Stopwatch

1. Press the **MODE** button until the stopwatch display appears (usually '00:00:00').
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. To resume, press **START** again.
5. To reset the stopwatch to zero, press the **RESET** button while the stopwatch is paused.

Setting and Using the Alarm

1. Press the **MODE** button until the alarm setting display appears.
2. Use the **START** button to adjust the hour, and the **RESET** button to switch between hour and minute settings.
3. Once the desired alarm time is set, press **MODE** to exit.
4. To turn the alarm on or off, press the **START** button while in alarm mode. An alarm icon will typically appear on the display when active.

Water Resistance Guidelines

The V2A Kids Digital Sports Watch features 30-meter (3 ATM) water resistance. This means it is suitable for daily use and can withstand:



Image: 30 ATM Water Resistance features.

- Rain exposure
- Accidental splashes
- Hand washing

Important: This watch is **NOT** suitable for water-related work, including showering, swimming, snorkeling, or diving. Do not press any buttons while the watch is wet or submerged, as this can compromise the water resistance seal.

Maintenance

Cleaning Your Watch

To keep your watch clean, wipe it regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials, as these can damage the watch's finish or seals.

Battery Replacement

The watch is powered by one nonstandard battery (included). When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure the water resistance seal is maintained.

General Care

- Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods.
- Keep the watch away from strong magnetic fields, which can affect its accuracy.
- Protect the watch from strong impacts or drops.

Troubleshooting

If you encounter issues with your V2A Kids Digital Sports Watch, please refer to the following common solutions:

- **Display is blank or dim:** The battery may be low or depleted. Consider replacing the battery.
- **Time is incorrect:** Re-set the time and date following the instructions in the 'Setup' section. Ensure you are in the correct AM/PM setting.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, try pressing the buttons firmly. If still unresponsive, a reset may be required (consult support if no external reset button is visible).
- **Water appears inside the watch:** This indicates a breach in the water resistance. Stop using the watch immediately and contact customer support. Do not attempt to open the watch yourself.

For issues not covered here, please contact V2A customer support.

Specifications

Detailed specifications for the V2A Kids Digital Sports Watch DK8217:



Image: Product Parameters.

Feature	Detail
Model Name	DK8217
Display Type	Digital
Movement Type	Quartz
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Band Material	Thermoplastic Polyurethane (TPU)
Case Diameter	41 Millimetres
Case Thickness	14 Millimetres

Band Width	16 Millimetres
Item Weight	34 Grams
Water Resistance Depth	30 Metres (3 ATM)
Special Features	Alarm, Night Light, Stopwatch, Time Display, Calendar
Battery	1 Nonstandard Battery (included)

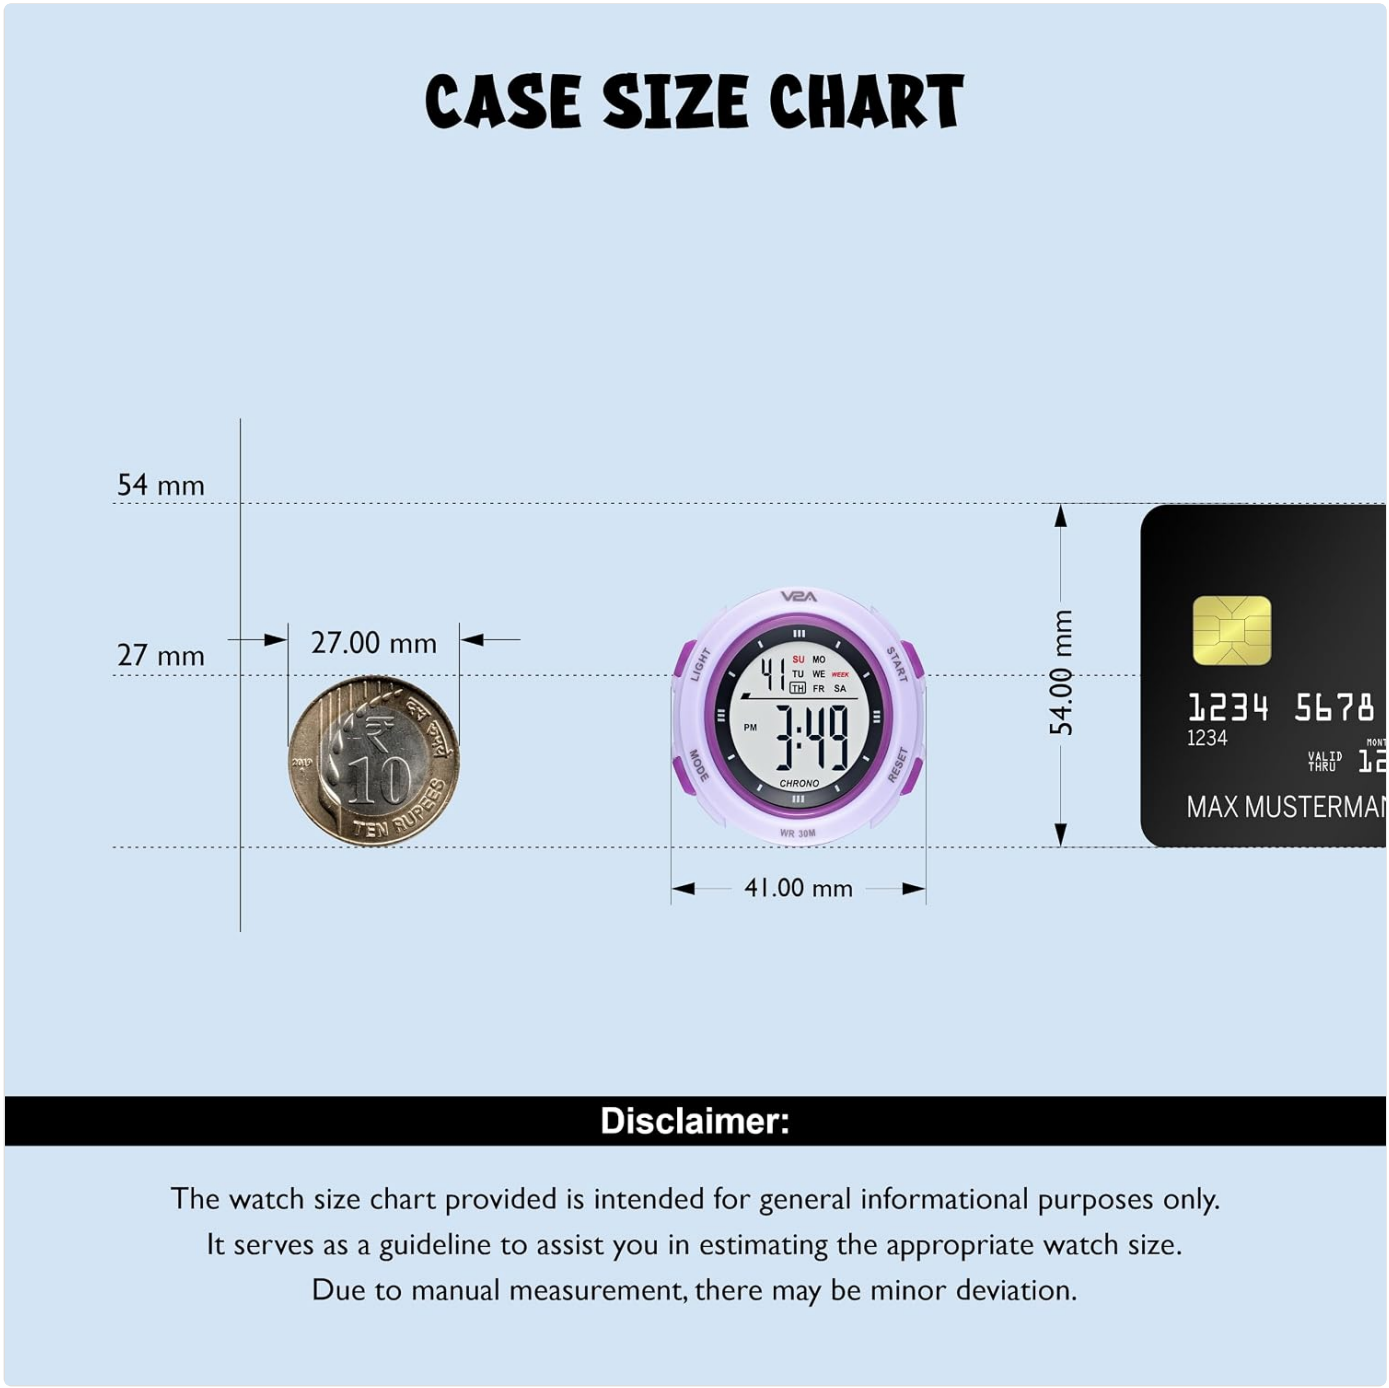


Image: Case Size Chart for reference.

Warranty

The V2A Kids Digital Sports Watch comes with a**1-Year Domestic Warranty** from manufacturing defects. Please note that the battery, plating, and waterproofing are not covered under this warranty. For warranty claims, please retain your proof of purchase.

Support

For any questions, technical assistance, or support regarding your V2A Kids Digital Sports Watch, please contact Vian International customer care:

Phone: +91-9315666060

Operating Hours: Monday - Saturday, 11:00 AM to 6:00 PM (IST)

Manufacturer: Vian International, V2A Tower, KH NO 1218, Rithala, Delhi-110085

© 2026 V2A. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

When I reset the time on my V2A DK8217 watch and follow the instructions, why does it revert to the incorrect time when I press the Mode button to save it?

If your V2A DK8217 watch is reverting to the old time after you attempt to set it, you may be missing the confirmation step or accidentally cycling through modes without finalizing the sequence. Please...

Read full answer