JJC JJC BTR-C1

JJC BTR-C1 Wireless Bluetooth Remote Control Instruction Manual

Model: JJC BTR-C1 | Brand: JJC

Introduction

This instruction manual provides detailed guidance on the setup, operation, and maintenance of your JJC BTR-C1 Wireless Bluetooth Remote Control. Designed to replace the Canon BR-E1 remote, this device offers convenient wireless control for compatible Canon EOS and PowerShot cameras, enhancing your photography and videography experience.

Product Overview

The JJC BTR-C1 is a compact and lightweight wireless remote control. It features a simple button layout for intuitive operation.



Figure 1: Front view of the JJC BTR-C1 Wireless Bluetooth Remote Control.

Parts and Controls



Figure 2: Detailed diagram showing the buttons and features of the remote control, including the Shutter Release, AF Button, Zoom Buttons (W/T), Function Switching Button (S/2S/REC), Indicator Lamp, and Battery Compartment.

- **Shutter Release Button:** Press halfway for autofocus, fully for instant shooting.
- **AF Button (AF-ON):** Activates autofocus.
- **Zoom Buttons (W/T):** Controls zoom for power zoom lenses (W for wide-angle, T for telephoto).
- **Function Switching Button:** Selects between Immediate Release (S), 2-Second Delay Release (2S), and Video Recording (REC).
- **Indicator Lamp:** Provides status feedback.
- **Battery Compartment:** Houses the CR2032 battery.
- **Lock/Unlock Switch:** Prevents accidental button presses.

Setup

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Use a coin or similar tool to twist the battery cover counter-clockwise to open.
3. Insert one CR2032 battery with the positive (+) side facing up.
4. Replace the battery cover and twist clockwise to secure it.

2. Pairing with Your Camera

Ensure your camera's Bluetooth function is enabled before attempting to pair.

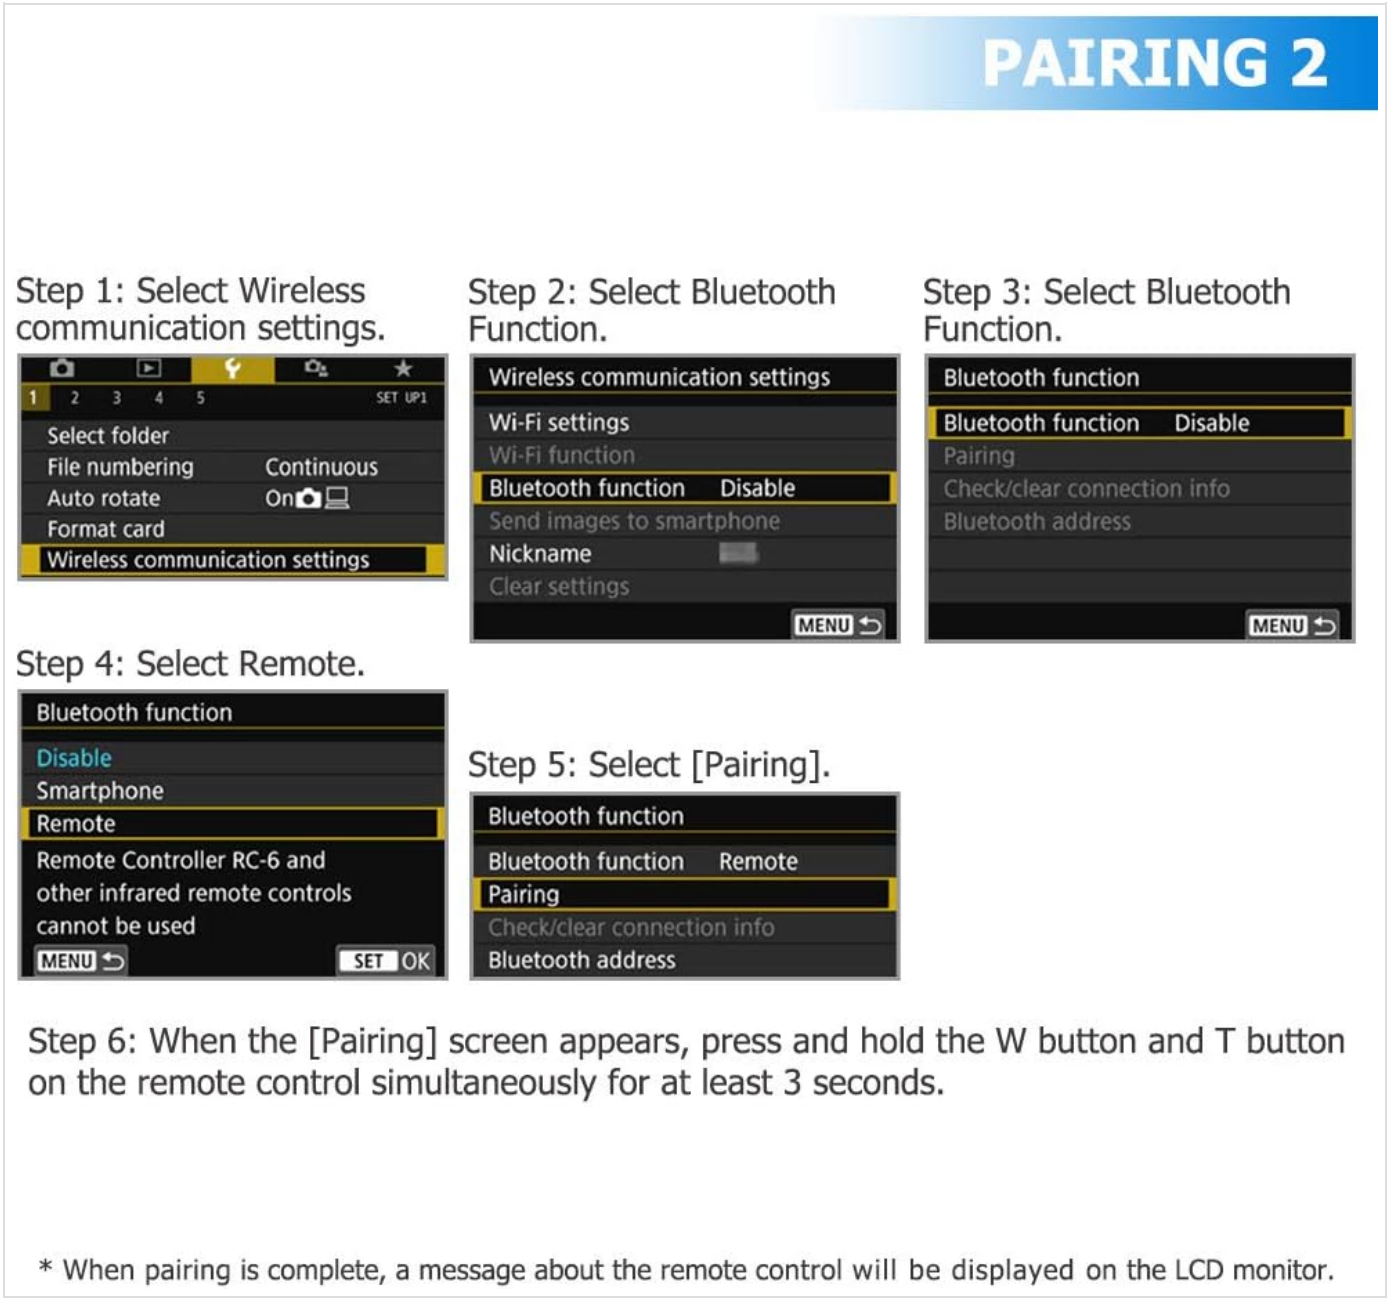


Figure 3: Camera menu navigation for Bluetooth pairing (Example 1).

1. On your camera, navigate to the **Menu**.
2. Go to **Wireless settings** (often represented by a Wi-Fi/Bluetooth icon).
3. Select **Bluetooth settings** and ensure it is enabled.
4. Choose **Connect to Wireless Remote** or **Add a device to connect to**.
5. When the camera displays "Pairing in progress" or similar, press and hold the **W** button and **T** button on the JJC BTR-C1 remote control simultaneously for at least 3 seconds.
6. The camera LCD monitor will display a message confirming successful pairing.



Figure 4: Alternative camera menu navigation for Bluetooth pairing (Example 2).

Note: Specific menu options may vary slightly depending on your camera model. Refer to your camera's user manual for precise instructions.

Operating Instructions

The JJC BTR-C1 offers multiple functions for versatile camera control.

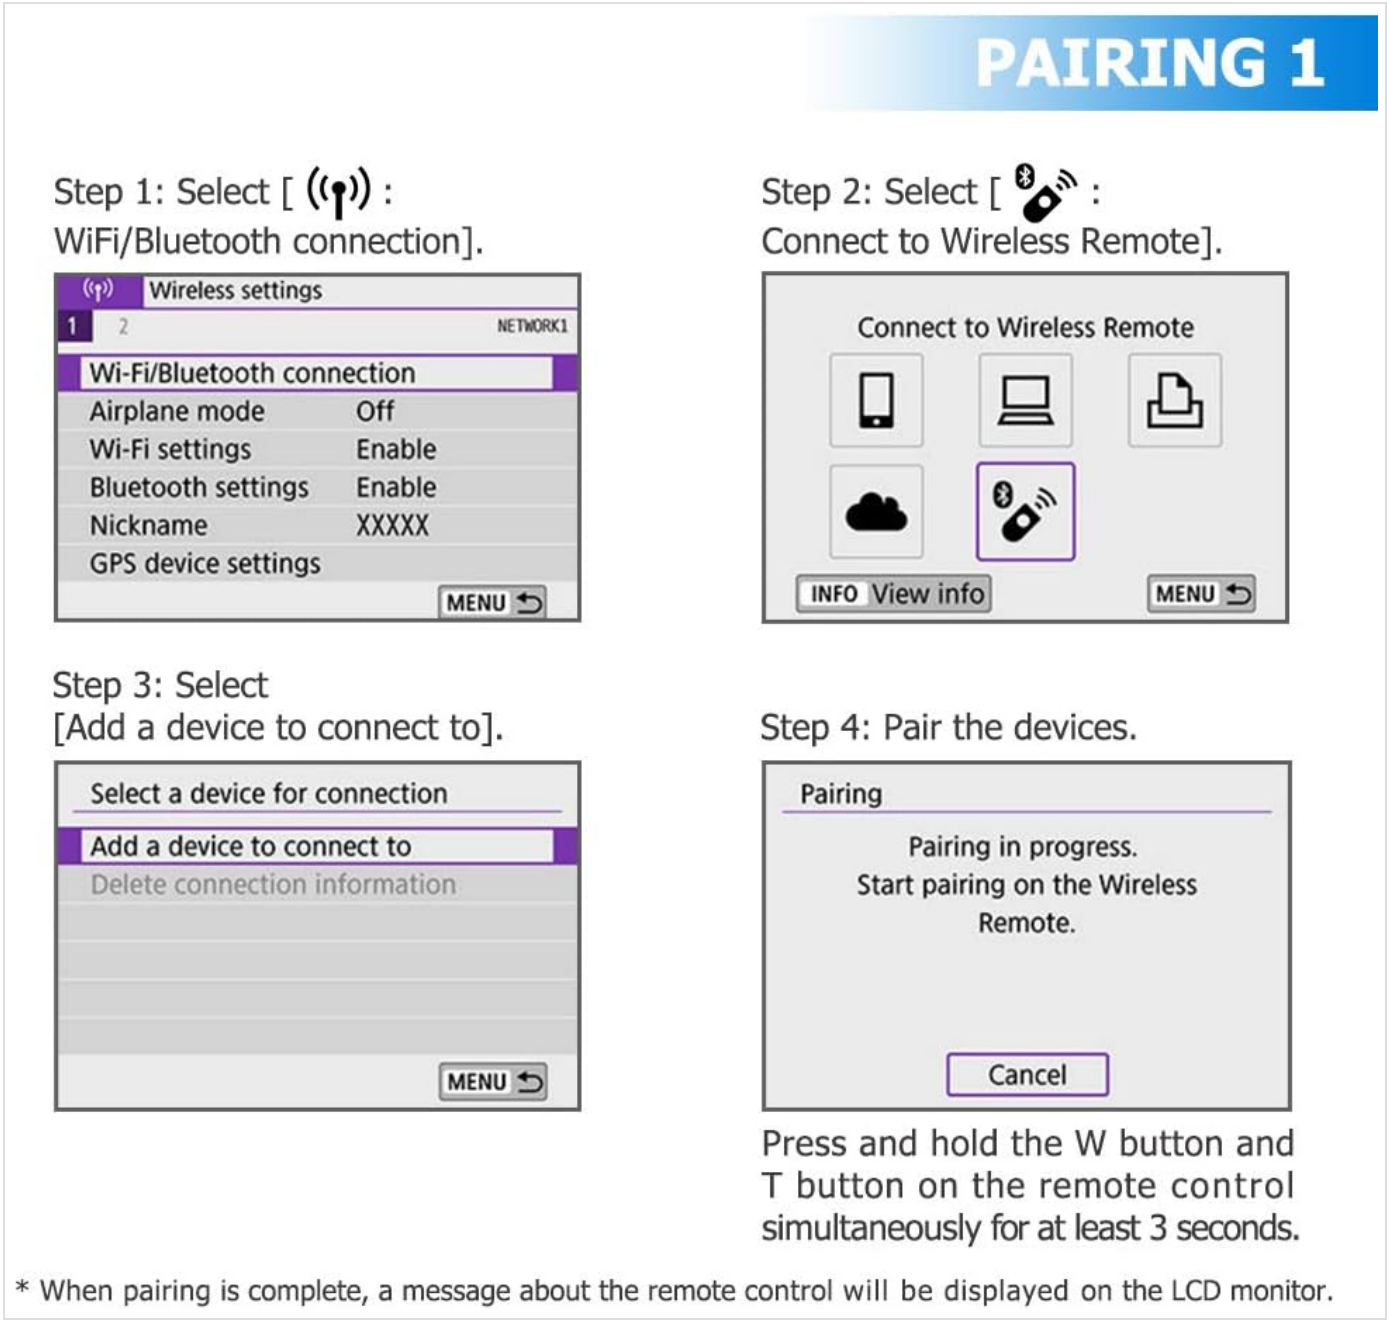


Figure 5: Visual representation of the remote control's core functions.

1. Selecting Shooting Mode

Use the **Function Switching Button** (S/2S/REC) on the side of the remote to select your desired mode:

- **S (Immediate Release):** For instant photo capture.
- **2S (2-Second Delay Release):** Provides a 2-second delay before photo capture.
- **REC (Video Recording):** For starting and stopping video recording.

2. Taking Photos

1. Set the Function Switching Button to **S** or **2S**.
2. Press the main **Shutter Release Button** halfway to activate autofocus. The camera will focus on your subject.
3. Press the **Shutter Release Button** fully to capture the photo.

3. Recording Videos

1. Set the Function Switching Button to **REC**.
2. Press the main **Shutter Release Button** to start video recording. The camera's recording indicator will illuminate.

3. Press the **Shutter Release Button** again to stop recording.

4. Autofocus (AF-ON)

The **AF-ON** button allows you to activate autofocus independently of the shutter button. This is useful for pre-focusing or for specific shooting techniques.

5. Zooming

The **W** (Wide-Angle) and **T** (Telephoto) buttons control the zoom function for compatible power zoom lenses.



Figure 6: Using the W and T buttons for zoom control.

- **W Button:** Zooms out (wide-angle).
- **T Button:** Zooms in (telephoto).

Important Notes on Zooming:

- Power zoom lenses can be zoomed directly by pressing the zoom button on the remote.
- Some lenses may require a Power Zoom Adapter (not included) to utilize the zoom buttons.
- During viewfinder shooting, the lens cannot be zoomed with the remote.

6. Lock/Unlock Switch

The lock switch on the side of the remote prevents accidental button presses. Slide it to the lock position when not in use to conserve battery and avoid unintended actions.

Compatibility

The JJC BTR-C1 Wireless Bluetooth Remote Control is compatible with various Canon cameras, replacing the Canon BR-E1 remote. Compatible models include:



Figure 7: The remote control shown with a compatible Canon camera, listing various compatible models.

- Canon EOS R5, R50, R10, R8, R7, R6 Mark II, R6, R5, M50, M6 Mark II, 6D Mark II, 90D, 77D, Rebel T8i, T7i, SL3, SL2, M200
- Canon PowerShot G5 X Mark II, G7 X Mark III, SX70 HS

Note: Compatibility may vary with future camera firmware updates. Always check the latest product information for full compatibility details.

Specifications

Model	JJC BTR-C1
Type	Wireless Bluetooth Remote Control

Operating Range	Up to 10m / 32.8ft
Battery Type	1 x CR2032 (included)
Dimensions	Approx. 1.2 x 0.5 x 3.6 inches (30.5 x 12.7 x 91.4 mm)
Weight	Approx. 1.28 ounces (36.3 g)
Special Feature	Lightweight, Multi-function control

Troubleshooting

- **Remote not responding:**
  - Ensure the remote's battery is correctly installed and has sufficient charge. Replace if necessary.
  - Check if the remote's lock switch is in the "unlock" position.
  - Verify that the remote is properly paired with your camera. Re-pair if connection is lost.
  - Ensure the camera's Bluetooth function is enabled.
- **Zoom function not working:**
  - Confirm that your lens is a power zoom lens.
  - Some lenses may require a separate Power Zoom Adapter (not included).
  - Zooming is typically not supported during viewfinder shooting.
- **Intermittent connection:**
  - Reduce the distance between the remote and the camera.
  - Ensure there are no significant obstructions between the remote and the camera.
  - Avoid environments with strong electromagnetic interference.

Safety Information

- Do not expose the remote control to water or excessive moisture.
- Avoid dropping or subjecting the device to strong impacts.
- Keep out of reach of children.
- Dispose of batteries according to local regulations.

Warranty and Support

For warranty information and technical support, please refer to the official JJC website or contact your local distributor. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question