Emaks 2pack

Instruction Manual: Upgraded 7000mAh Rechargeable Battery for AOSU Video Doorbell V8 Series

Brand: Emaks | **Model:** 2pack (HB-AX11)

1. Introduction and Overview

This manual provides comprehensive instructions for the installation, operation, and maintenance of your new Emaks Upgraded 7000mAh Rechargeable Battery, designed specifically for AOSU Video Doorbell V8 series models including V8, V8S, V8P, V8P1AX11, and V8S1AX11. This high-capacity lithium-ion battery ensures extended usage and reliable power for your doorbell, enhancing your home security system.

2. Product Features

- **Enhanced Battery Performance:** Elevate the performance of your AOSU Doorbell V8 series (V8, V8S, V8P, V8P1AX11, V8S1AX11, V8 pro) with our premium rechargeable lithium-ion battery boasting a high-capacity 7000mAh electric core. Say goodbye to frequent recharges and enjoy extended usage, ensuring a reliable power backup for your doorbell.
- **Perfect Compatibility:** Tailored specifically for AOSU Doorbell V8 series, our rechargeable battery guarantees seamless compatibility, providing uninterrupted power for your device. With a 7000mAh lithium-ion capacity, double your battery life for continuous security monitoring.
- **Effortless Installation:** Easily replace your current AOSU Doorbell V8 series battery with our model using the included Doorbell Key Tool, saving you time and effort.
- **Flexible Charging Options:** Enjoy the convenience of recharging our battery using various USB port sources such as computers, sockets, mobile power banks, and more at 5V. Stay informed with the LED indicator, offering real-time updates on the charging status for added convenience and preparedness.
- **Outstanding Customer Service:** Count on EMAKS for exceptional customer support around the clock. We'll promptly assist you. Your satisfaction is our utmost priority.

3. Package Contents

Please verify that all items are present and in good condition upon opening the package.

- Emaks 7000mAh Rechargeable Battery (2-pack)
- USB-C Charging Cable
- Installation Kit (Doorbell Key Tool, small screws)



Figure 3.1: Package contents including batteries, USB-C cables, and installation tools.

4. Setup and Installation

Follow these steps to replace the battery in your AOSU Video Doorbell V8 series. No complex disassembly is required.

1. Locate the battery compartment on your AOSU Video Doorbell.
2. Use the provided Doorbell Key Tool to open the battery compartment or release the existing battery.
3. Carefully remove the old battery.
4. Insert the new Emaks 7000mAh rechargeable battery into the compartment, ensuring proper orientation and connection.
5. Close the battery compartment securely.
6. Power on your doorbell to confirm successful installation.



Figure 4.1: Step-by-step battery replacement process for the AOSU Doorbell.



Figure 4.2: Compatibility with AOSU Doorbell V8S and V8P models.

Your browser does not support the video tag.

Video 4.1: Demonstration of unboxing and battery installation for the AOSU Video Doorbell V8 series.

5. Operating Instructions: Charging

To charge your Emaks 7000mAh battery, use the provided USB-C charging cable. The battery can be charged via various 5V USB power sources, including:

- Computer USB ports
- Wall adapters (USB chargers)
- Mobile power banks
- Other 5V USB power sources

An LED indicator on the battery or doorbell (depending on the model) will provide real-time updates on the charging status. Ensure the battery is fully charged before initial use for optimal performance.

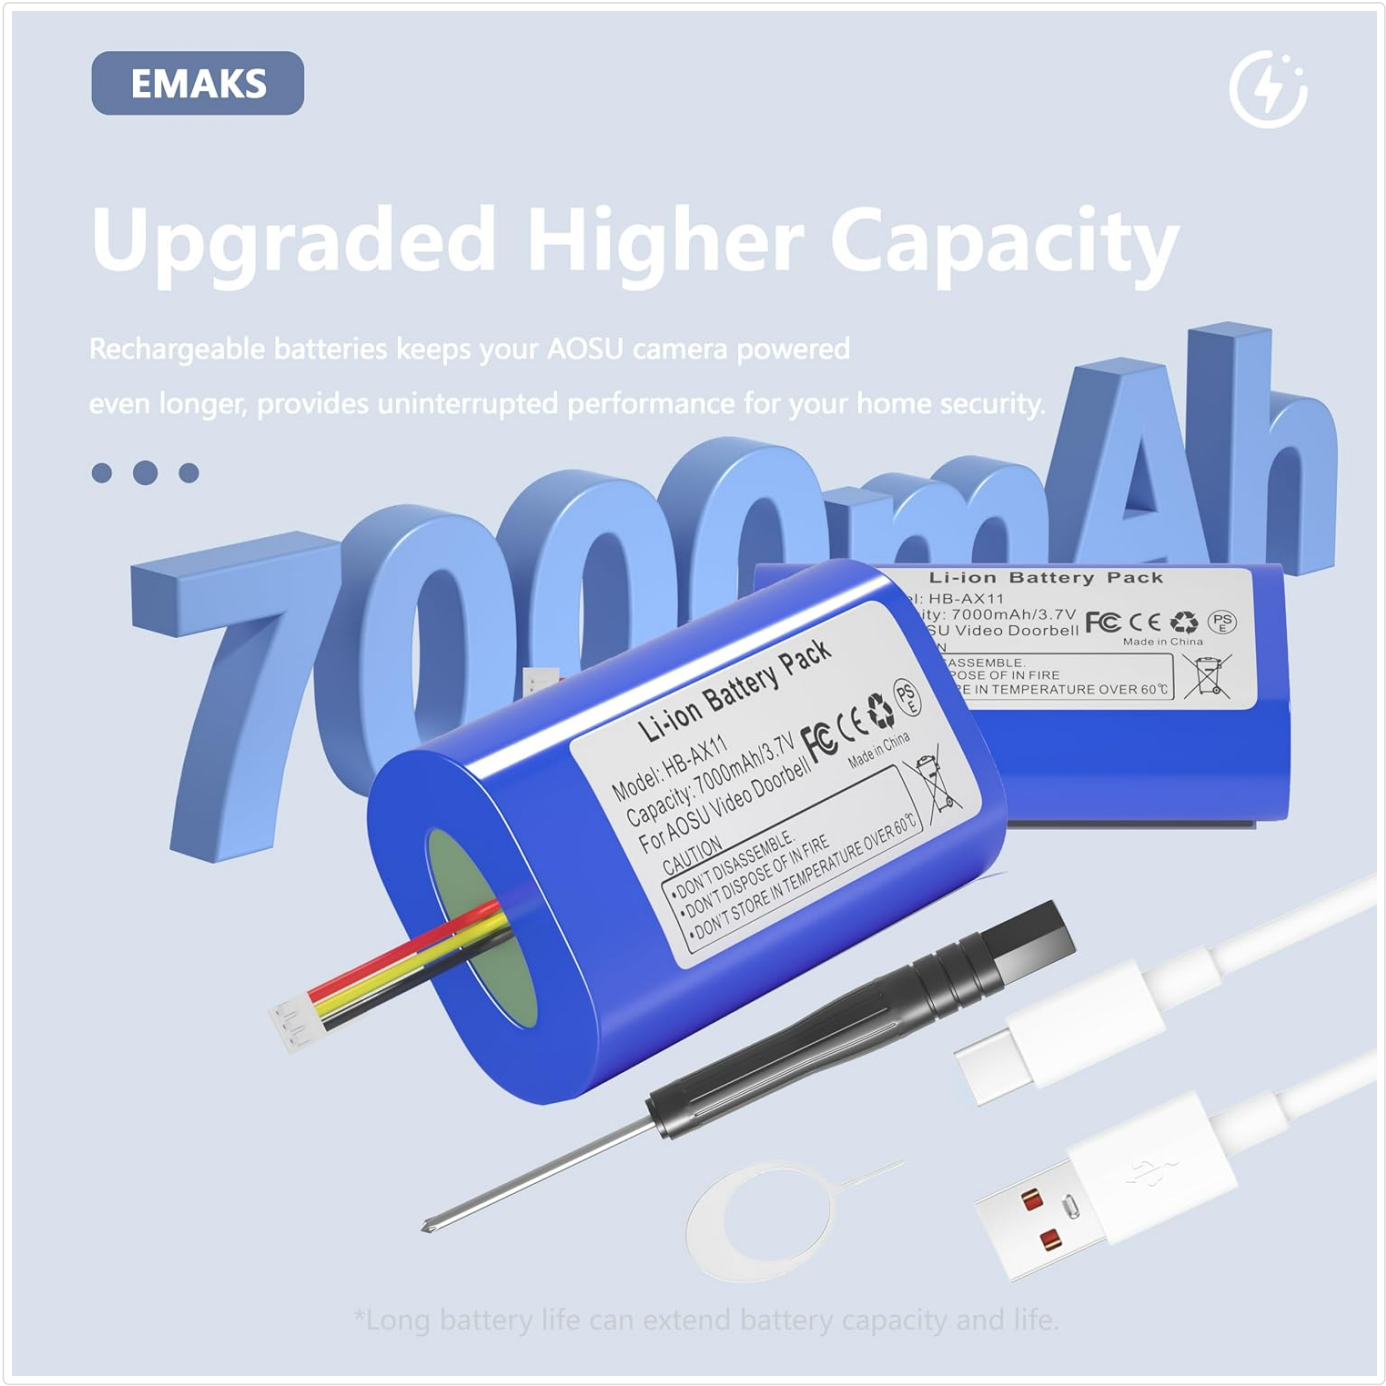


Figure 5.1: The 7000mAh high-capacity battery and charging accessories.

6. Maintenance

To ensure the longevity and optimal performance of your Emaks rechargeable battery, please observe the following maintenance guidelines:

- **Storage:** Store the battery in a cool, dry place away from direct sunlight and extreme temperatures. Avoid storing in temperatures over 60°C (140°F).
- **Charging:** Always use compatible charging cables and power sources (5V USB). Avoid overcharging or deep discharging the battery.
- **Handling:** Do not disassemble, puncture, or expose the battery to water or fire. Handle with care to prevent physical damage.
- **Cleaning:** If necessary, gently wipe the battery and its contacts with a dry, soft cloth. Do not use liquid cleaners.

7. Troubleshooting

If you encounter issues with your Emaks rechargeable battery, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Battery not charging	Faulty cable or power source; improper connection.	Try a different USB-C cable or power adapter. Ensure the cable is securely connected to both the battery and the power source.
Doorbell not powering on after battery replacement	Battery not properly seated; battery not charged.	Re-seat the battery, ensuring it is correctly inserted and connected. Charge the battery fully before attempting to power on the doorbell.
Short battery life	High usage; extreme temperatures.	Battery life can vary based on doorbell usage and environmental conditions. Ensure the doorbell is operating within recommended temperature ranges.

If the issue persists after trying these solutions, please contact Emaks Customer Service for further assistance.

8. Specifications

Model Number:
HB-AX11 (2pack)

Battery Cell Composition:
Lithium Ion

Battery Capacity:
7000 Milliamp Hours (mAh)

Voltage:
3.7V

Compatibility:
AOSU Video Doorbell V8, V8S, V8P, V8P1AX11, V8S1AX11, V8 pro

Package Dimensions:
5.39 x 3.23 x 1.42 inches

Item Weight:
9.2 ounces

Manufacturer:
Dongguan jiataiyuan electronics Co.,Ltd

9. Warranty and Support

Emaks is committed to providing high-quality products and excellent customer service. For any inquiries, technical support, or warranty claims, please contact Emaks Customer Service. Your satisfaction is our utmost priority.
You can find more information and contact details on the official Emaks brand store: Emaks Brand Store.

© 2024 Emaks. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question