Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PILSAMAS J6

PILSAMAS Magnetic Golf Speaker (Model J6) User Manual

Introduction

Thank you for choosing the PILSAMAS Magnetic Golf Speaker, Model J6. This portable Bluetooth speaker is designed for outdoor use, featuring a strong magnetic attachment, IPX7 waterproofing, and powerful 40W stereo sound. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

What's in the Box

- PILSAMAS Magnetic Golf Speaker
- Power Cable
- Quick Start Guide

Product Features

- **Strong Magnetic Attachment:** Two powerful magnets for secure mounting on golf carts or other metal surfaces.
- **40W Superior Sound:** Dual drivers and a passive radiator deliver powerful stereo sound with deep bass.
- **IPX7 Waterproof:** Designed to withstand splashes, rain, and submersion up to 1 meter for 30 minutes.
- **Durable & Rugged Body:** Encased in rubber and metal for shockproof, dustproof, and impact-resistant protection.
- **Bluetooth 5.3:** Provides stable, long-range wireless connectivity.
- **TWS Mode:** Pair two speakers wirelessly for an 80W immersive stereo sound experience.
- **Long Battery Life:** Built-in 6600mAh battery offers up to 30 hours of music playback (at 50% volume).
- **Multiple Playback Modes:** Supports Bluetooth, TF card, and AUX wired input.
- **Portable Design:** Features a zinc alloy handle and a detachable strap for easy carrying.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge typically takes approximately 3 hours.

2. Magnetic Installation

The speaker features two strong magnets for secure attachment. Simply place the speaker on a metal surface, such as a golf cart frame, where the magnets can firmly adhere.



Image: The PILSAMAS speaker securely attached to the metal frame of a golf cart using its strong magnets.

3. Bluetooth Pairing

1. Power on the speaker by pressing and holding the Power button (⏻) until the Bluetooth indicator light flashes blue.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "PILSAMAS J6" from the list of devices.
4. Once connected, the Bluetooth indicator light will turn solid blue.

4. TWS (True Wireless Stereo) Pairing

To achieve an immersive stereo sound experience, you can pair two PILSAMAS J6 speakers together.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button (⏻). The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the second speaker.
4. Once paired, you will hear an audible confirmation, and the Bluetooth indicator lights on both speakers will turn solid blue.
5. Now, connect your device to the primary speaker via Bluetooth as described in step 3.



Image: Two PILSAMAS J6 speakers are shown mounted on a golf cart, illustrating the True Wireless Stereo (TWS) pairing feature for enhanced sound.

Operating Instructions

1. Controls Overview

Familiarize yourself with the speaker's control buttons:

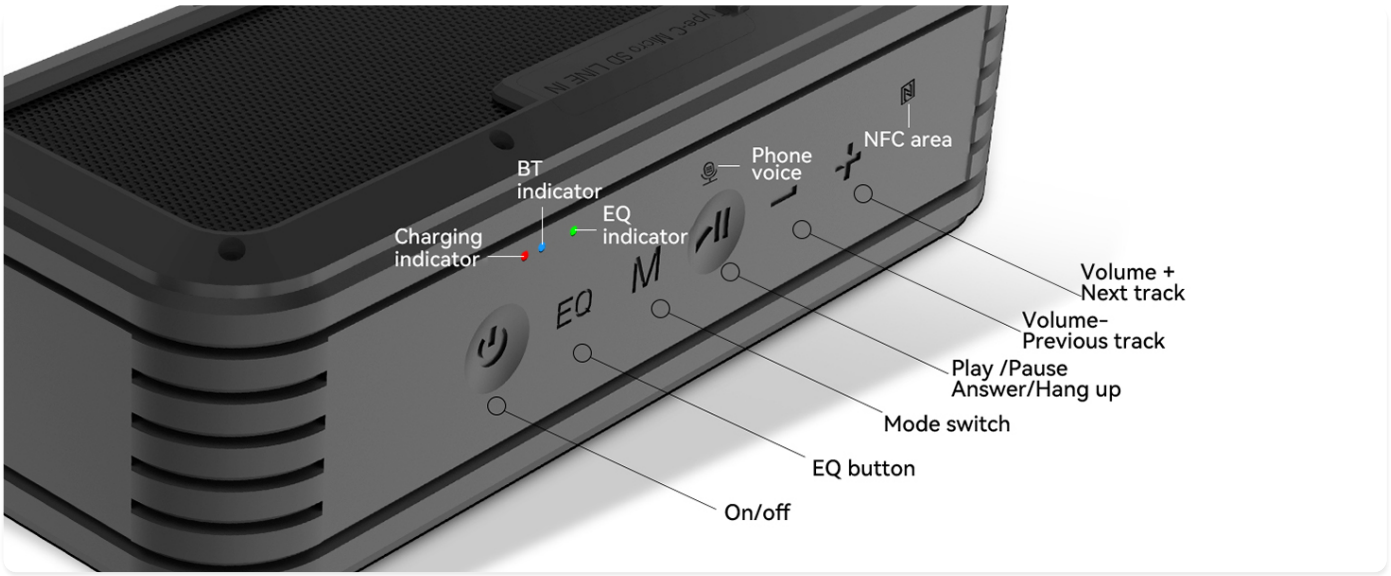


Image: A detailed diagram showing the layout and functions of the speaker's control buttons, including Power, EQ, Mode, Play/Pause, Volume, and Track controls.

- **Power Button (U):** Press and hold to power on/off. Double-press for TWS pairing.
- **EQ Button:** Press to cycle through EQ presets.
- **Mode Button (M):** Press to switch between Bluetooth, TF card, and AUX input modes.
- **Play/Pause Button (⏯):** Press to play or pause music. Press to answer/end calls.
- **Volume Down (-) / Previous Track:** Press to decrease volume. Press and hold for previous track.
- **Volume Up (+) / Next Track:** Press to increase volume. Press and hold for next track.

2. EQ Presets

The speaker offers three equalizer presets to optimize your listening experience for different music genres. Press the EQ

button to switch between them:

- **Clear Sound (No Light):** Balanced audio for general listening.
- **Heavy Bass (Green Light):** Enhanced bass for a more impactful sound.
- **Light Music (White Light):** Optimized for vocal and acoustic tracks.



Image: The speaker's control panel highlighting the EQ button and illustrating the three distinct equalizer audio modes: Clear Sound, Heavy Bass, and Light Music.

3. Multiple Music Playback Modes

In addition to Bluetooth, the speaker supports playback from TF cards and AUX input. Use the Mode (M) button to cycle through these options.

- **Bluetooth Mode:** Connect wirelessly to your device.
- **TF Card Mode:** Insert a TF card with music files into the designated slot.
- **AUX Mode:** Connect an audio device using a 3.5mm AUX cable (not included) to the AUX port.

Maintenance

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Waterproofing:** Ensure the charging port cover is securely closed to maintain IPX7 waterproof rating. Do not intentionally submerge the speaker for extended periods or beyond specified depth.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for long periods.



Image: The PILSAMAS speaker is shown on wet grass with water droplets, demonstrating its IPX7 waterproof capability for outdoor use.

Troubleshooting

Problem	Possible Cause	Solution
Speaker won't turn on	Low battery; Power button not pressed correctly	Charge the speaker; Press and hold the Power button for 3-5 seconds.
Cannot pair via Bluetooth	Speaker not in pairing mode; Device Bluetooth off; Speaker already connected to another device; Too far from device	Ensure speaker is in pairing mode (flashing blue light); Turn on Bluetooth on your device; Disconnect from other devices; Move speaker closer to your device (within 10 meters).
No sound	Volume too low; Incorrect input mode; Device not playing audio	Increase speaker and device volume; Press 'M' button to select correct input mode (BT, TF, AUX); Ensure audio is playing on your device.
Poor sound quality	Low battery; Obstructions between speaker and device; Speaker placed on an unsuitable surface	Charge the speaker; Remove obstructions; Place speaker on a stable, resonant surface.
TWS pairing fails	Speakers too far apart; One speaker already connected to a device	Ensure speakers are close to each other; Disconnect both speakers from any Bluetooth devices before initiating TWS pairing.

Specifications

Feature	Detail
Brand	PILSAMAS
Model Number	J6

Feature	Detail
Speaker Output Power	40 Watts
Audio Output Mode	Stereo
Mounting Type	Magnetic
Waterproof Rating	IPX7
Wireless Technology	Bluetooth 5.3
Battery Capacity	6600 mAh
Battery Life (Average)	Up to 30 Hours (at 50% volume)
Battery Charge Time	3 Hours
Item Weight	1.5 Pounds
Compatible Devices	Android, iPhone, iPad, PC
Playback Modes	Bluetooth, TF Card, AUX

Warranty Information

PILSAMAS products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official PILSAMAS website. Keep your purchase receipt as proof of purchase for any warranty claims.

Support

If you encounter any issues or have questions regarding your PILSAMAS Magnetic Golf Speaker (Model J6) that are not covered in this manual, please contact PILSAMAS customer support. Contact information can typically be found on the product packaging, the official PILSAMAS website, or through your retailer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D8JF3QXQ

More documents and user manuals: **https://manuals.plus/**