Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

pangootek P100S

pangootek P100S Portable Power Bank Station 99.9Wh User Manual

Introduction

This manual provides detailed instructions for the safe and efficient use of your pangootek P100S Portable Power Bank Station. This high-capacity 99.9Wh power bank is designed to provide reliable power for various devices, making it suitable for home emergencies, outdoor activities, and travel. Please read this manual thoroughly before operation and retain it for future reference.

Product Overview

The pangootek P100S is a versatile portable power solution featuring a 99.9Wh capacity, multiple output ports, and a built-in flashlight. It is designed for convenience and reliability.

Key Features:

- **High-Capacity 99.9Wh:** Powers most phones 7-8 times and laptops 3-4 times.
- **PD 22.5W Rapid Charging:** Charges phones to 60% in approximately 30 minutes.
- **7 Outputs & 3 Inputs:** Allows simultaneous charging of up to 7 devices. Includes built-in Type-C and Lightning cables.
- **Intelligent LCD Digital Display:** Shows accurate remaining battery percentage.
- **Built-in Flashlight:** Features 4 modes (Strong, Soft, Strobe, SOS) for emergency use.
- **Safety Protections:** Includes over-voltage, over-power, over-charge, over-discharge, short-circuit, and high-temperature protection.

What's Included:

- 1x pangootek P100S Portable Power Bank Station (99.9Wh)
- 1x Charging Cable
- 1x User Manual (this document)

Setup

Before first use, fully charge your pangootek P100S Portable Power Bank Station.

1. **Unpack:** Carefully remove the power bank and all accessories from the packaging.
2. **Initial Charge:** Connect the provided charging cable to one of the input ports (Micro USB, Lightning, or Type-C) on the power bank and plug the other end into a suitable power adapter (not included) or a USB wall charger.
3. **Monitor Charging:** The LCD display will show the charging progress. The device is fully charged when the display shows 100%.



Image: The pangootek P100S Portable Power Bank Station connected to a wall adapter for recharging. The LCD screen shows the charging percentage.



Image: Close-up view of the power bank's input ports, including Micro USB, Lightning, and Type-C. Note: The built-in cables are for output only and cannot recharge the power bank.

Operating Instructions

Powering On/Off:

To turn the power bank on or off, press and hold the power button located on the device until the LCD screen illuminates or turns off.

Charging Devices:

The power bank offers multiple output options for charging various devices.

1. **Connect Device:** Use the appropriate cable to connect your device to one of the available output ports on the power bank.
2. **Select Port:** The power bank features USB-A ports, a PD 22.5W USB-C port, and built-in Type-C and Lightning cables. Choose the port compatible with your device for optimal charging speed.
3. **Monitor Charging:** The LCD display will show the remaining battery level of the power bank. Your device's screen will indicate its charging status.



Image: The power bank actively charging a laptop via its USB-C port and a smartphone using its built-in Lightning cable. The display shows 90% battery.



Image: The power bank connected to and charging multiple devices, including phones and tablets, demonstrating its multi-output capability.



Image: The power bank charging a Nintendo Switch and a tablet, highlighting its versatility for various electronic devices.

Flashlight Operation

The built-in flashlight provides illumination for various situations, including emergencies.

1. **Activate:** Double-click the flashlight button to turn the flashlight on.
2. **Change Modes:** Once the flashlight is on, press the button once to cycle through the 4 available modes: Strong, Soft, Strobe, and SOS.
3. **Deactivate:** Double-click the flashlight button again to turn the flashlight off.



Image: Visual representation of the four flashlight modes: Strong, Soft, Strobe, and SOS, with the power bank's flashlight illuminated.

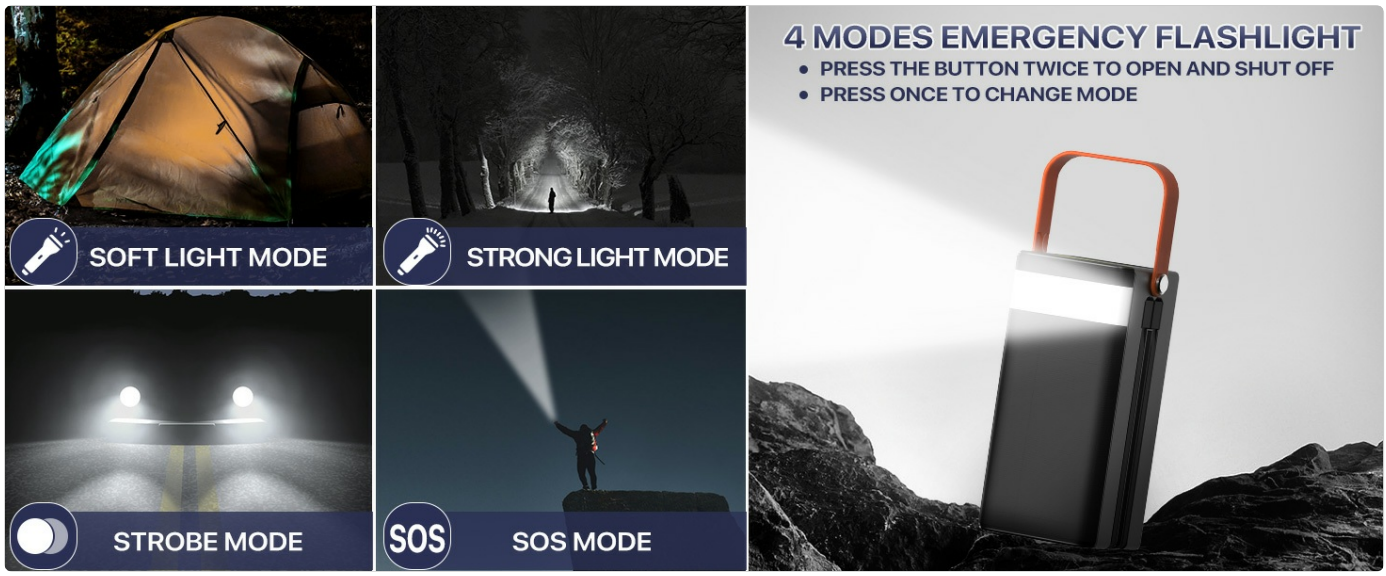


Image: The power bank's flashlight being used in different outdoor and emergency settings, showcasing its utility.

Safety Information

To ensure safe operation and prolong the lifespan of your power bank, please adhere to the following safety guidelines:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping, puncturing, or disassembling the power bank.
- Keep out of reach of children.
- Use only compatible charging cables and adapters.
- The power bank is equipped with multiple protection features:
  - Over-voltage protection
  - Over-power protection
  - Over-charge protection
  - Over-discharge protection
  - Short-circuit protection
  - High-temperature protection
- Do not attempt to recharge the power bank through multiple input ports simultaneously.



Image: The power bank with an airplane icon, indicating it is safe for air travel due to its 99.9Wh capacity.



Image: Icons representing the safety features of the power bank, including over-voltage, over-power, over-charge, over-discharge, short-circuit, and high-temperature protection.

Specifications

Feature	Detail
Brand	pangootek
Model Name	P100S
Wattage	99.9 Watt-hours
Power Source	Battery Powered
Item Weight	1.46 Pounds
Total Power Outlets	7
Item Dimensions (L x W x H)	2.84"L x 2.6"W x 5.87"H
Special Features	99.9Wh Portable Power Station, Fast Charging PD 22.5W, Portable Charger for Laptop, with built-in Type-C and Lightning output cables

Troubleshooting

- **Device not charging:**
  - Ensure the power bank is sufficiently charged. Check the LCD display for battery percentage.
  - Verify that the charging cable is securely connected to both the power bank and your device.
  - Try a different charging cable or port on the power bank.
  - Confirm your device is compatible with the power bank's output specifications.
- **Power bank not charging:**

- Ensure the charging cable is securely connected to the power bank's input port and the power source.
- Try a different wall adapter or USB port.
- Verify the power source is active.

- **Flashlight not working:**
  - Double-click the flashlight button to activate it.
  - Ensure the power bank has sufficient charge.

- **LCD display not working:**
  - Press the power button briefly to wake the display.
  - If the display remains off, the power bank may be fully discharged or require a reset (try connecting it to a charger).

Warranty and Support

The pangootek P100S Portable Power Bank Station comes with a**1-Year Warranty** from the date of purchase.
For any issues, questions, or support needs, please contact pangootek customer service. We aim to respond to all inquiries within 24 hours.
Please refer to your purchase documentation for specific contact details or visit the official pangootek website.

Product Videos

Your browser does not support the video tag.

Video: An official product video from pangoo-US demonstrating the features and usage of the Pangootek R300 Portable Power Station, including charging various devices and its portability.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D8W48QJF

More documents and user manuals: **https://manuals.plus/**