Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FITE ON USB Charger Cable Cord

FITE ON USB Charger Cable Cord Instruction Manual

For MOSPRO, Nicefeel, Zerhunt, McNaval, and Cremax Cordless Water Flossers (Models FC159, FC1591, FC2630, FC2631, FC156, FC152)

Introduction

This manual provides instructions for the safe and effective use of your FITE ON USB Charger Cable Cord. Please read this manual thoroughly before use and retain it for future reference.

Important Safety Instructions

- Do not expose the cable to water or excessive moisture.
- Do not attempt to disassemble or modify the cable.
- Keep out of reach of children.
- Use only with compatible devices as specified in this manual.
- Disconnect the cable from the power source when not in use.
- If the cable is damaged, discontinue use immediately.

Product Overview

The FITE ON USB Charger Cable Cord consists of a standard USB-A connector on one end and a two-prong charging connector on the other, designed for specific water flossers.



This image displays the FITE ON USB Charger Cable Cord, showing the USB-A plug and the two-prong charging connector, with the coiled black cable in between.

Key Features

- **Robust Casing:** Designed for durability.
- **Fastener Tape:** For organized storage.
- **Longer Wire:** Provides extended reach.
- **High Quality Wire:** Durable construction with internal protection against over-temperature, over-voltage, over-current, and over-circuit conditions.

Adapter Details



01

Robust Casing

02

Fastener Tape





03

Longer Wire

This image illustrates the key features of the charger cable, highlighting the robust casing of the connectors, the included fastener tape for cable management, and the longer wire design.



This image shows a cross-section of the cable, emphasizing its high-quality wire construction and listing protection features such as over-temperature, over-voltage, over-current, and over-circuit protection. It also displays the cULus LISTED certification mark.

Setup

Connecting the Charger Cable

1. Identify the charging port on your compatible water flosser. This is typically a two-hole port.
2. Insert the two-prong connector of the FITE ON USB Charger Cable into the charging port of your water flosser. Ensure a secure fit.
3. Connect the USB-A end of the cable to a suitable 5V USB power source. This can be a USB wall adapter, power bank, car charger, or computer USB port.



This image demonstrates how to connect the USB charger cable. It shows the USB-A end connecting to various 5V power sources (adapter, power bank, car charger, computer) and the two-prong end plugging into the charging port of a water flosser.

Operating Instructions

Charging Your Device

Once connected to a power source, your water flosser should begin charging. Refer to your water flosser's instruction manual for specific charging indicators (e.g., LED lights).
The cable is designed for efficient power transfer to ensure your device charges reliably.

Compatibility


Compatible Devices

This FITE ON USB Charger Cable Cord is compatible with the following cordless water flosser models:

- MOSPRO Water Flosser

- Nicefeel Water Flosser
- Zerhunt Water Flosser
- McNaval Water Flosser
- Cremax Water Flosser
- Specific models: FC159, FC1591, FC2630, FC2631, FC156, FC152

Please verify your device's charging port and model number before use to ensure compatibility.

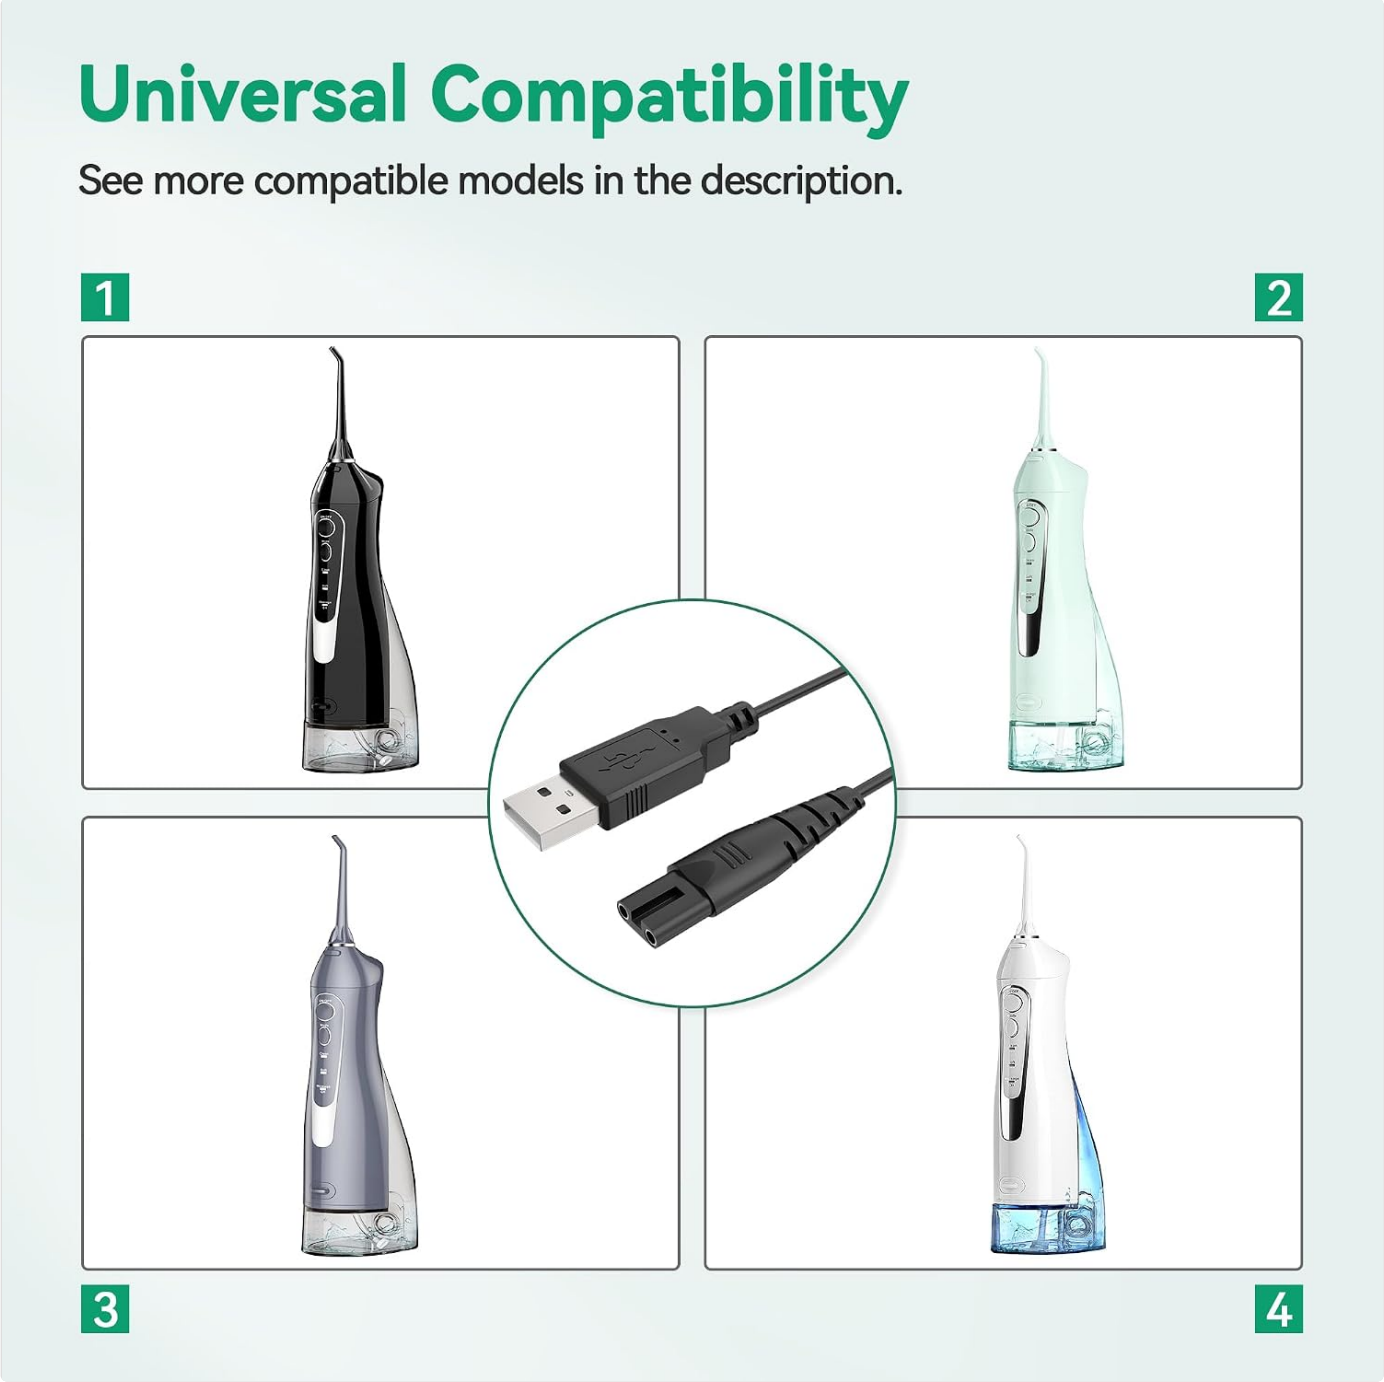

This image displays four different models of water flossers, illustrating the universal compatibility of the FITE ON USB charger cable with various brands and designs of oral irrigators.

Maintenance and Care

Care and Storage

- Clean the cable with a dry, soft cloth. Do not use liquid cleaners.

- Avoid bending the cable sharply or placing heavy objects on it.
- Store the cable in a cool, dry place when not in use. Use the fastener tape to keep it neatly coiled.
- Regularly inspect the cable for any signs of damage, such as frayed wires or bent connectors.

Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Device not charging	Cable not fully connected	Ensure both ends of the cable are securely plugged in.
Device not charging	Power source issue	Try a different USB power adapter or port.
Device not charging	Incompatible device	Verify your water flosser model is listed as compatible.
Cable appears damaged	Physical stress or wear	Discontinue use immediately and replace the cable.

If issues persist, contact customer support.

Specifications

Technical Specifications

- **Input Voltage:** 100-240VAC, 50/60Hz (from power source)
- **Output:** 5V (standard USB output)
- **Color:** Black
- **Connector Type:** USB-A to 2-prong charging connector
- **Protection Features:** Over-Voltage Protection (OVP), Over-Current Protection (OCP), Short-Circuit Protection (SCP), Over-Temperature Protection

Warranty and Support

Warranty Information

FITE ON products are designed for reliability. For warranty details or technical support, please refer to the FITE ON official website or contact your retailer.
For further assistance, please visit: FITE ON Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D8XLB3J8

More documents and user manuals: **https://manuals.plus/**